
SECONDARY SHAFT COMPONENT DISASSEMBLY

id051500169100

Note

- The thrust washer cannot be removed from the secondary shaft.
- If the secondary shaft is replaced, it is necessary to assemble the thrust washer to the secondary shaft.

1. Disassemble the secondary shaft component in the order shown in the figure.

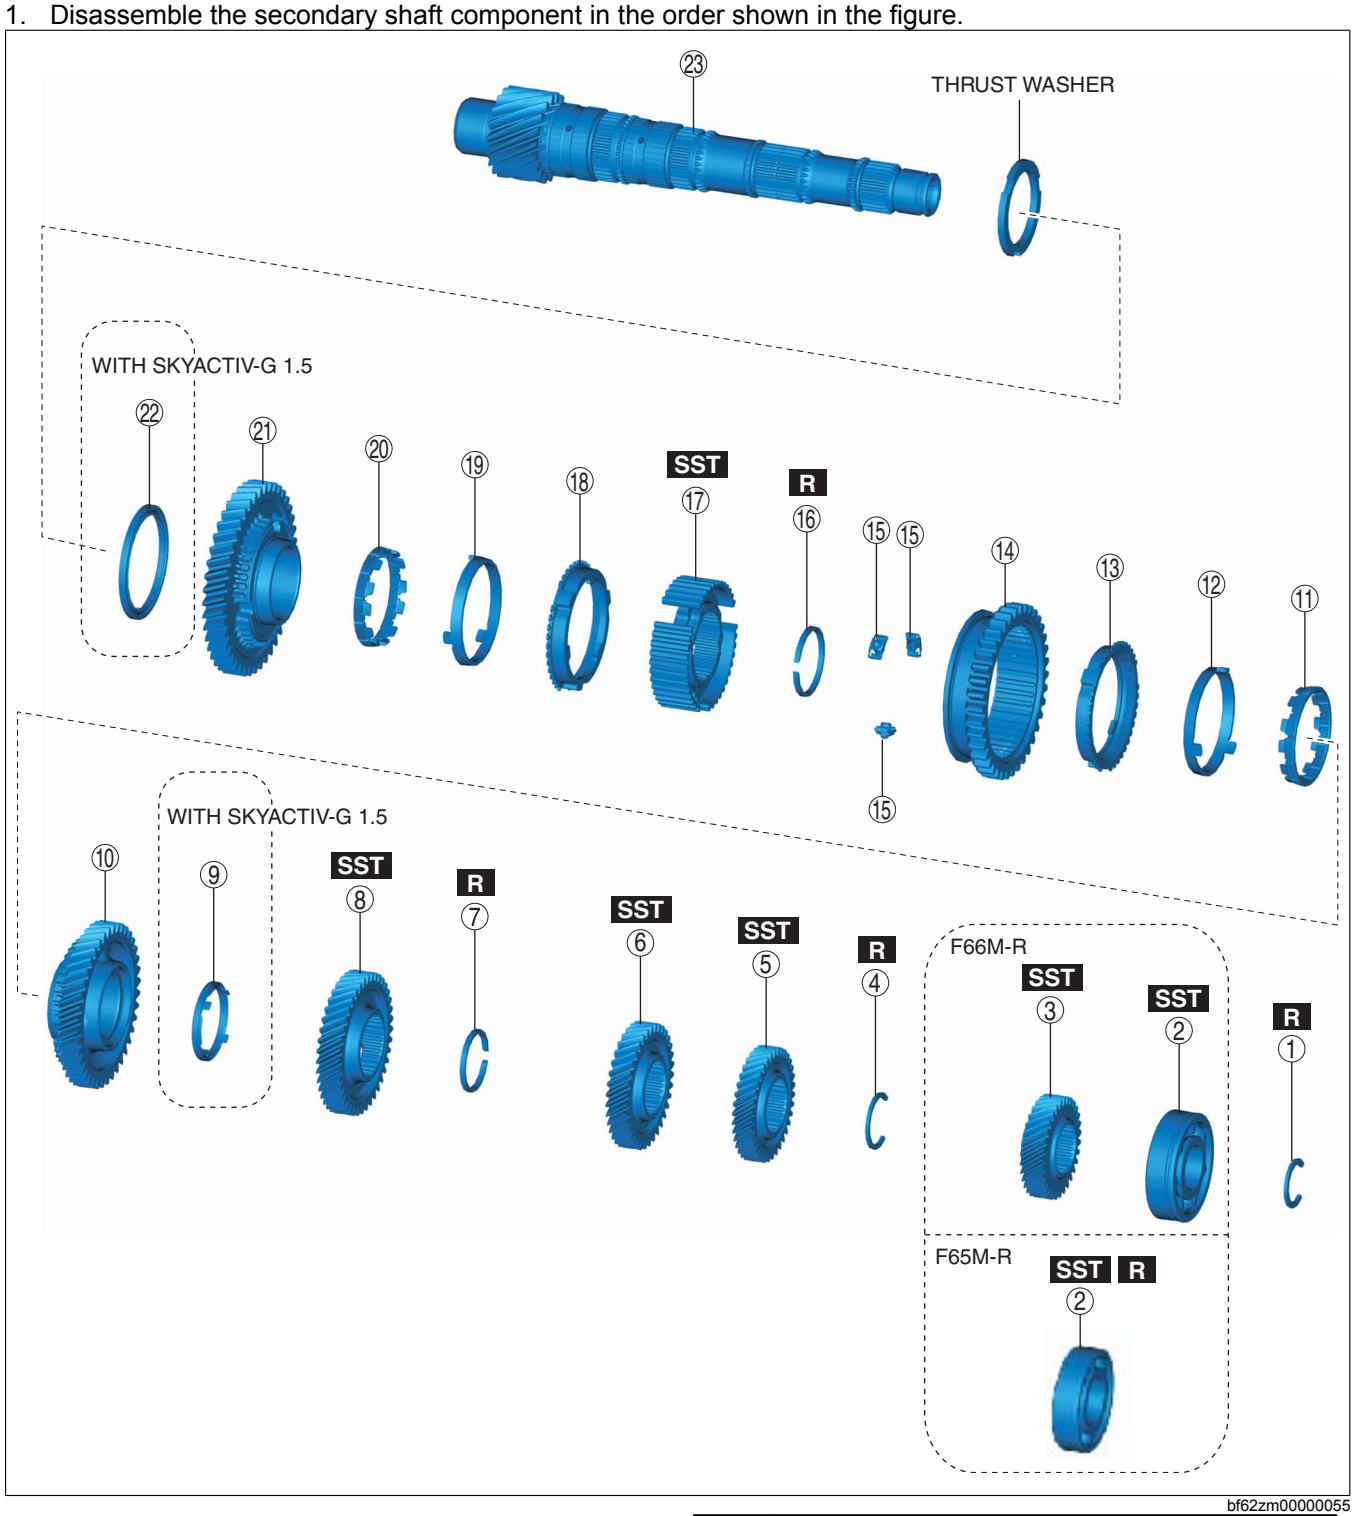

bf62zm00000055

1	Clip
2	Ball bearing (See Ball Bearing, Secondary 6th Gear Removal Note.)

3	Secondary 6th gear (See Ball Bearing, Secondary 6th Gear Removal Note.)
4	Clip


5	Secondary 5th gear (See Secondary 5th Gear, Secondary 4th Gear Removal Note.)
6	Secondary 4th gear (See Secondary 5th Gear, Secondary 4th Gear Removal Note.)
7	Clip
8	Secondary 3rd gear (See Secondary 3rd Gear Removal Note.)
9	Friction damper (with SKYACTIV-G 1.5)
10	Secondary 2nd gear
11	Inner cone ring
12	Middle cone ring

13	Synchronizer ring
14	Clutch hub sleeve
15	Synchronizer key
16	Clip
17	Clutch hub (See Clutch Hub Removal Note.)
18	Synchronizer ring
19	Middle cone ring
20	Inner cone ring
21	Secondary 1st gear
22	Friction damper (with SKYACTIV-G 1.5)
23	Secondary shaft

Ball Bearing, Secondary 6th Gear Removal Note

1. Set the **SSTs** and secondary shaft component in the press as shown in the figure.


F65M-R

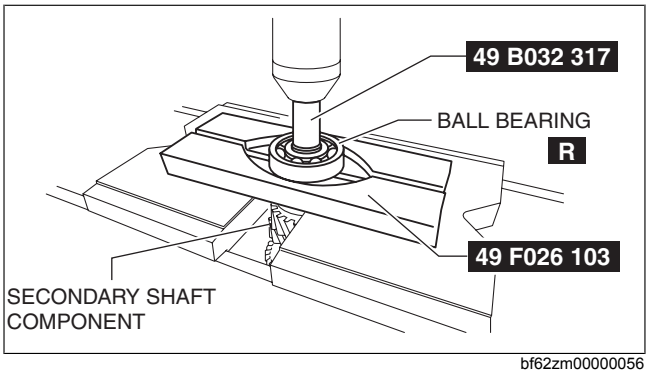

bf62zm00000056

F66M-R


2. Remove the ball bearings using the press. (F65M-R)
3. Remove the ball bearing and secondary 6th gear simultaneously using the press.(F66M-R)

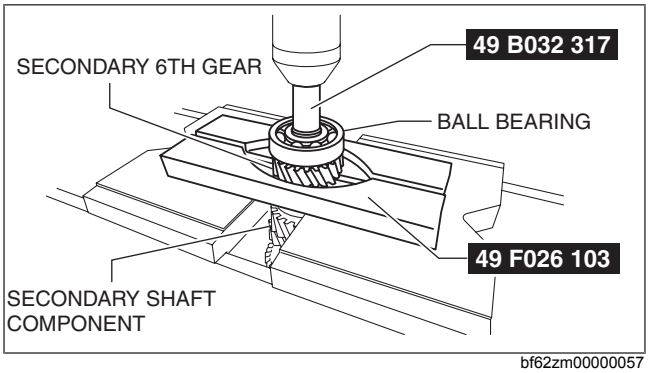

bf62zm00000057

Secondary 5th Gear, Secondary 4th Gear Removal Note


1. Set the **SSTs** and secondary shaft component in the press as shown in the figure.
2. Remove the secondary 5th gear and secondary 4th gear using the press.

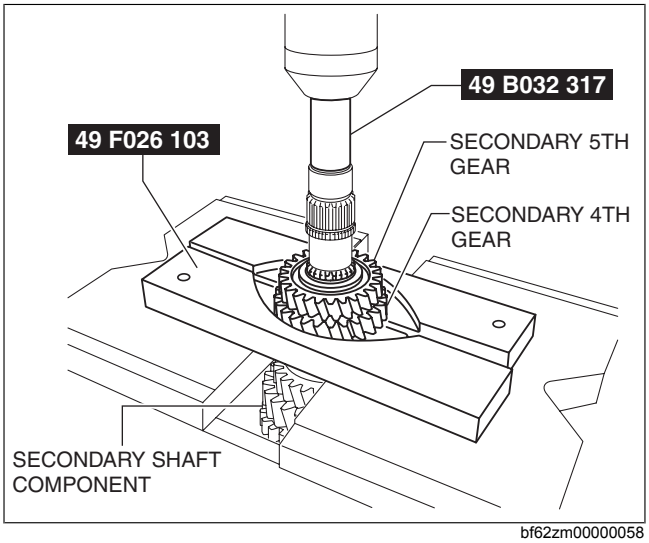

bf62zm00000058

Secondary 3rd Gear Removal Note


1. Set the **SSTs** and secondary shaft component in the press as shown in the figure.
2. Remove all parts from the secondary 3rd gear to the secondary 2nd gear simultaneously using the press.

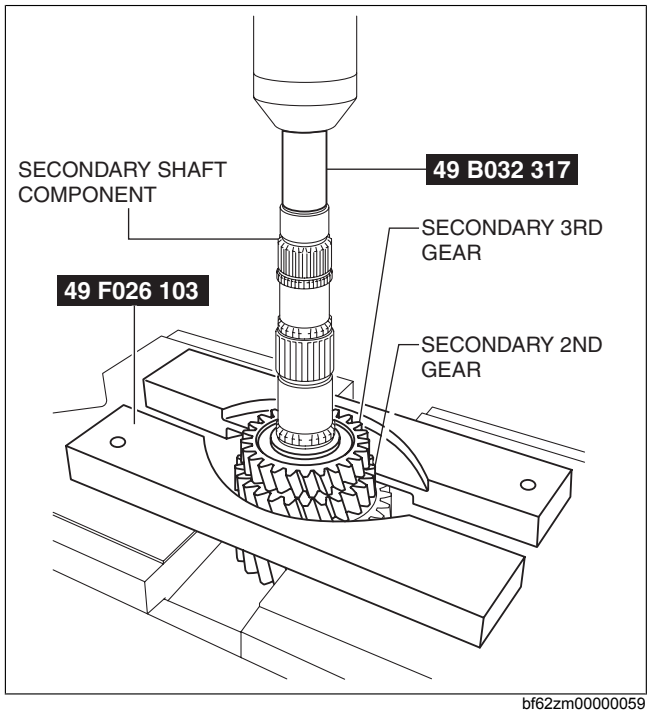

bf62zm00000059

Clutch Hub Removal Note

1. Set the secondary shaft component and the **SST** in the press as shown in the figure.
2. Remove all parts from the clutch hub to the secondary 1st gear simultaneously using the press.

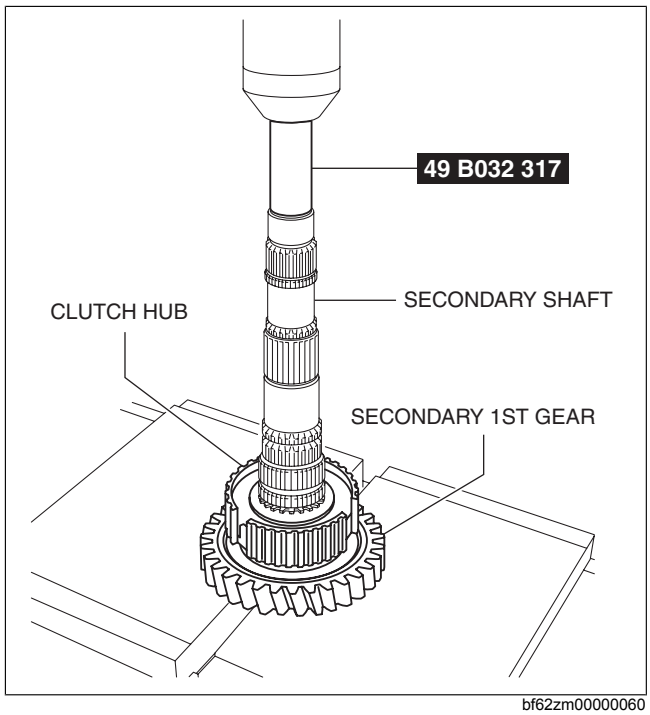

bf62zm00000060