
DIFFERENTIAL DISASSEMBLY

id051500169500

1. Perform the differential backlash adjustment. (See DIFFERENTIAL BACKLASH ADJUSTMENT.)
2. Disassemble the differential in the order shown in the figure.

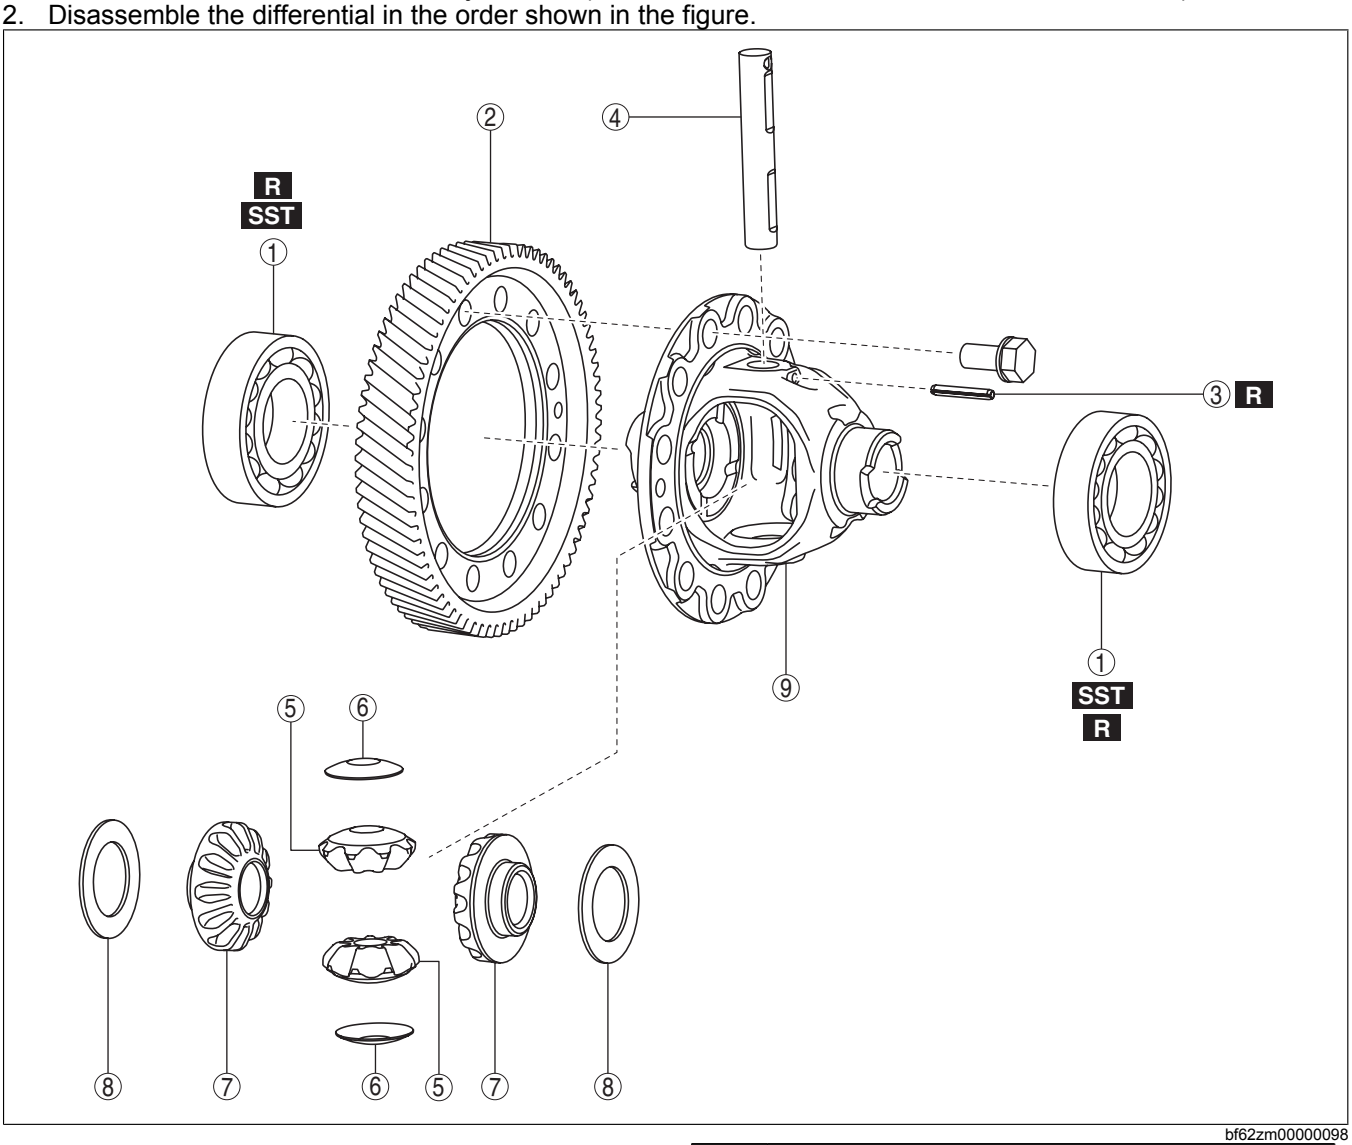


bf62zm00000098

1	Ball bearing (See Ball Bearing Removal Note.)
2	Ring gear (See Ring Gear Removal Note.)
3	Pin (See Pin Removal Note.)
4	Pinion shaft

5	Pinion gear
6	Thrust washer
7	Side gear
8	Thrust washer
9	Differential case


Ball Bearing Removal Note

1. Secure the differential in a vice.

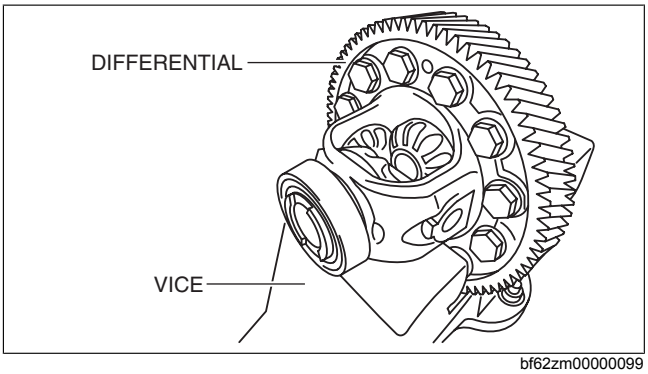


bf62zm00000099

2. Remove the ball bearing (clutch housing side) using the **SST**.

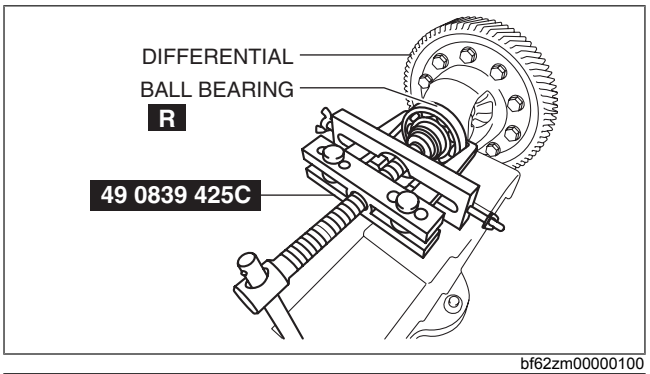

bf62zm00000100


3. Remove the ball bearing (transaxle case side) using the **SST**.

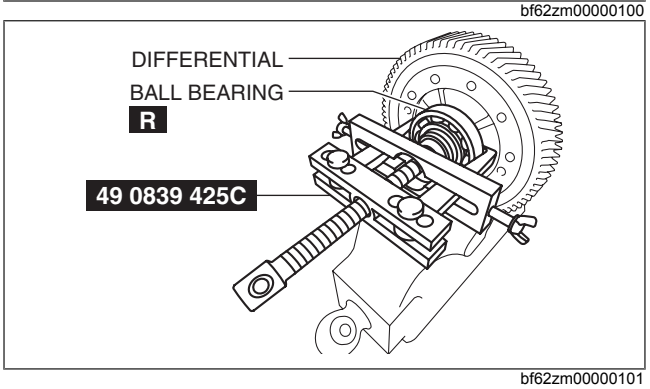

bf62zm00000101


Ring Gear Removal Note

1. Secure the differential in a vice as shown in the figure.
2. Remove the ring gear installation bolts.
3. Remove the differential from the vice.

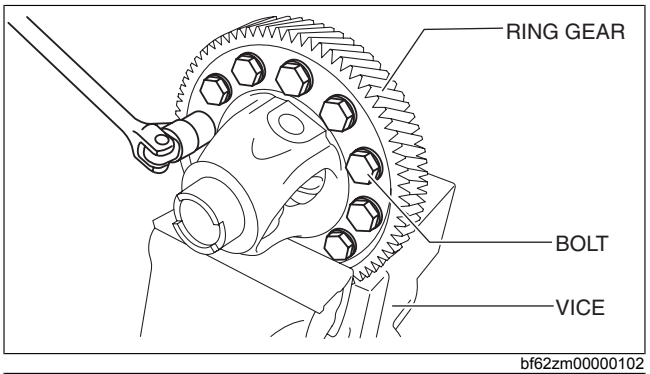

bf62zm00000102


4. Set the differential in a press as shown in the figure.
5. Remove the ring gear using the press.

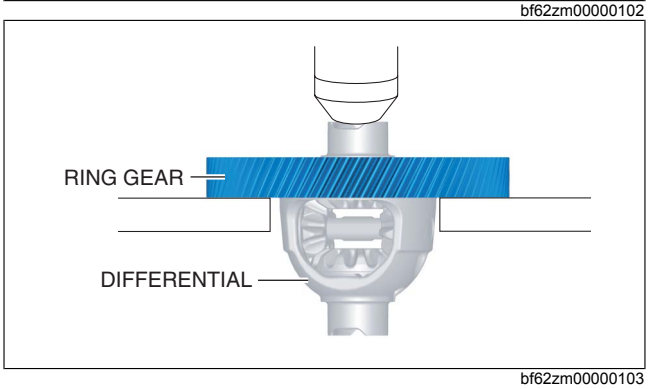

bf62zm00000103

Pin Removal Note

1. Remove the pin using the punch.

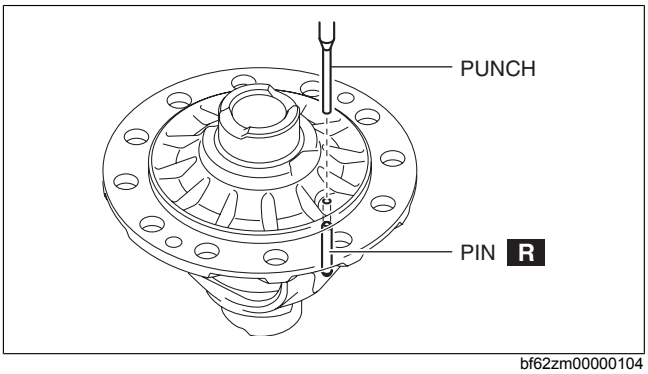

bf62zm00000104