
DIFFERENTIAL ASSEMBLY

id051500169600

1. Assemble the differential in the order shown in the figure.
2. Perform the differential backlash measurement. (See DIFFERENTIAL BACKLASH ADJUSTMENT.)

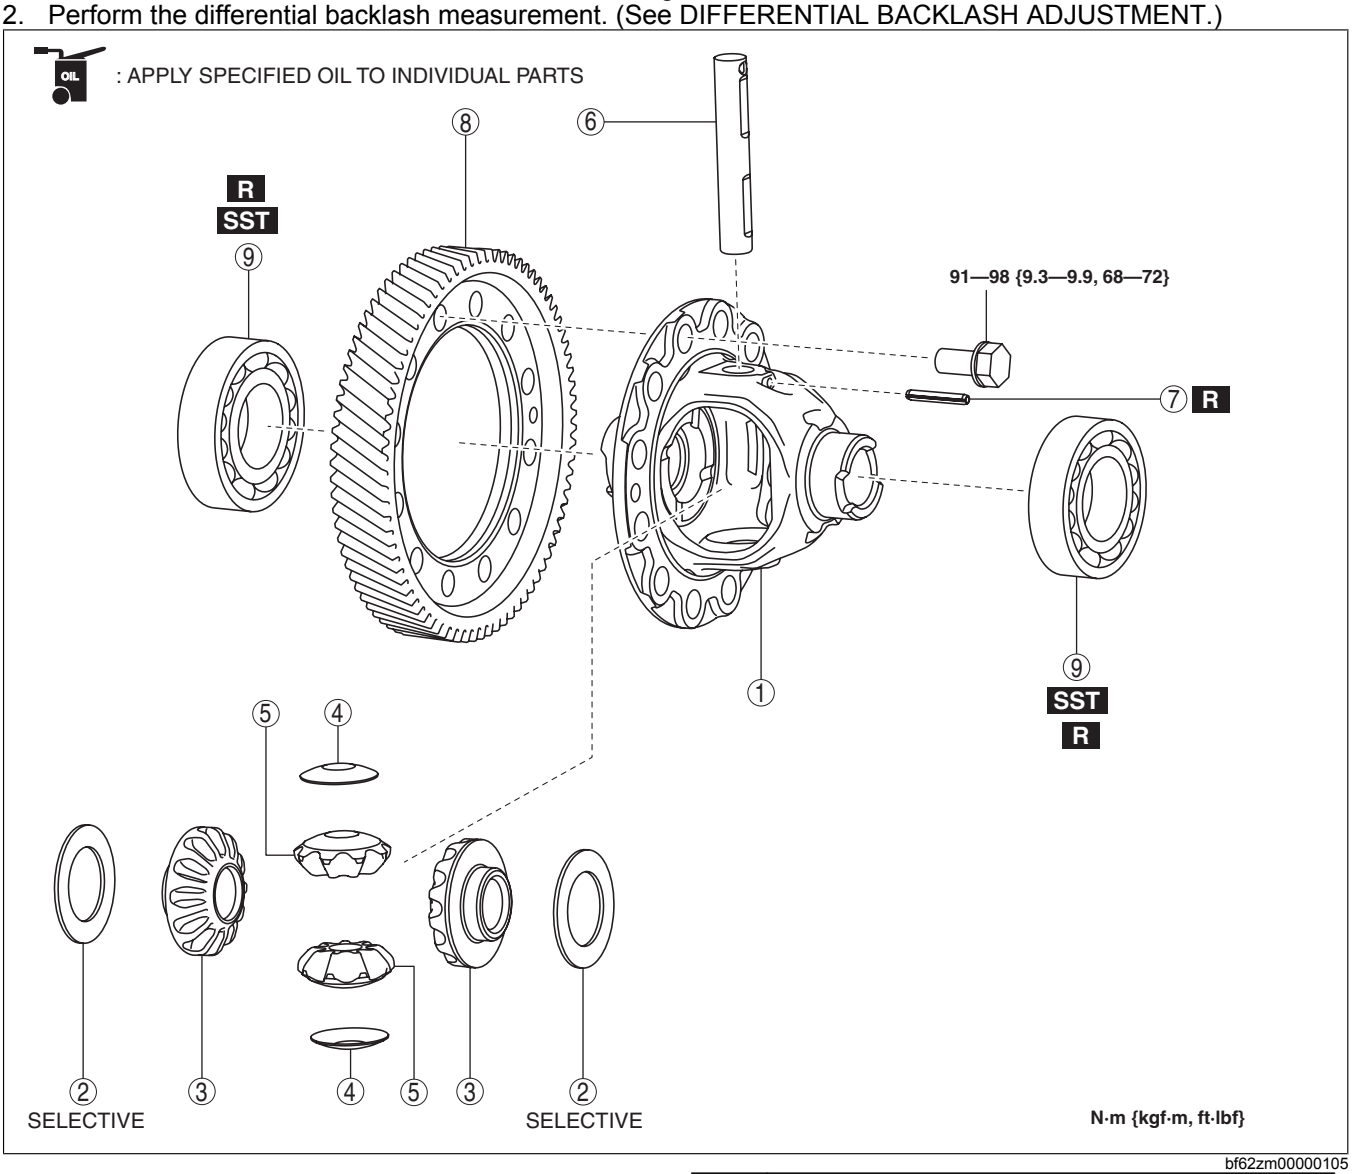


bf62zm00000105

1	Differential case
2	Thrust washer
3	Side gear
4	Thrust washer
5	Pinion gear
6	Pinion shaft
7	Pin (See Pin Assembly Note.)
8	Ring gear (See Ring Gear Assembly Note.)
9	Ball bearing (See Ball Bearing Installation Note.)

Pin Assembly Note


1. Install a new pin as shown in the figure and secure the pinion shaft.

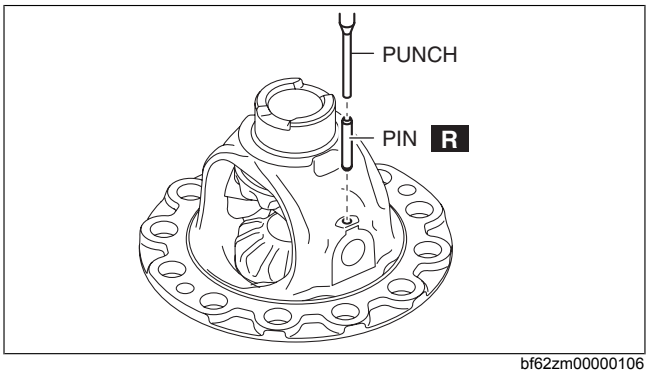


bf62zm00000106

Ring Gear Assembly Note

1. Assemble the ring gear so that the holes of the differential and the ring gear are aligned as shown in the figure.

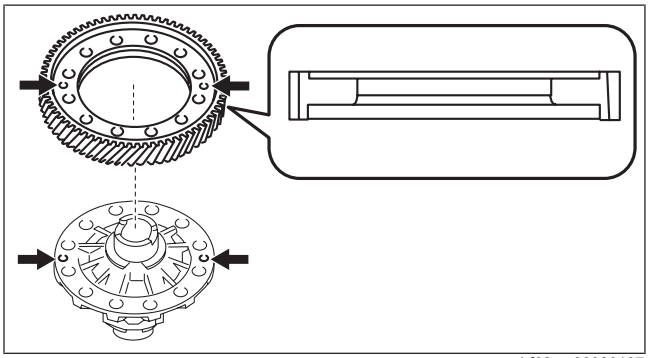

bf62zm00000107

2. Temporarily tighten the bolts shown in the figure and position the ring gear and the differential.

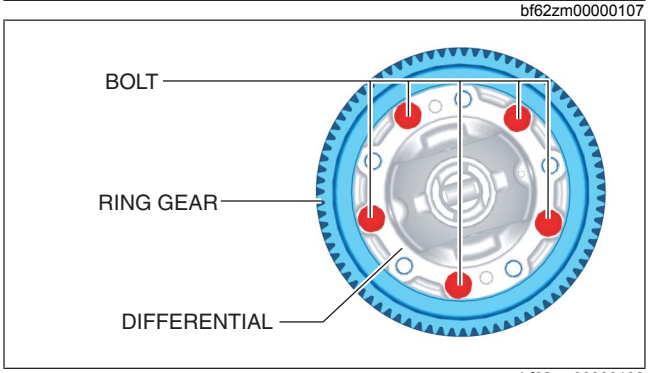

bf62zm00000108


3. Set the ring gear and the differential in the press as shown in the figure.
4. Press fit the ring gear into the differential using the press.

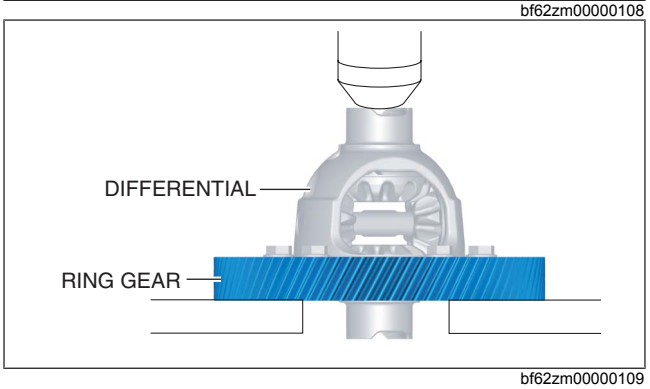

bf62zm00000109

5. Secure the differential in a vice.
6. Install the ring gear by tightening the ring gear installation bolts in several passes.


   Tightening torque
   91—98 N·m {9.3—9.9 kgf·m, 68—72 ft·lbf}

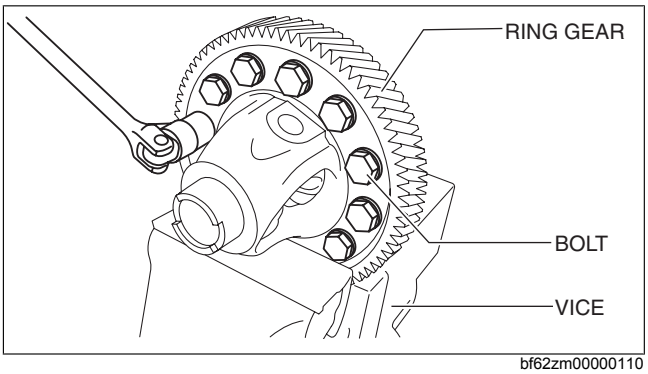

bf62zm00000110


Ball Bearing Installation Note

1. Set the differential, ball bearing (clutch housing side), and **SST** in a press as shown in the figure.
2. Assemble the ball bearing (clutch housing side) using the press.

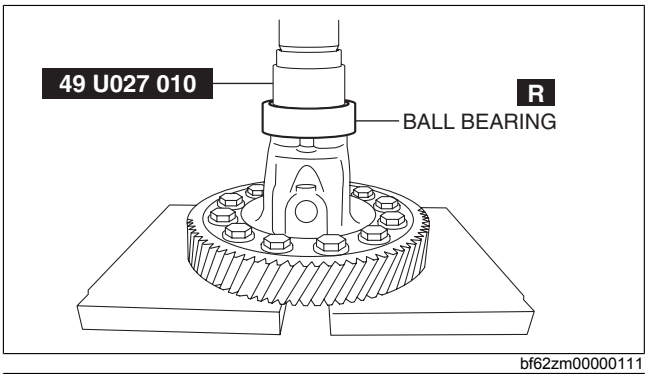

bf62zm00000111

3. Set the differential, ball bearing (transaxle case side), and **SST** in the press as shown in the figure.
4. Assemble the ball bearing (transaxle case side) using the press.

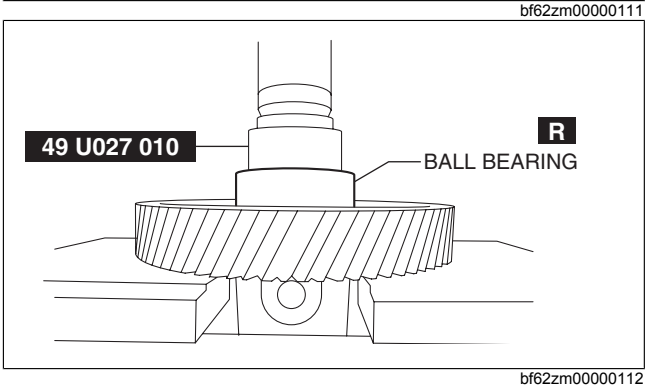

bf62zm00000112