TRANSAXLE CASE AND CLUTCH HOUSING ASSEMBLY


id051500169900

Transaxle Case Component Assembly


1. Install the bolt and nut to the transaxle case component, pinch the bolt using a vice, and secure the transaxle component as shown in the figure.

   Bolt
   Part number: 99450 0855 or M8 × 1.25 bolt (length 55 mm {2.2 in})
   Nut
   M8 × 1.25

2. Assemble the transaxle case component in the order shown in the figure.

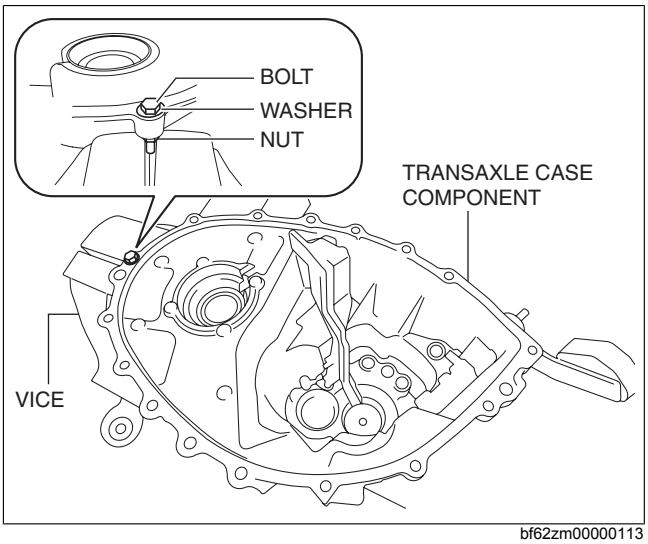

bf62zm00000113

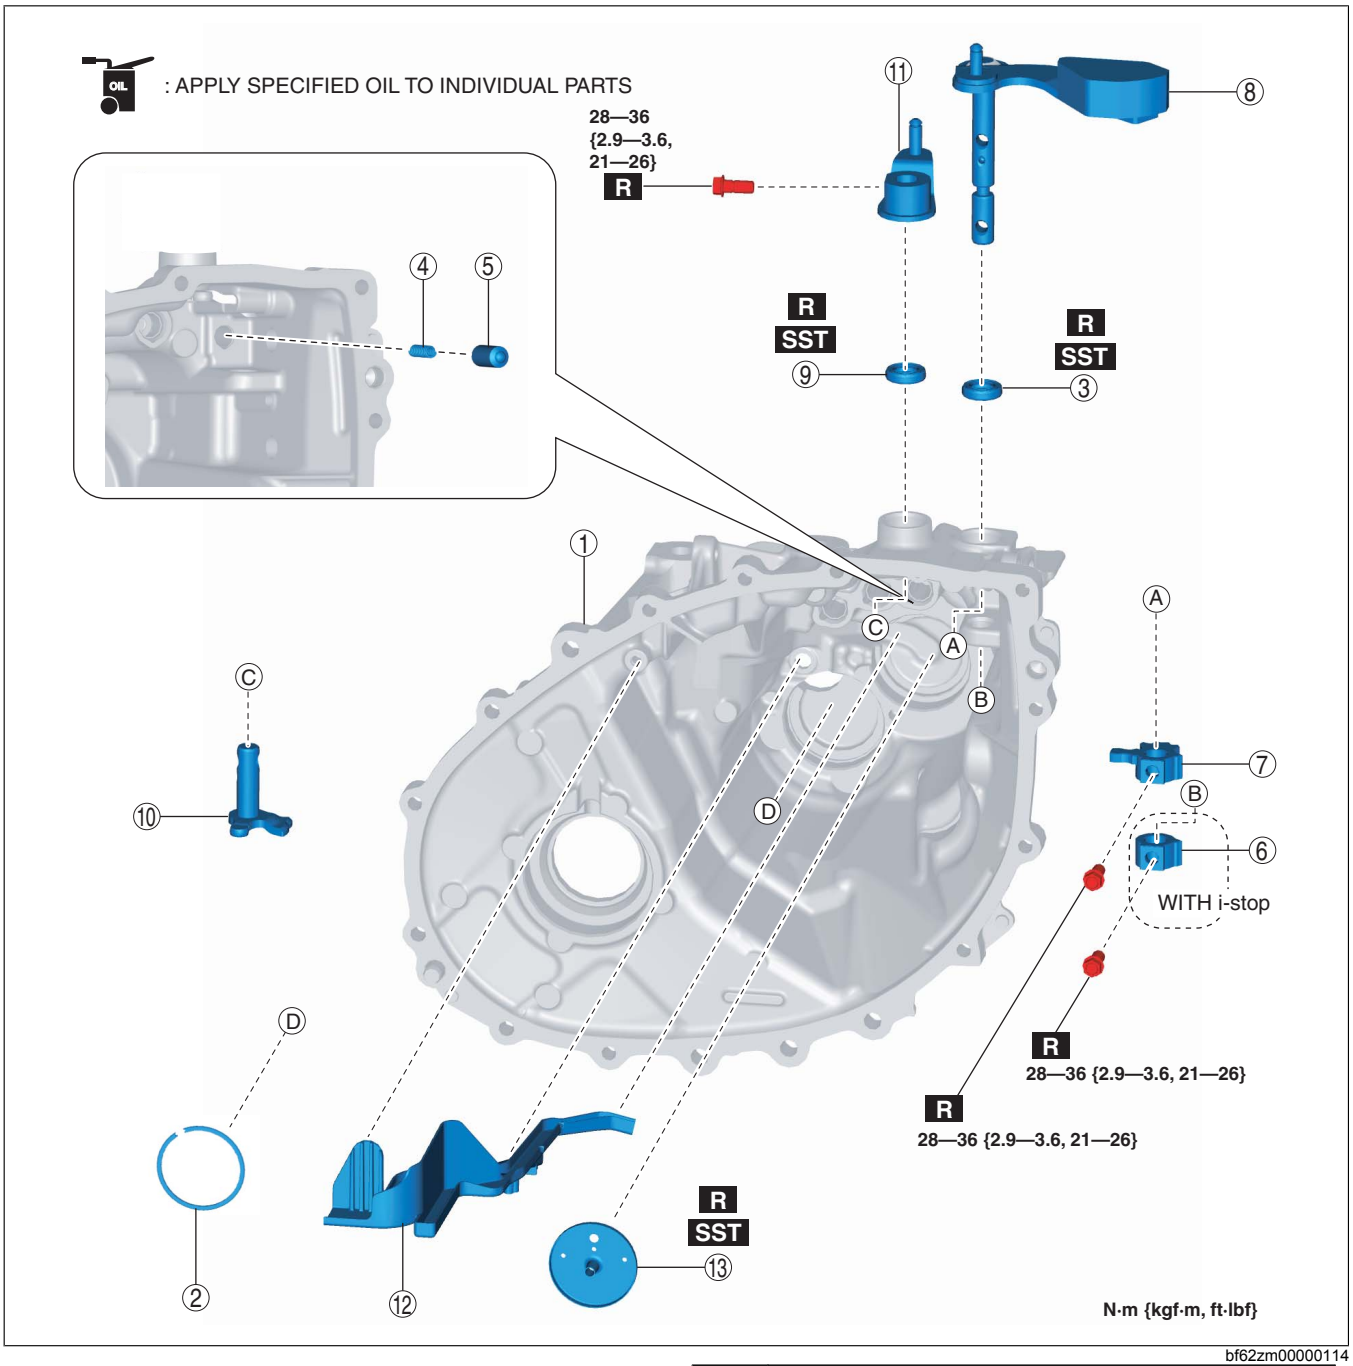


bf62zm00000114

1	Transaxle case
2	Clip
3	Oil seal (shift lever) (See Oil seal (shift lever) assembly note.)
4	Spring
5	Detent ball pin
6	Switch pin (with i-stop)
7	Inner shift lever
8	Shift lever


9	Oil seal (select lever) (See Oil seal (select lever) assembly note.)
10	Select arm
11	Select lever
12	Oil path
13	Funnel (See Funnel (primary shaft) assembly note.)

Oil seal (shift lever) assembly note

1. Assemble the new oil seal to the position shown in the figure using the **SST**.

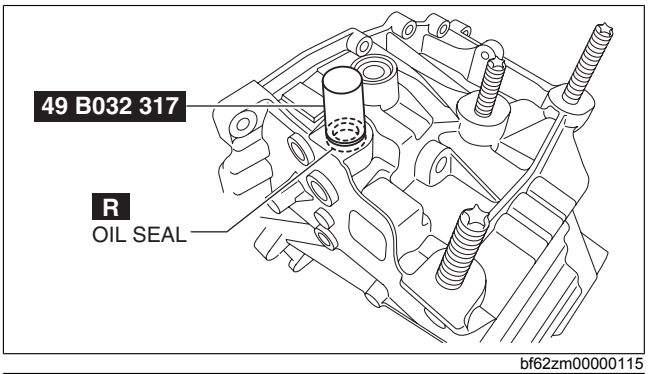


bf62zm00000115

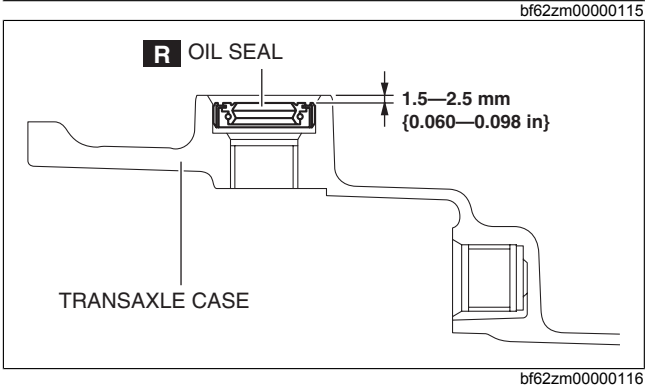


bf62zm00000116

Oil seal (select lever) assembly note

1. Assemble the new oil seal to the position shown in the figure using the **SST**.

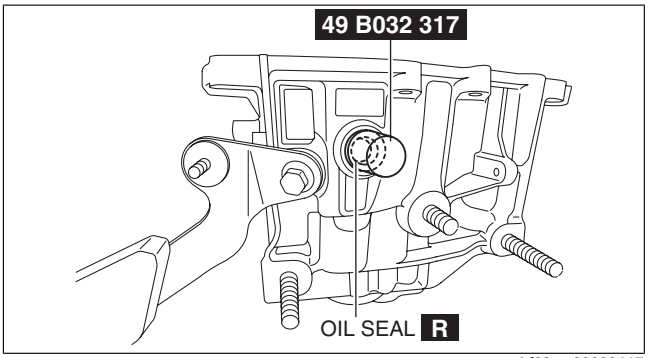


bf62zm00000117

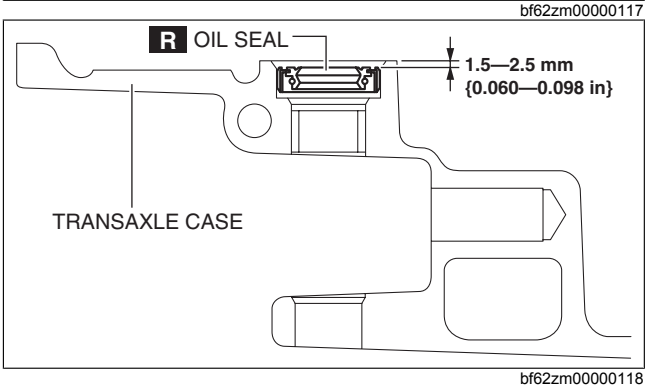

bf62zm00000118


Funnel (primary shaft) assembly note

1. Set a new funnel while aligning hole A in the upper part of the funnel with air-bleeding hole B at the shift rod (5GR/6GR) hole of the transaxle case as shown in the figure.

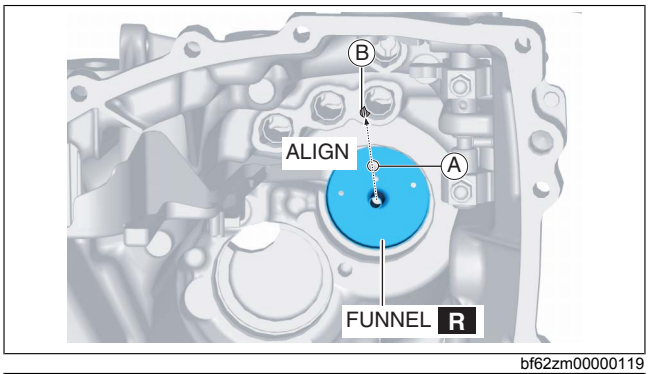

bf62zm00000119

2. Assemble the funnel to the transaxle case using the **SST**.

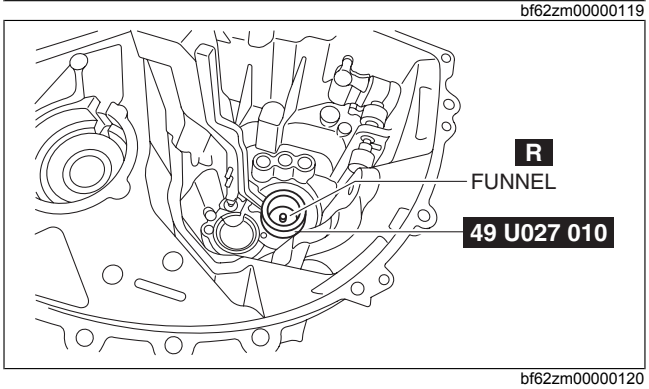


bf62zm00000120

Clutch Housing Component Assembly

1. Assemble the clutch housing component in the order shown in the figure.

: APPLY SPECIFIED OIL TO INDIVIDUAL PARTS

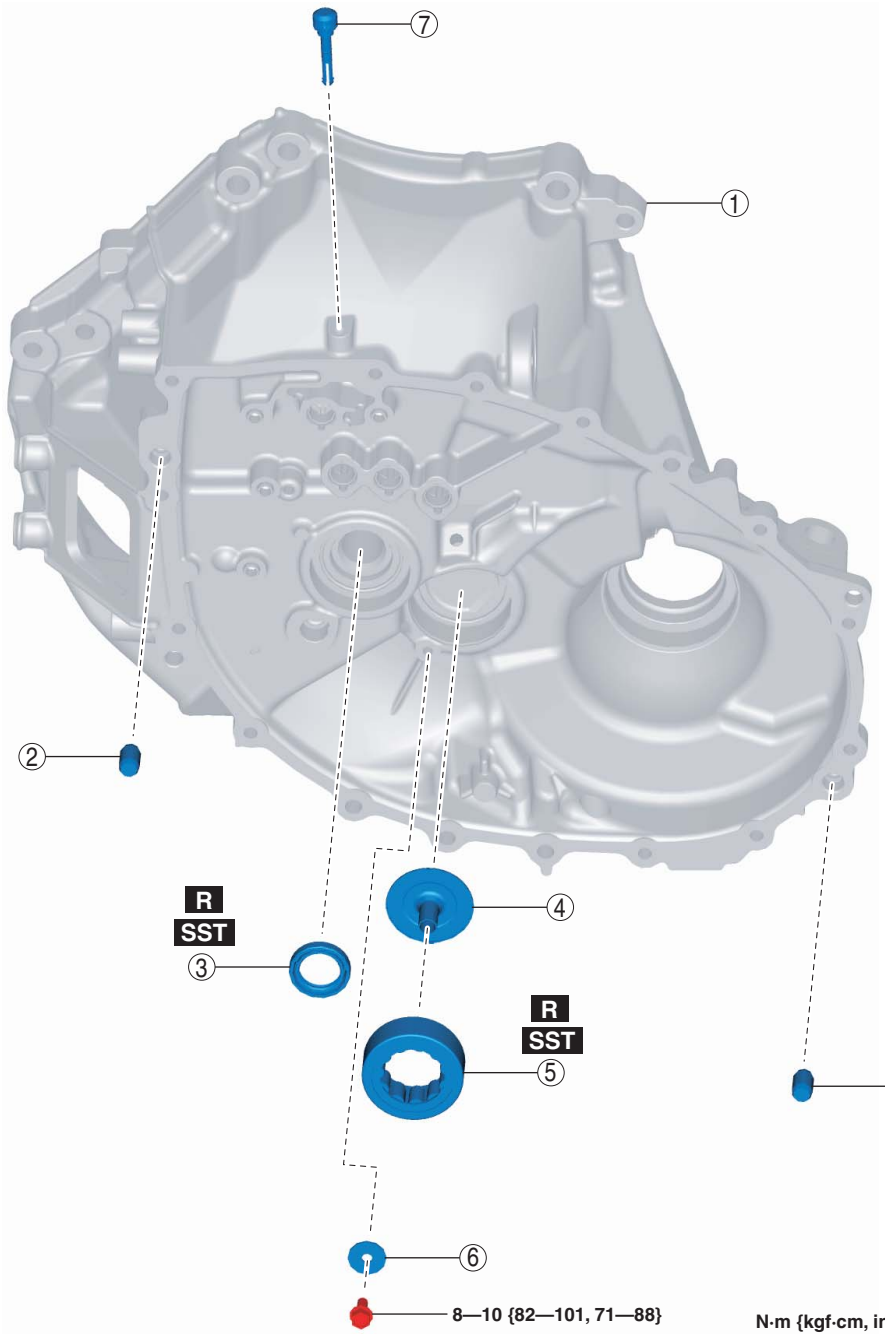


bf62zm00000121

1	Clutch housing
2	Dowel pin
3	Oil seal (See Oil seal assembly note.)
4	Funnel

5	Roller bearing (See Roller bearing assembly note.)
6	Stopper plate
7	Breather

Oil seal assembly note


1. Assemble a new oil seal using the **SST**.

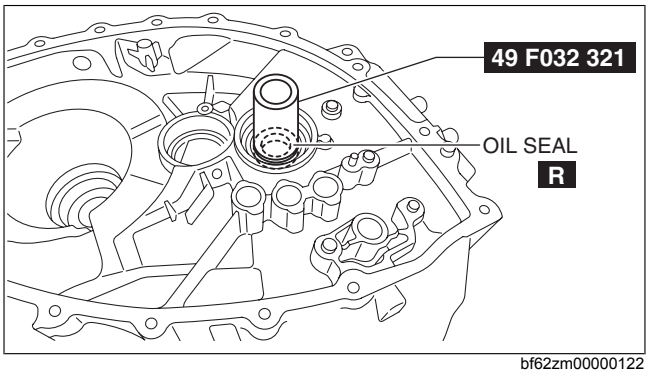

bf62zm00000122

Roller bearing assembly note

1. Assemble a new roller bearing using the **SST**.

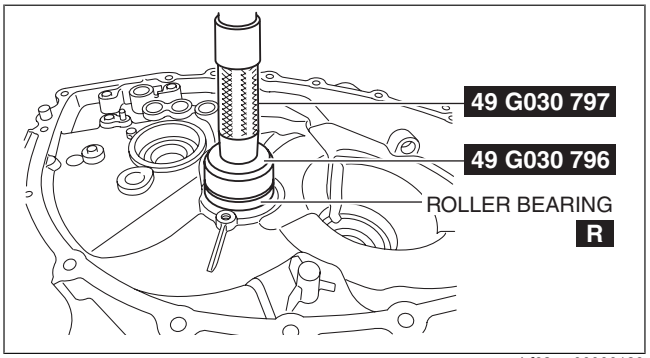

bf62zm00000123