
TRANSAXLE CASE AND CLUTCH HOUSING INSPECTION


id051500285100

Transaxle Case Inspection

1. Inspect the transaxle case for damage, wear or loss.
   - If there is any malfunction, replace the transaxle case.
2. Measure the inner diameter of the bushing assembled to the transaxle case. Measurement positions total 14 and are in the X and Y directions at 7 points, A, B, C, D, E, F, and G, as shown in the figure.

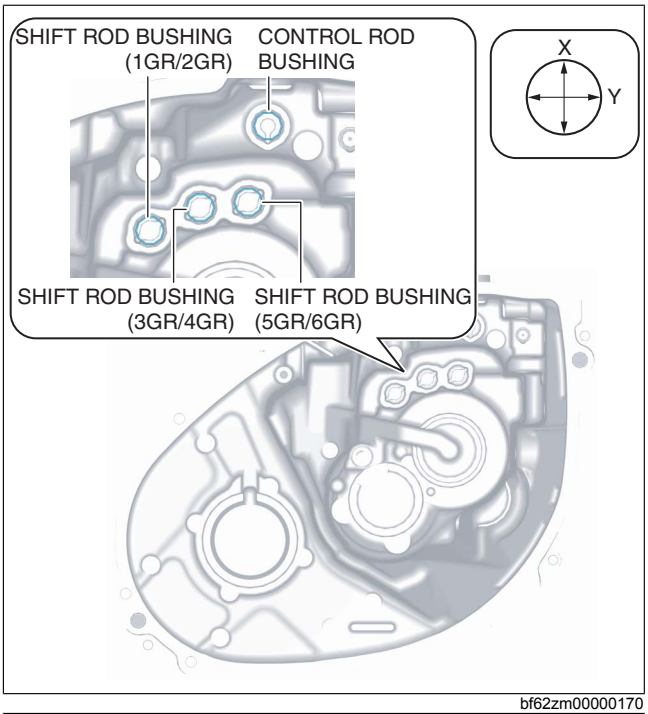

bf62zm00000170

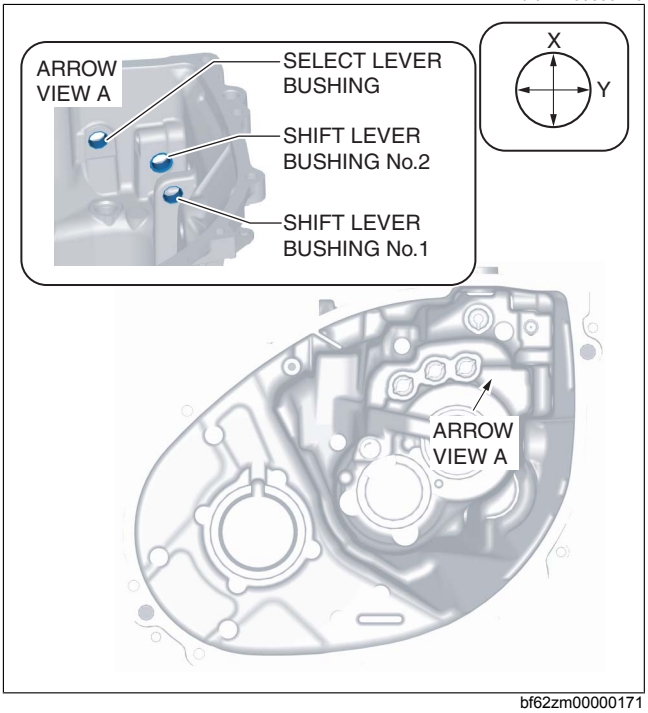

bf62zm00000171


Bush inner diameter

Measurement location	Specification (mm {in})	Maximum (mm {in})
A: Shift rod bushing (1GR/2GR)	14.048 {0.55307}	14.088 {0.55465}
B: Shift rod bushing (3GR/4GR)	14.048 {0.55307}	14.088 {0.55465}
C: Shift rod bushing (5GR/6GR)	14.048 {0.55307}	14.088 {0.55465}
D: Control rod bushing	14.048 {0.55307}	14.088 {0.55465}
E: Select lever bushing	14.048 {0.55307}	14.088 {0.55465}
F: Shift lever bushing No.1	14.048 {0.55307}	14.088 {0.55465}
G: Shift lever bushing No.2	14.031 {0.55240}	14.071 {0.55398}

- If it exceeds the maximum, replace the transaxle case.

Clutch Housing Inspection

1. Inspect the clutch housing for damage, wear, or loss.
   - If there is any malfunction, replace the clutch housing.
2. Measure the inner diameter of the bushing assembled to the clutch housing. Measurement positions total eight and are in the X and Y directions, at four points (A, B, C, and D) as shown in the figure.

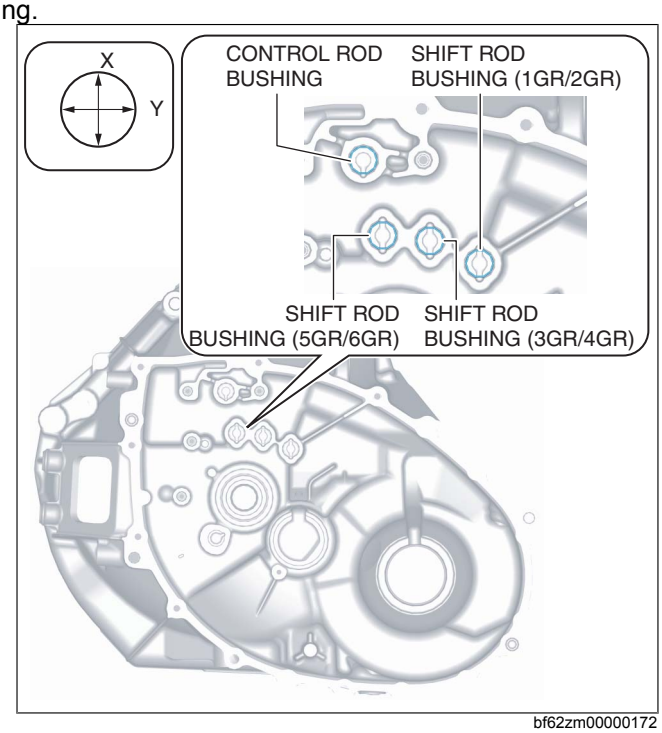

bf62zm00000172

Bushing inner diameter

Measurement location	Specification (mm {in})	Maximum (mm {in})
A: Shift rod bushing (1GR/2GR)	14.048 {0.55307}	14.088 {0.55465}
B: Shift rod bushing (3GR/4GR)	14.048 {0.55307}	14.088 {0.55465}
C: Shift rod bushing (5GR/6GR)	14.048 {0.55307}	14.088 {0.55465}
D: Control rod bushing	14.048 {0.55307}	14.088 {0.55465}

- If it exceeds the maximum, replace the clutch housing.