
F-01
RELAY AND FUSE BLOCK

FRONT HARNESS

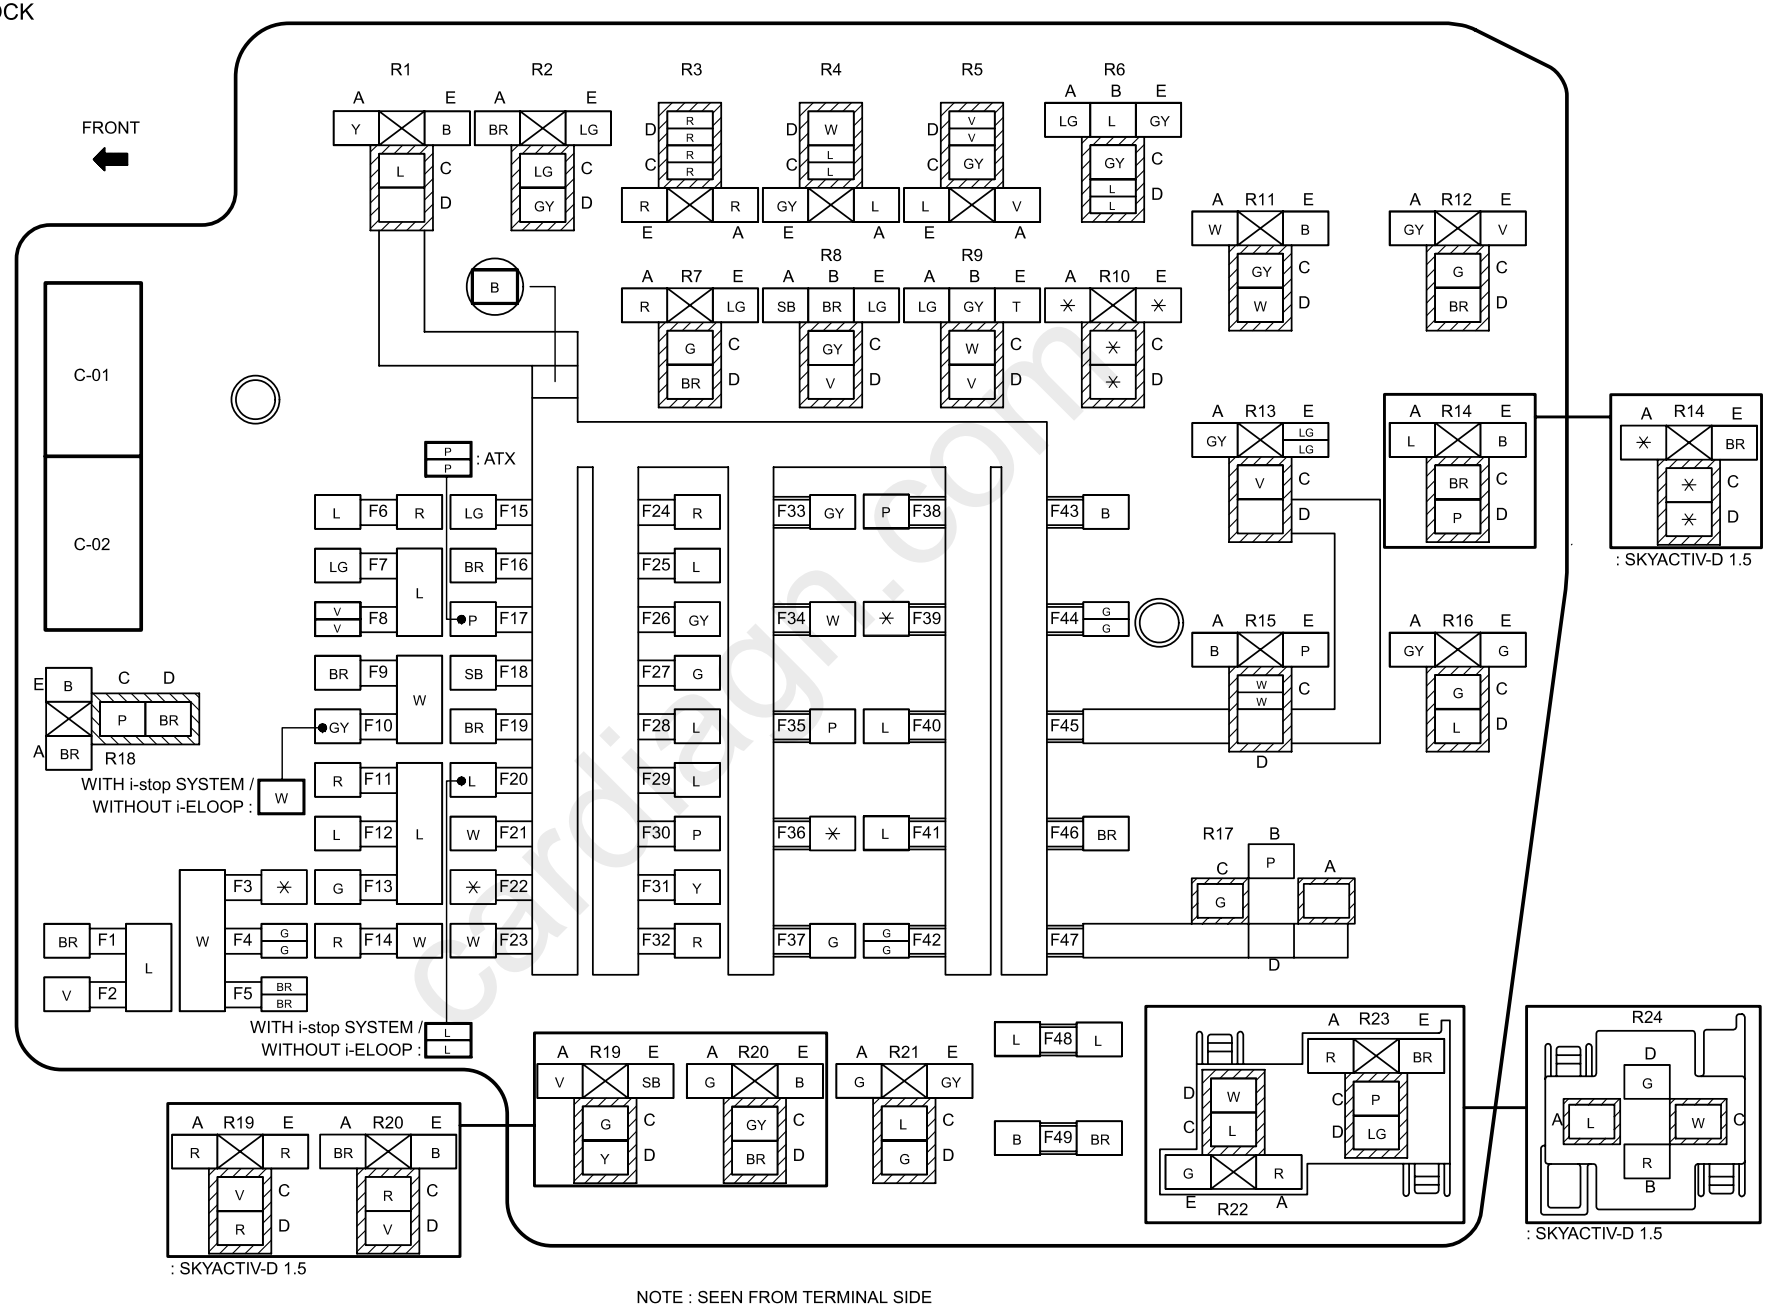

NOTE : SEEN FROM TERMINAL SIDE

cardiagn.com

No.	FUSE NAME	FUSE RATING	No.	FUSE NAME	FUSE RATING
F1	C/U IG1	15A	F26	STOP	10A
F2	ENGINE IG1	7.5A	F27	HORN	15A
F3	(SUNROOF)	(10A)	F28	H/L LH	20A
F4	INTERIOR	15A	F29	ABS/DSC S	30A
F5	ENG+B	7.5A	F30	HAZARD	15A
F6	AUDIO2	15A	F31	(FUEL PUMP)	(15A)
F7	METER1	10A	F32	(FUEL WARM)	(25A)
F8	SRS1	7.5A	F33	WIPER	20A
F9	(METER2)	(7.5A)	F34	CABIN+B	50A
F10	(RADIO)	(7.5A)	F35	(FAN2)	(30A)
F11	ENGINE3	15A	F36	(FUEL PUMP)	(30A)
F12	ENGINE1	15A	F37	ABS/DSC M	50A
F13	ENGINE2	15A	F38	(EVVT)	(20A)
F14	AUDIO1	25A	F39	*	*
F15	(A/C MAG)	(7.5A)	F40	(FAN1)	(30A)
F16	(AT PUMP)	(15A)	F41	(FAN3)	(40A)
F17	AT	15A	F42	ENG.MAIN	40A
F18	D.LOCK	25A	F43	(EPS)	(60A)
F19	H/L RH	20A	F44	DEFOG	40A
F20	ENG+B2	7.5A	F45	IG2	30A
F21	TAIL	20A	F46	(INJECTOR)	(30A)
F22	*	*	F47	HEATER	40A
F23	ROOM	25A	F48	(P.WINDOW1)	(30A)
F24	(FOG)	(15A)	F49	(DCDC DE)	(40A)
F25	(H/CLEAN)	(20A)			

( ) : IF EQUIPPED

No.	RELAY NAME	NAME INDICATED ON FUSE BOX COVER
R1	IG1 RELAY	{IG1}
R2	(A/C RELAY)	{A/C}
R3	(FRONT FOG LIGHT RELAY)	{FOG}
R4	(HEADLIGHT CLEANER RELAY)	{H/CLEAN}
R5	(THEFT-DETERRENT RELAY)	{BURGLAR}
R6	(BRAKE LIGHT RELAY)	{STOP}
R7	(ELECTRIC AT OIL PUMP RELAY)	{AT PUMP}
R8	WIPER INT RELAY	{WIPER INT}
R9	WIPER HI RELAY	{WIPER HIGH}
R10	*	*
R11	(IGNITION RELAY (ACC_STAB))	{DCDC ACC}
R12	HORN RELAY	{HORN}
R13	STARTER RELAY	{STARTER}
R14	(ELECTRIC VARIABLE VALVE TIMING RELAY) ← SKYACTIV-G 1.5 (WITH 4-2-1 EXHAUST SYSTEM) (CHECK CONNECTOR) ← SKYACTIV-D 1.5	{EVVT}
R15	ACC RELAY	{ACC}
R16	REAR WINDOW DEFOGGER RELAY	{DEFOG}
R17	BLOWER RELAY	{HEATER}
R18	(IGNITION RELAY (IG1_STAB))	{DCDC IG1}
R19	(FUEL PUMP RELAY) ← SKYACTIV-G 1.3, 1.5 (BLOW-BY HEATER RELAY) ← SKYACTIV-D 1.5	{FUEL PUMP} {BLOWBY.H}
R20	(FUEL INJECTOR RELAY) ← SKYACTIV-G 1.3, 1.5 (FUEL WARMER RELAY) ← SKYACTIV-D 1.5	{INJECTOR} {FUEL WARM}
R21	MAIN RELAY	{ENG.MAIN}
R22	(COOLING FAN RELAY No.2)	{FAN2}
R23	(COOLING FAN RELAY No.1)	{FAN1}
R24	(COOLING FAN RELAY)	{FAN3}

( ) : IF EQUIPPED

Cardiagn.com