


G07	G08	G09	G23	G24		
						


00G-2a

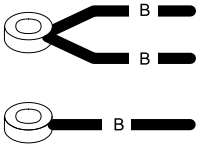



Refer to 00F section for the FUSE BOX, 00C section for the PCM CONNECTOR and COMMON CONNECTOR LIST.

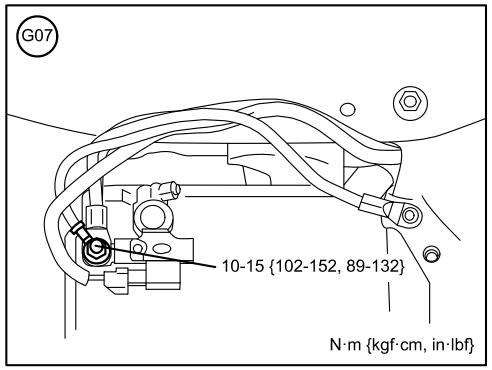


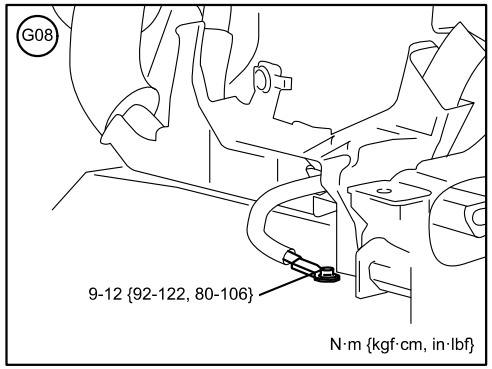

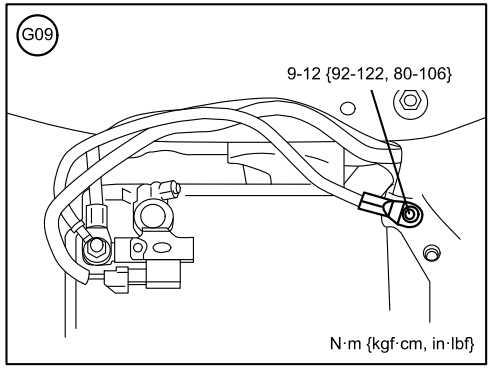

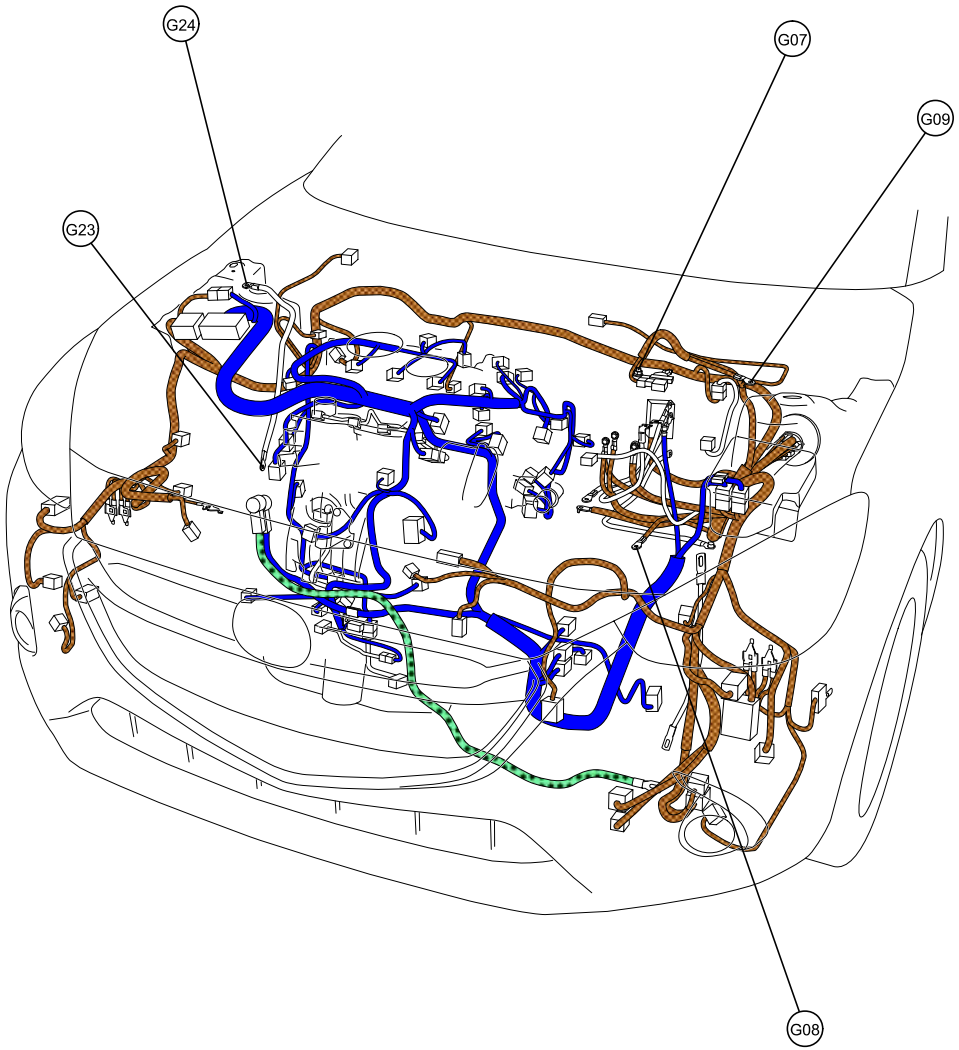

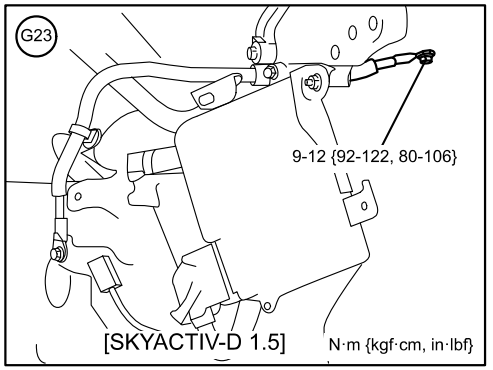

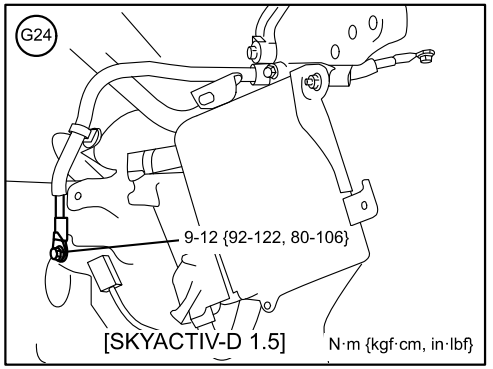

: FRONT HARNESS
: ENGINE No.2 HARNESS
: EMISSION HARNESS