


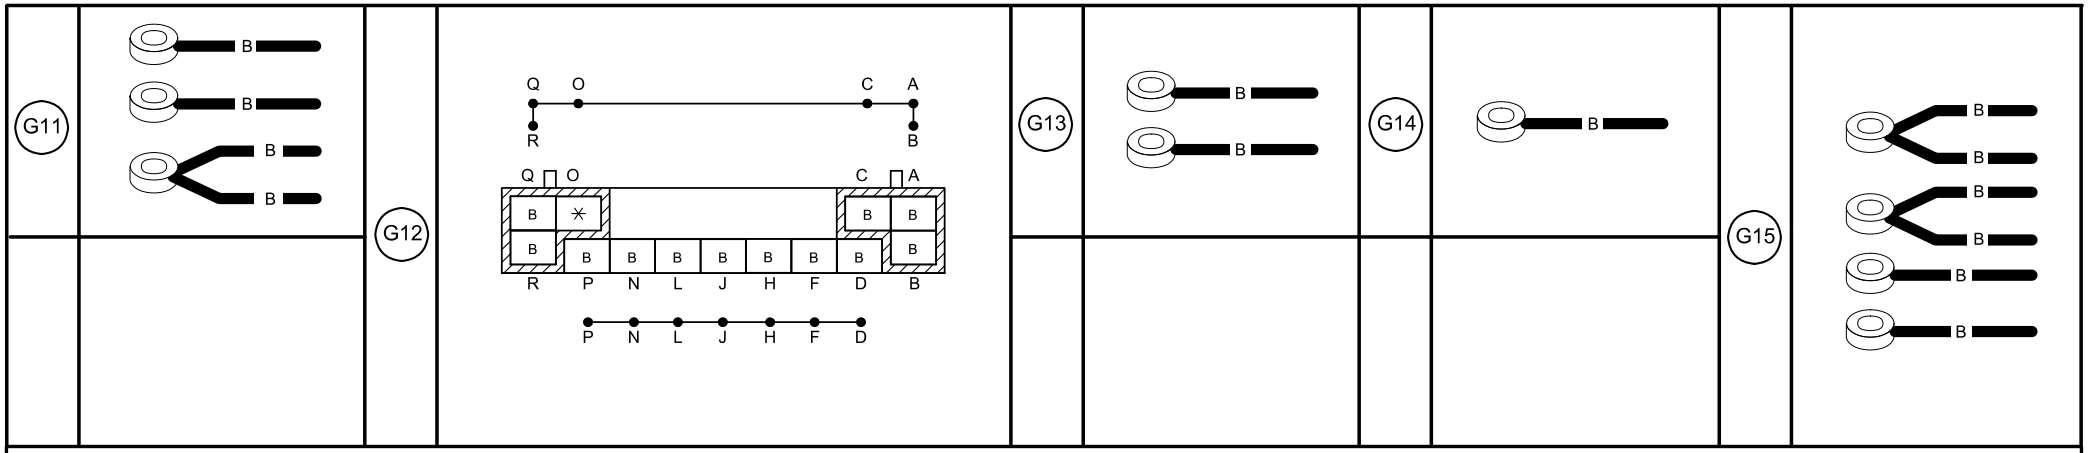



&14 : WITH CENTER DISPLAY, WITH CD PLAYER

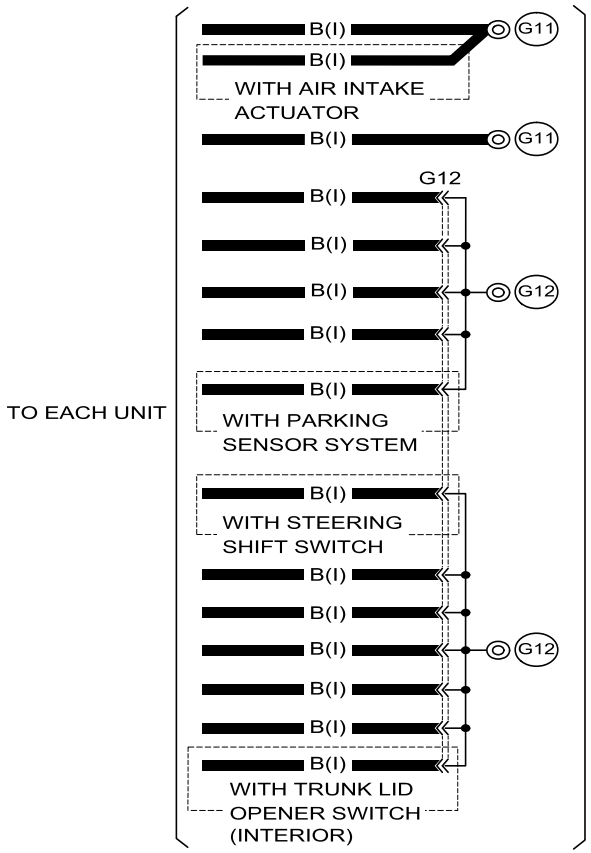


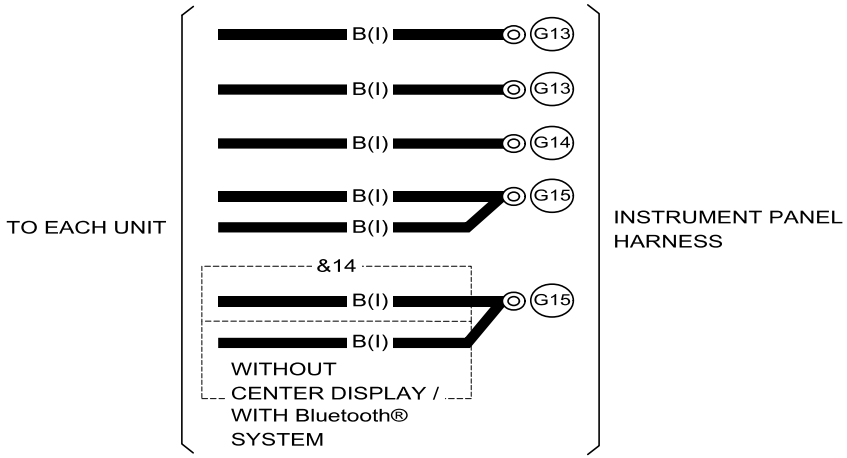



Refer to 00F section for the FUSE BOX, 00C section for the PCM CONNECTOR and COMMON CONNECTOR LIST.

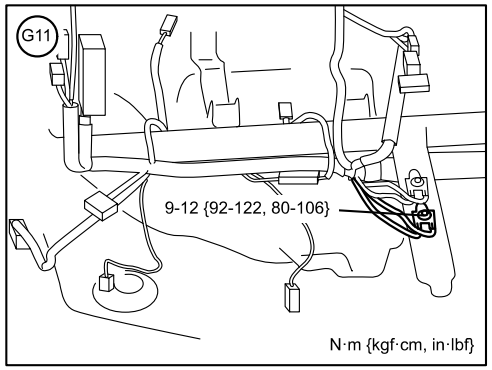


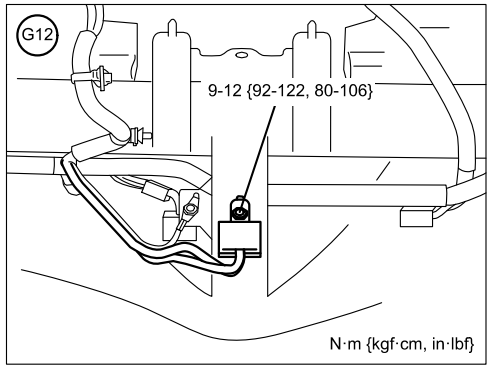

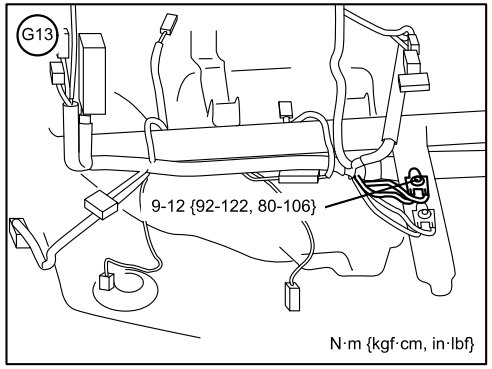

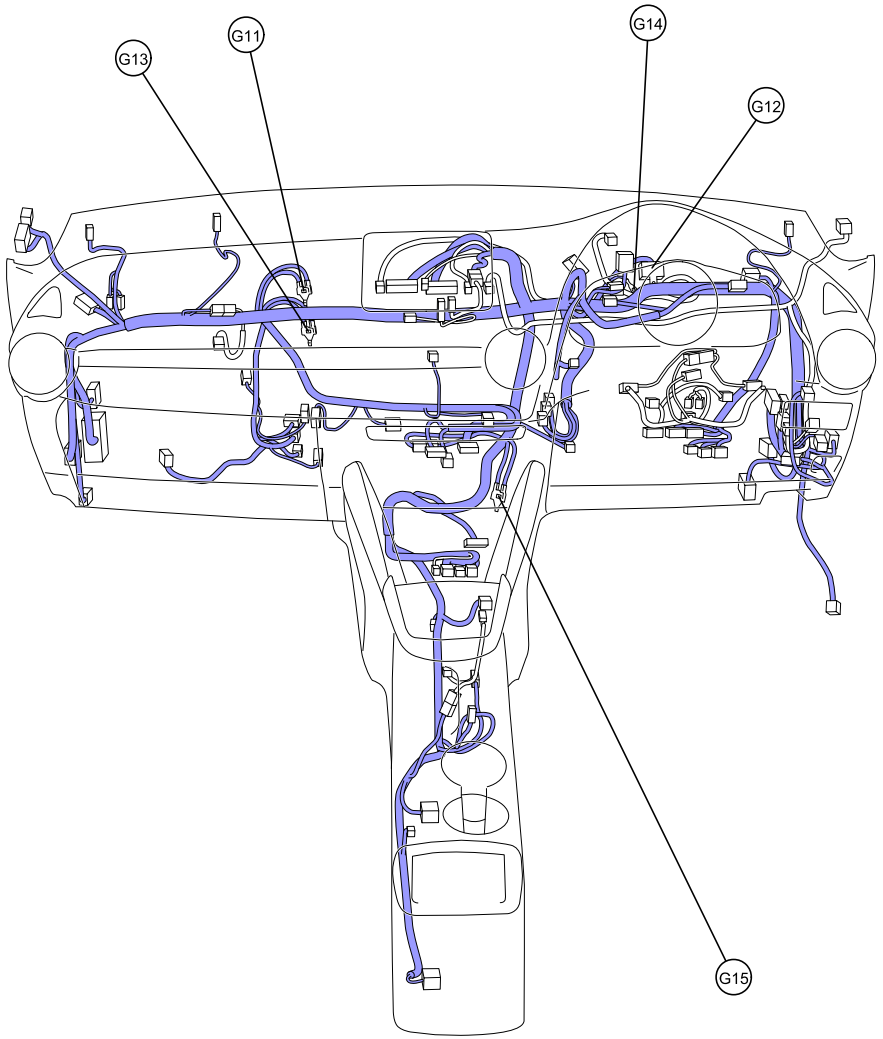

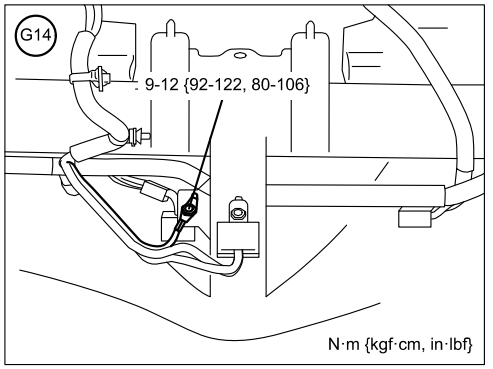

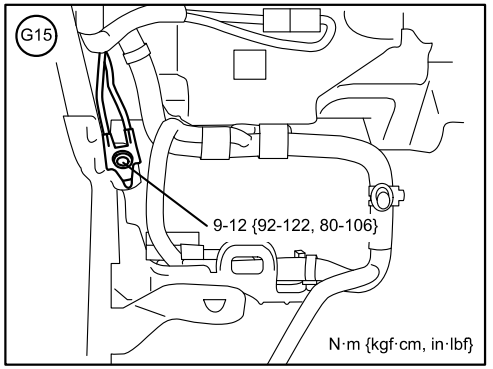

: INSTRUMENT PANEL HARNESS