







G01	G02	G03	G04	G05		
						


00G-2b

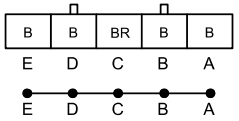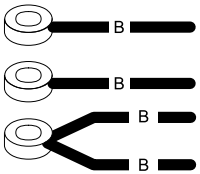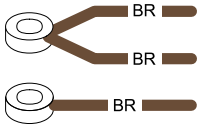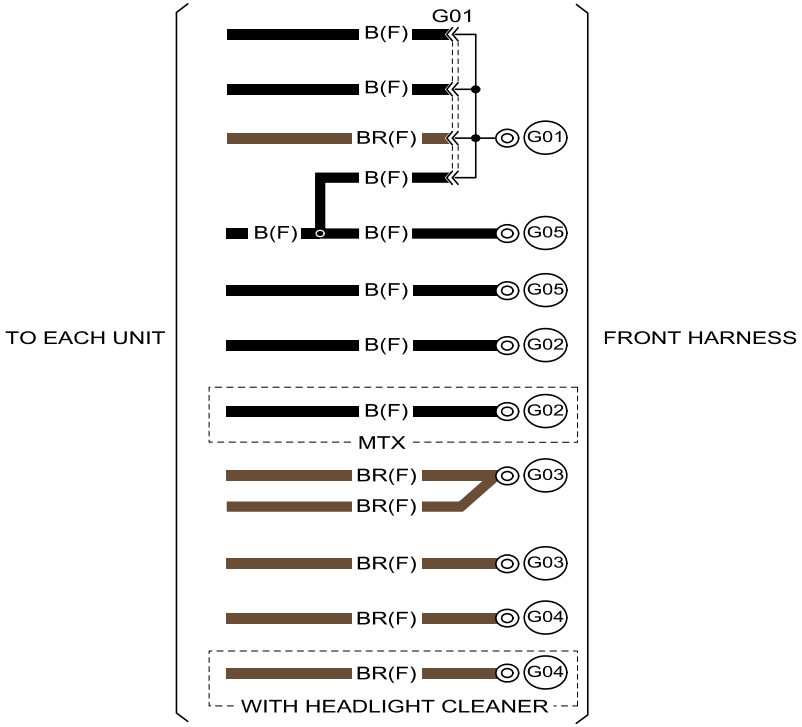



Refer to 00F section for the FUSE BOX, 00C section for the PCM CONNECTOR and COMMON CONNECTOR LIST.

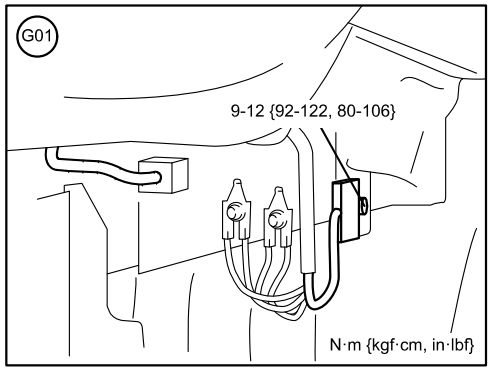


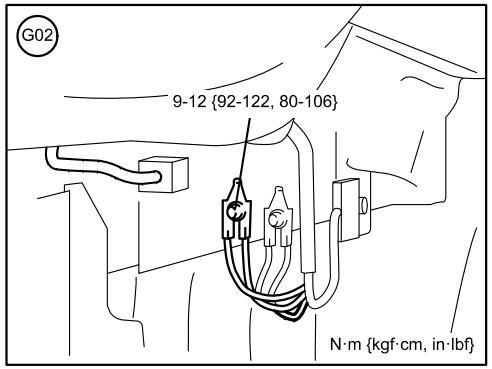

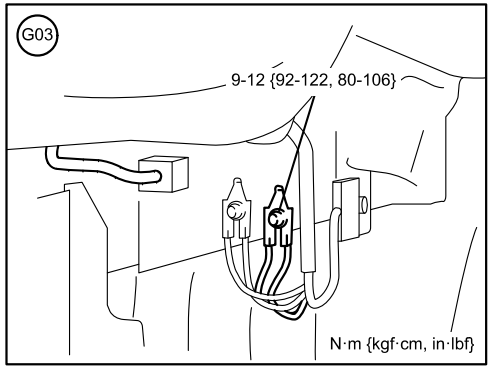

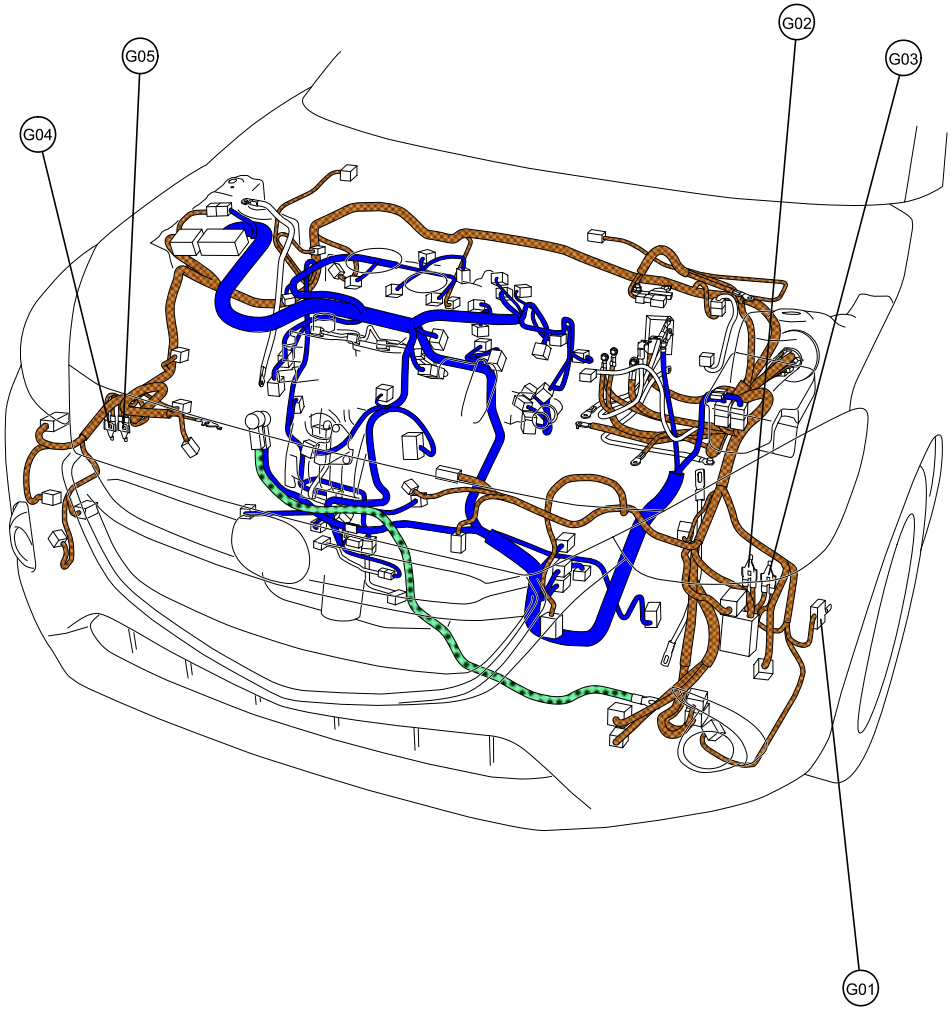

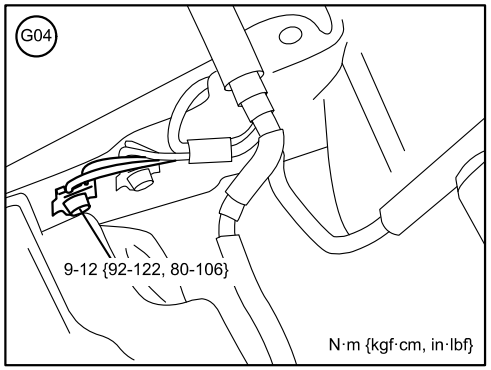

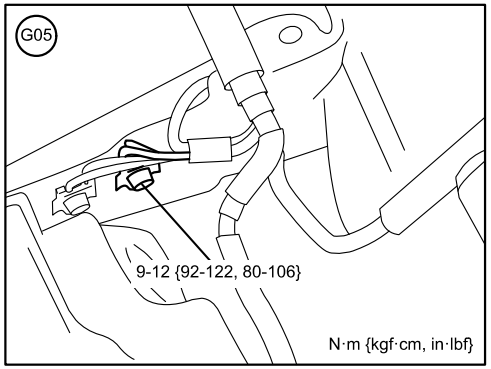

: FRONT HARNESS
: ENGINE No.2 HARNESS
: EMISSION HARNESS