

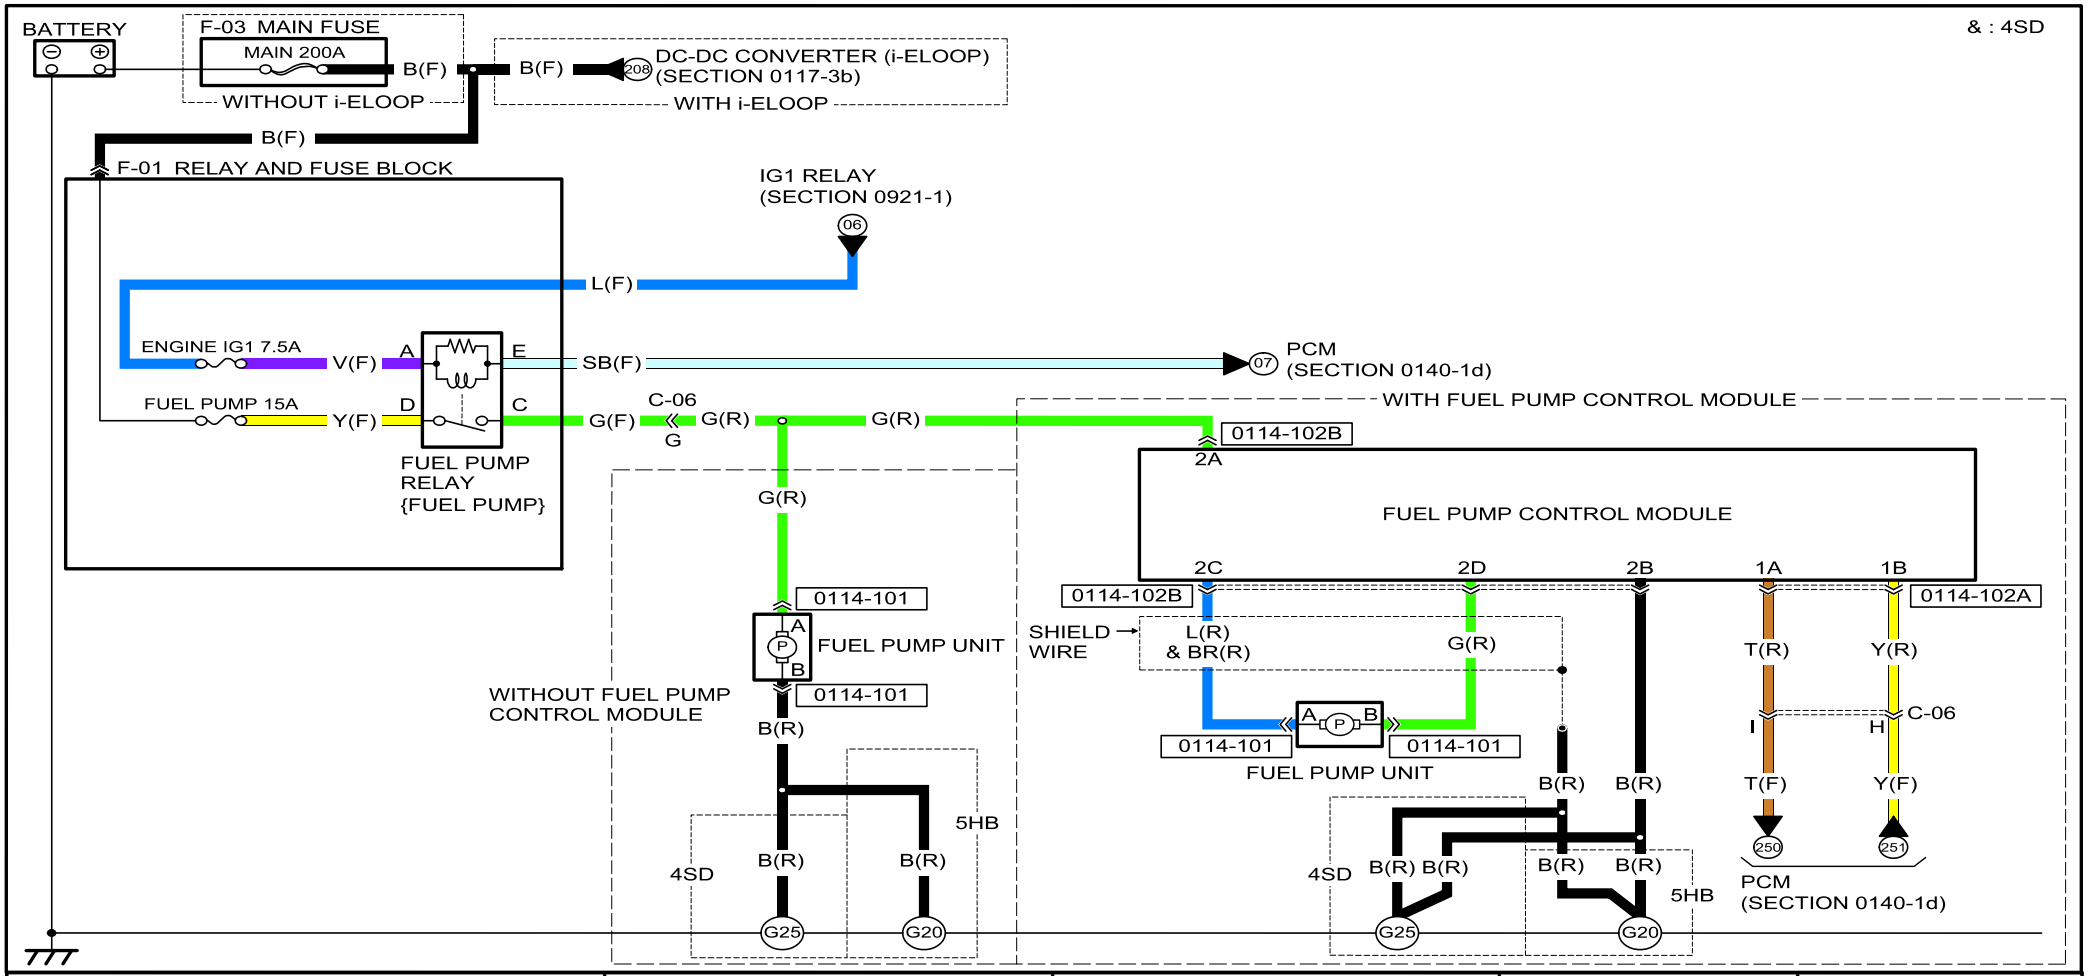



0114-101
FUEL PUMP UNIT /
FUEL GAUGE SENDER UNIT

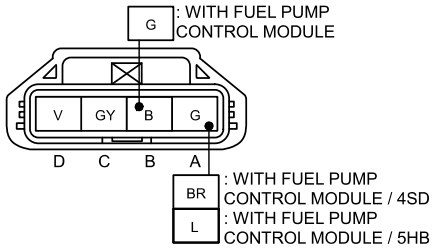


0114-102A
FUEL PUMP CONTROL MODULE

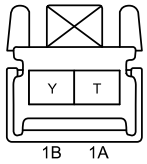



0114-102B
FUEL PUMP CONTROL MODULE

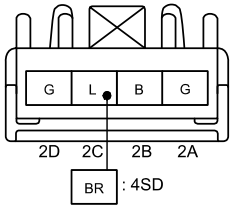


Refer to 00F section for the FUSE BOX, 00C section for the PCM CONNECTOR and COMMON CONNECTOR LIST.

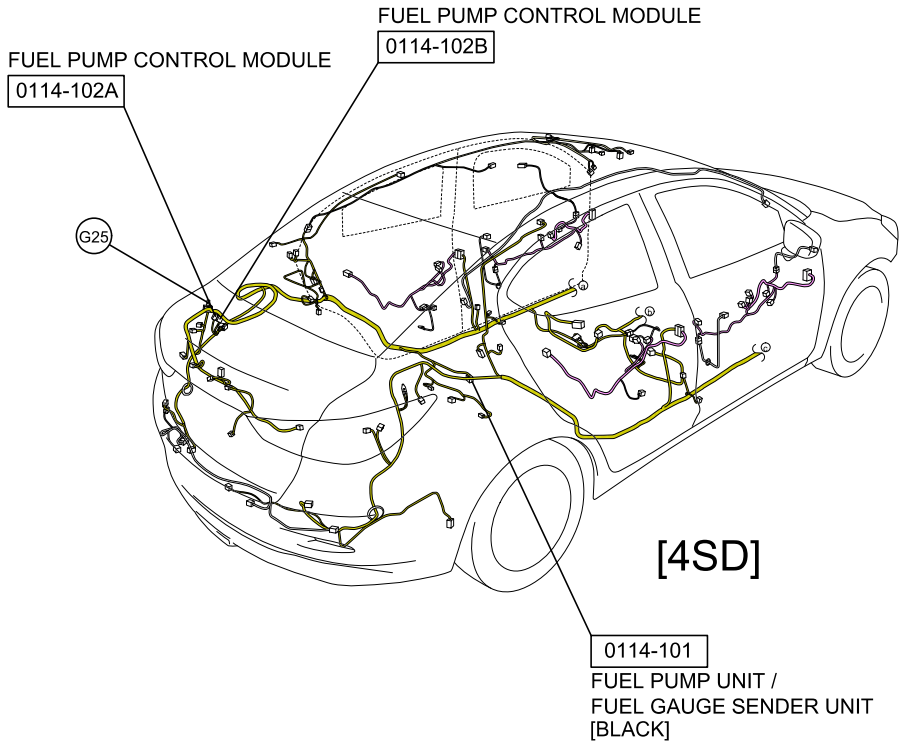

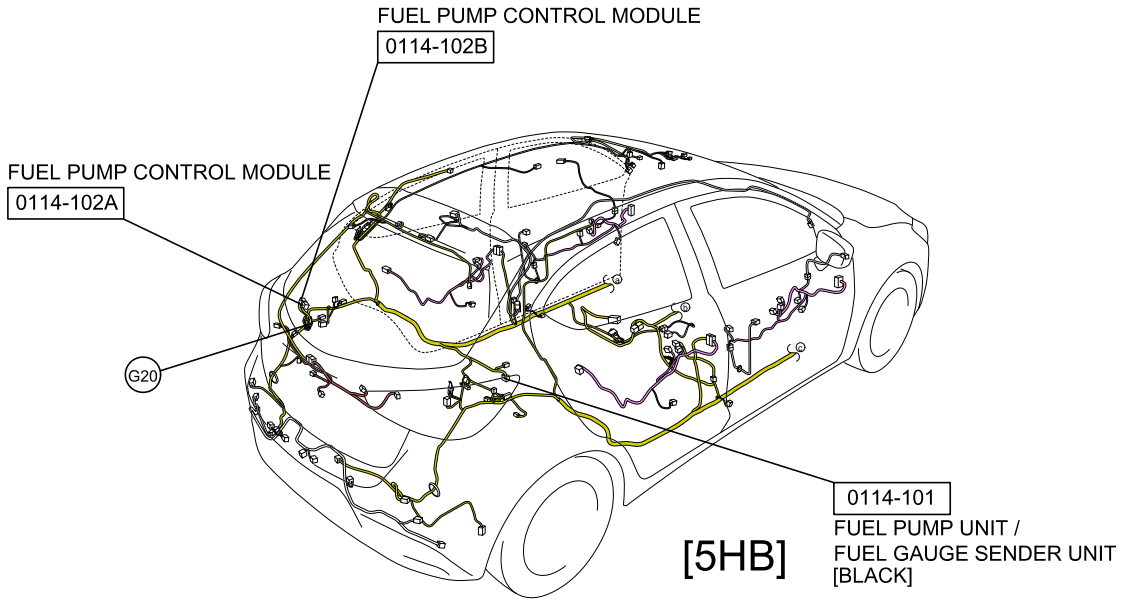

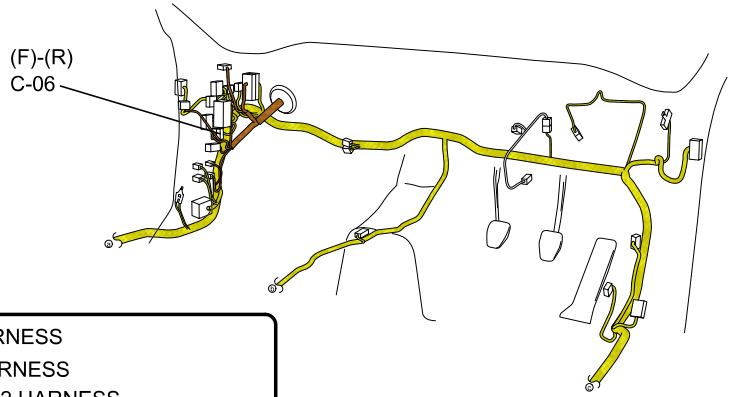

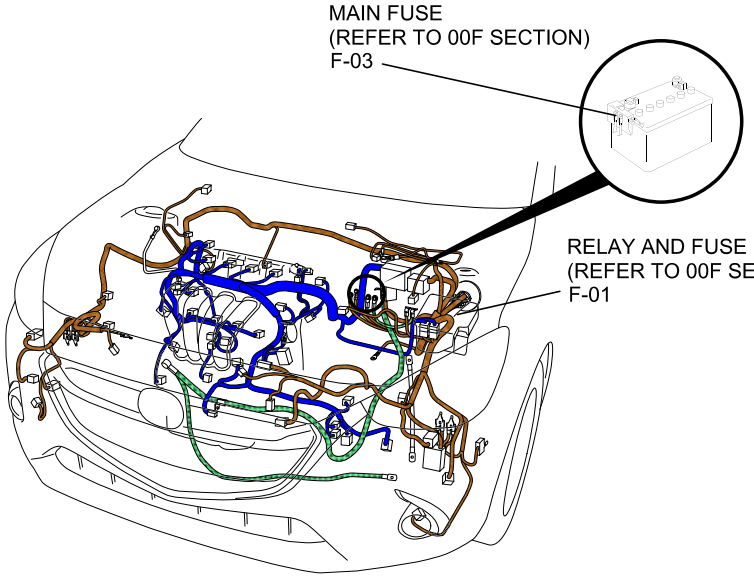

: FRONT HARNESS
: ENGINE HARNESS
ENGINE No.2 HARNESS
: REAR HARNESS
: REAR No.2 HARNESS
: EMISSION HARNESS
: DOOR HARNESS
: INTERIOR LIGHT HARNESS
INTERIOR LIGHT No.2 HARNESS