

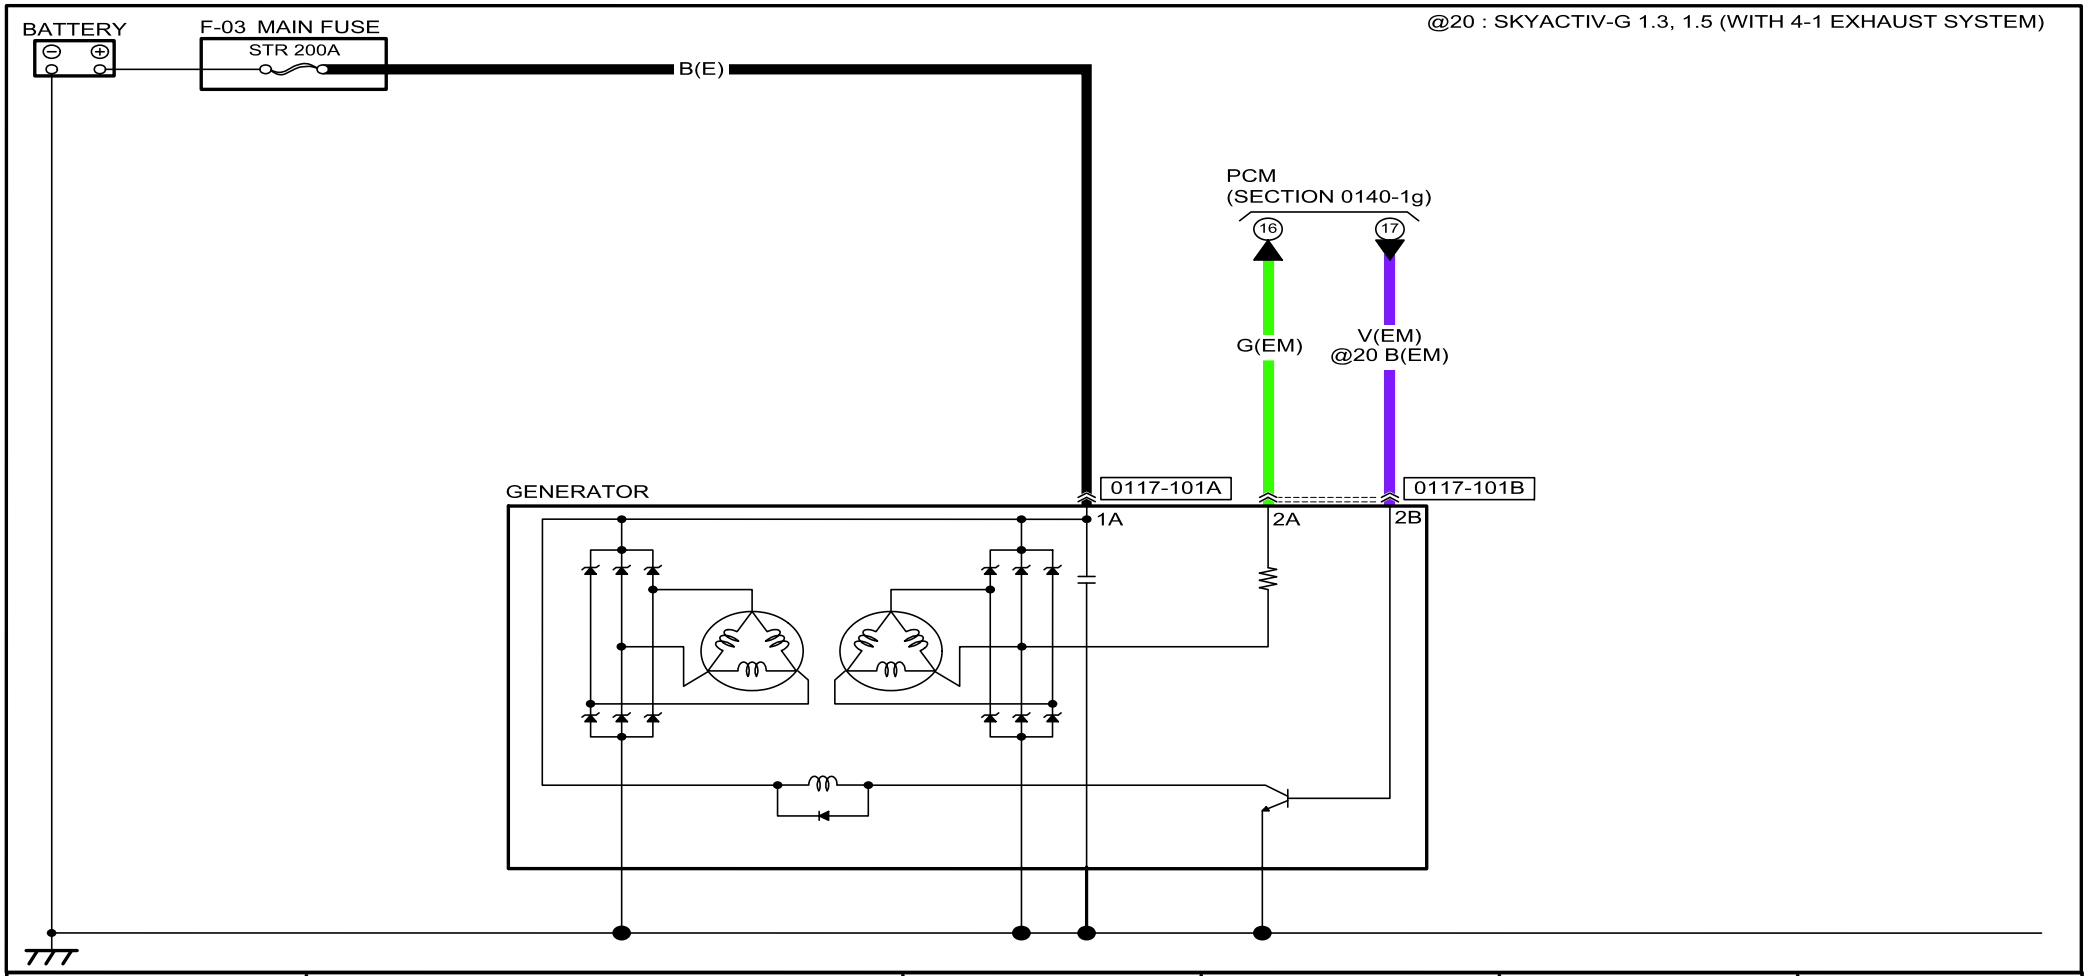



0117-101A
GENERATOR



0117-101B
GENERATOR

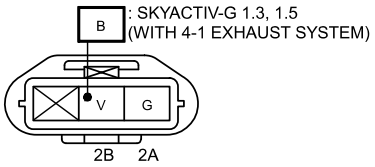

Refer to 00F section for the FUSE BOX, 00C section for the PCM CONNECTOR and COMMON CONNECTOR LIST.

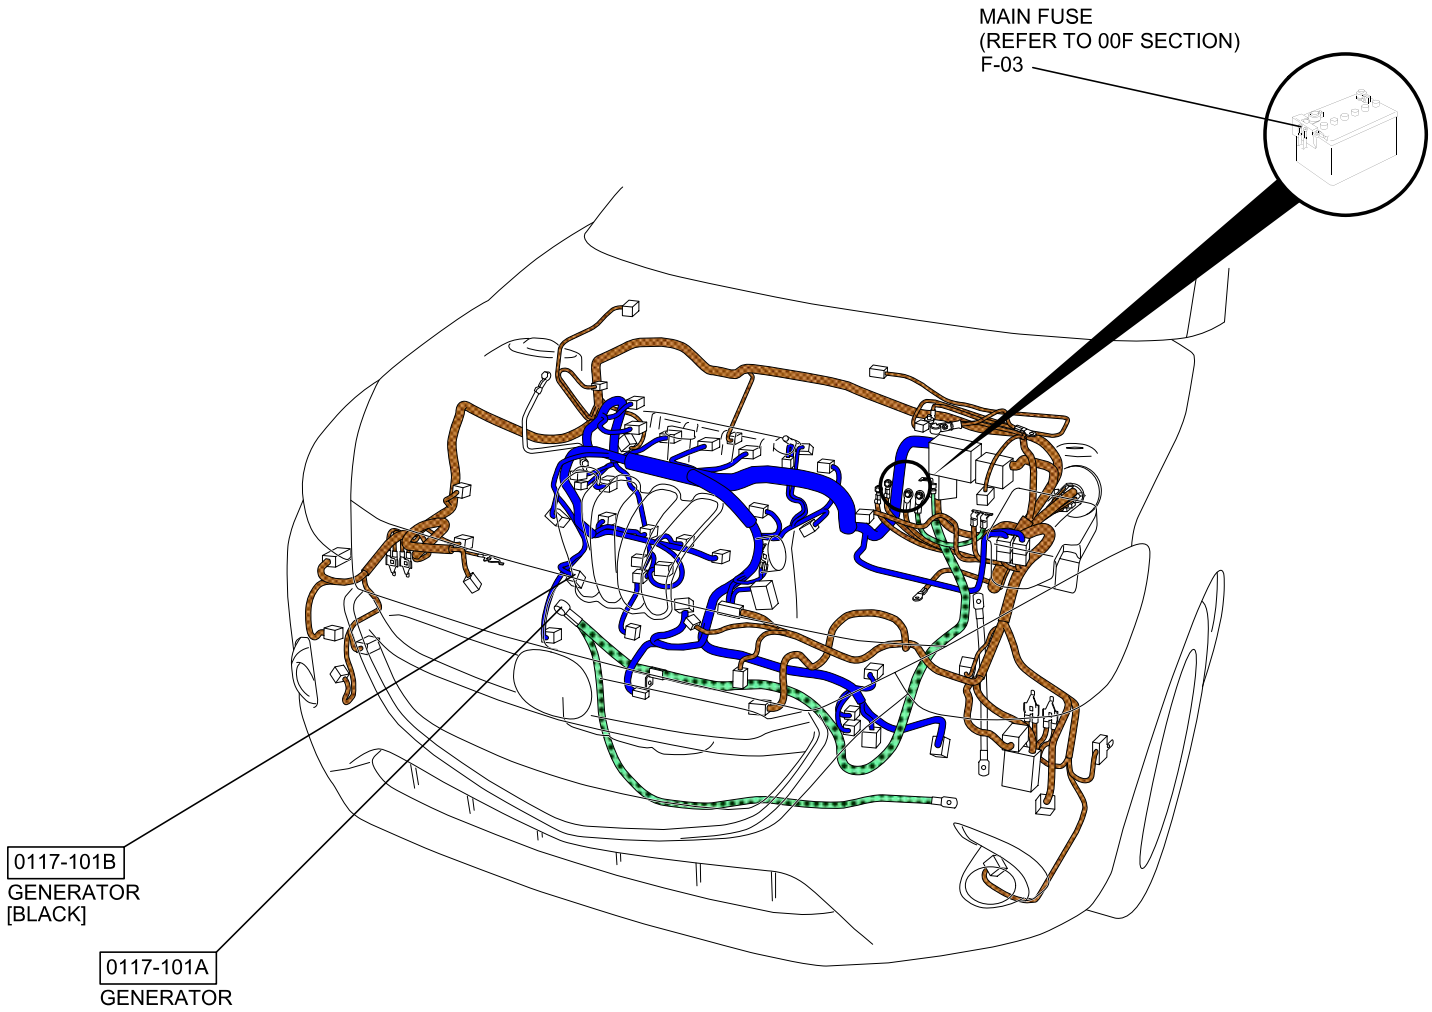
MAIN FUSE
(REFER TO 00F SECTION)
F-03
0117-101B
GENERATOR
[BLACK]
0117-101A
GENERATOR
: FRONT HARNESS
: ENGINE HARNESS
ENGINE No.2 HARNESS
: EMISSION HARNESS