




0117-201A
GENERATOR

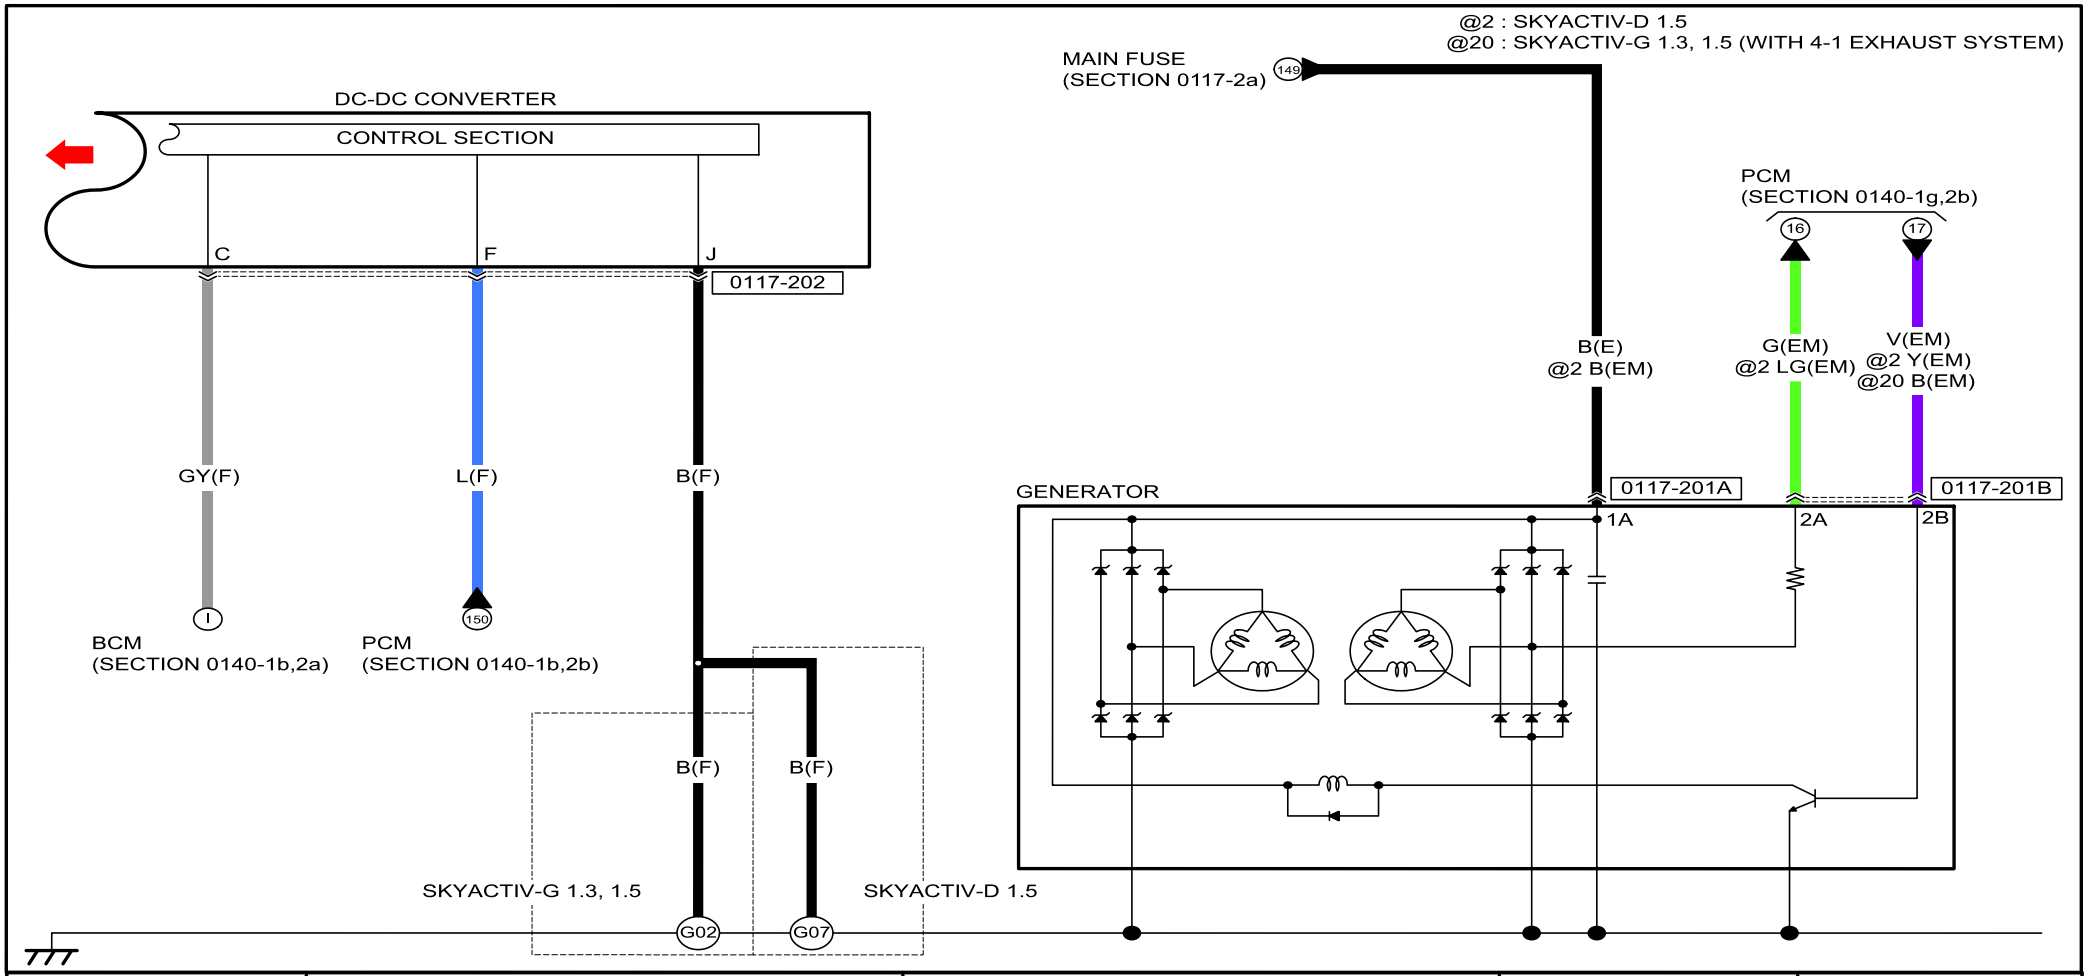


0117-201B
GENERATOR

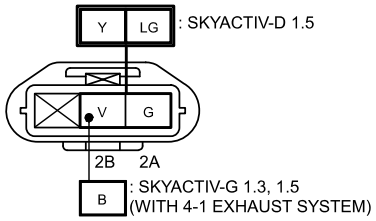


0117-202
DC-DC CONVERTER

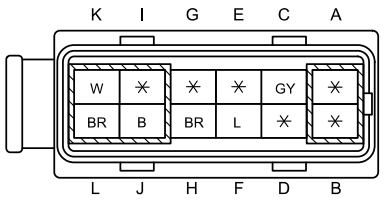

Refer to 00F section for the FUSE BOX, 00C section for the PCM CONNECTOR and COMMON CONNECTOR LIST.

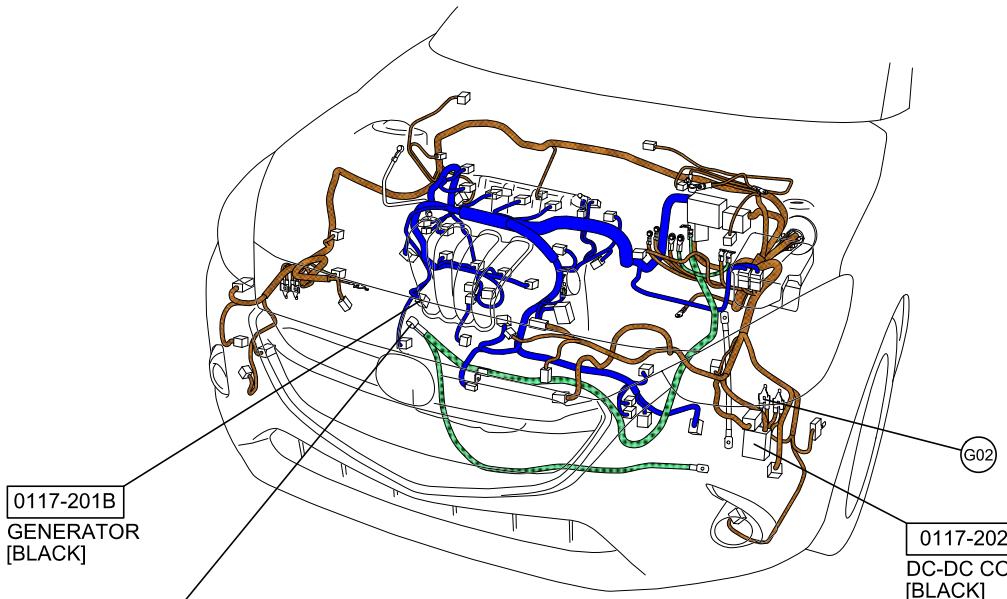

[SKYACTIV-G 1.3, 1.5]

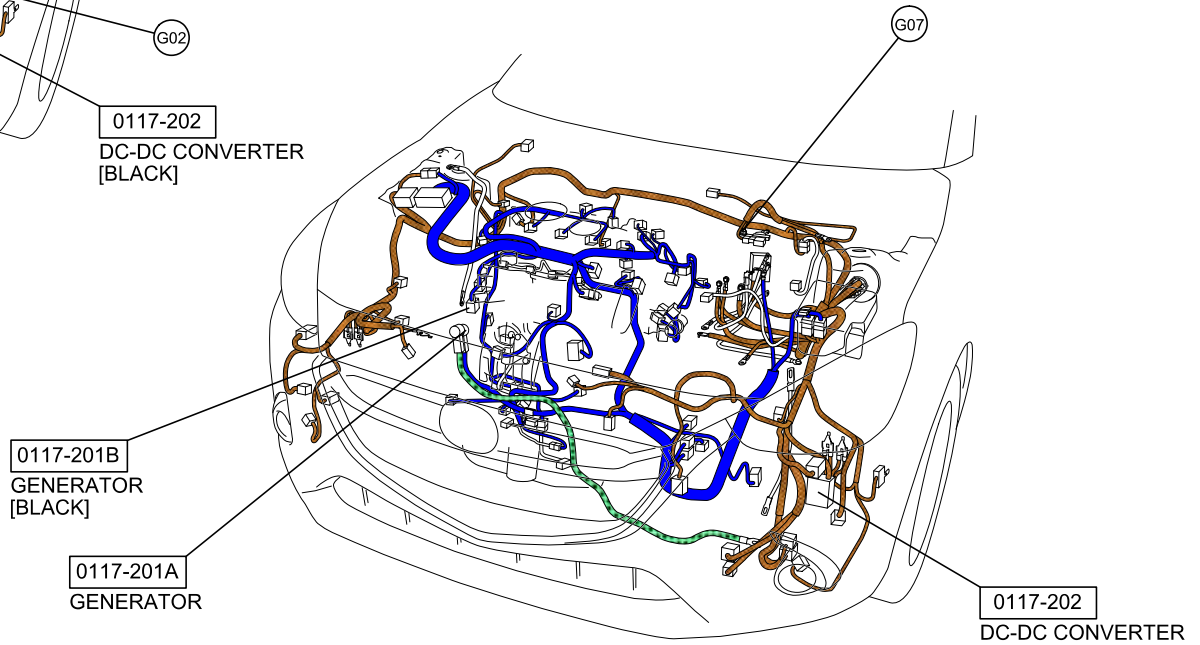

[SKYACTIV-D 1.5]

: FRONT HARNESS
: ENGINE HARNESS
ENGINE No.2 HARNESS
: EMISSION HARNESS