
CRUISE CONTROL SYSTEM (SKYACTIV-G 1.3, 1.5, SKYACTIV-D 1.5)

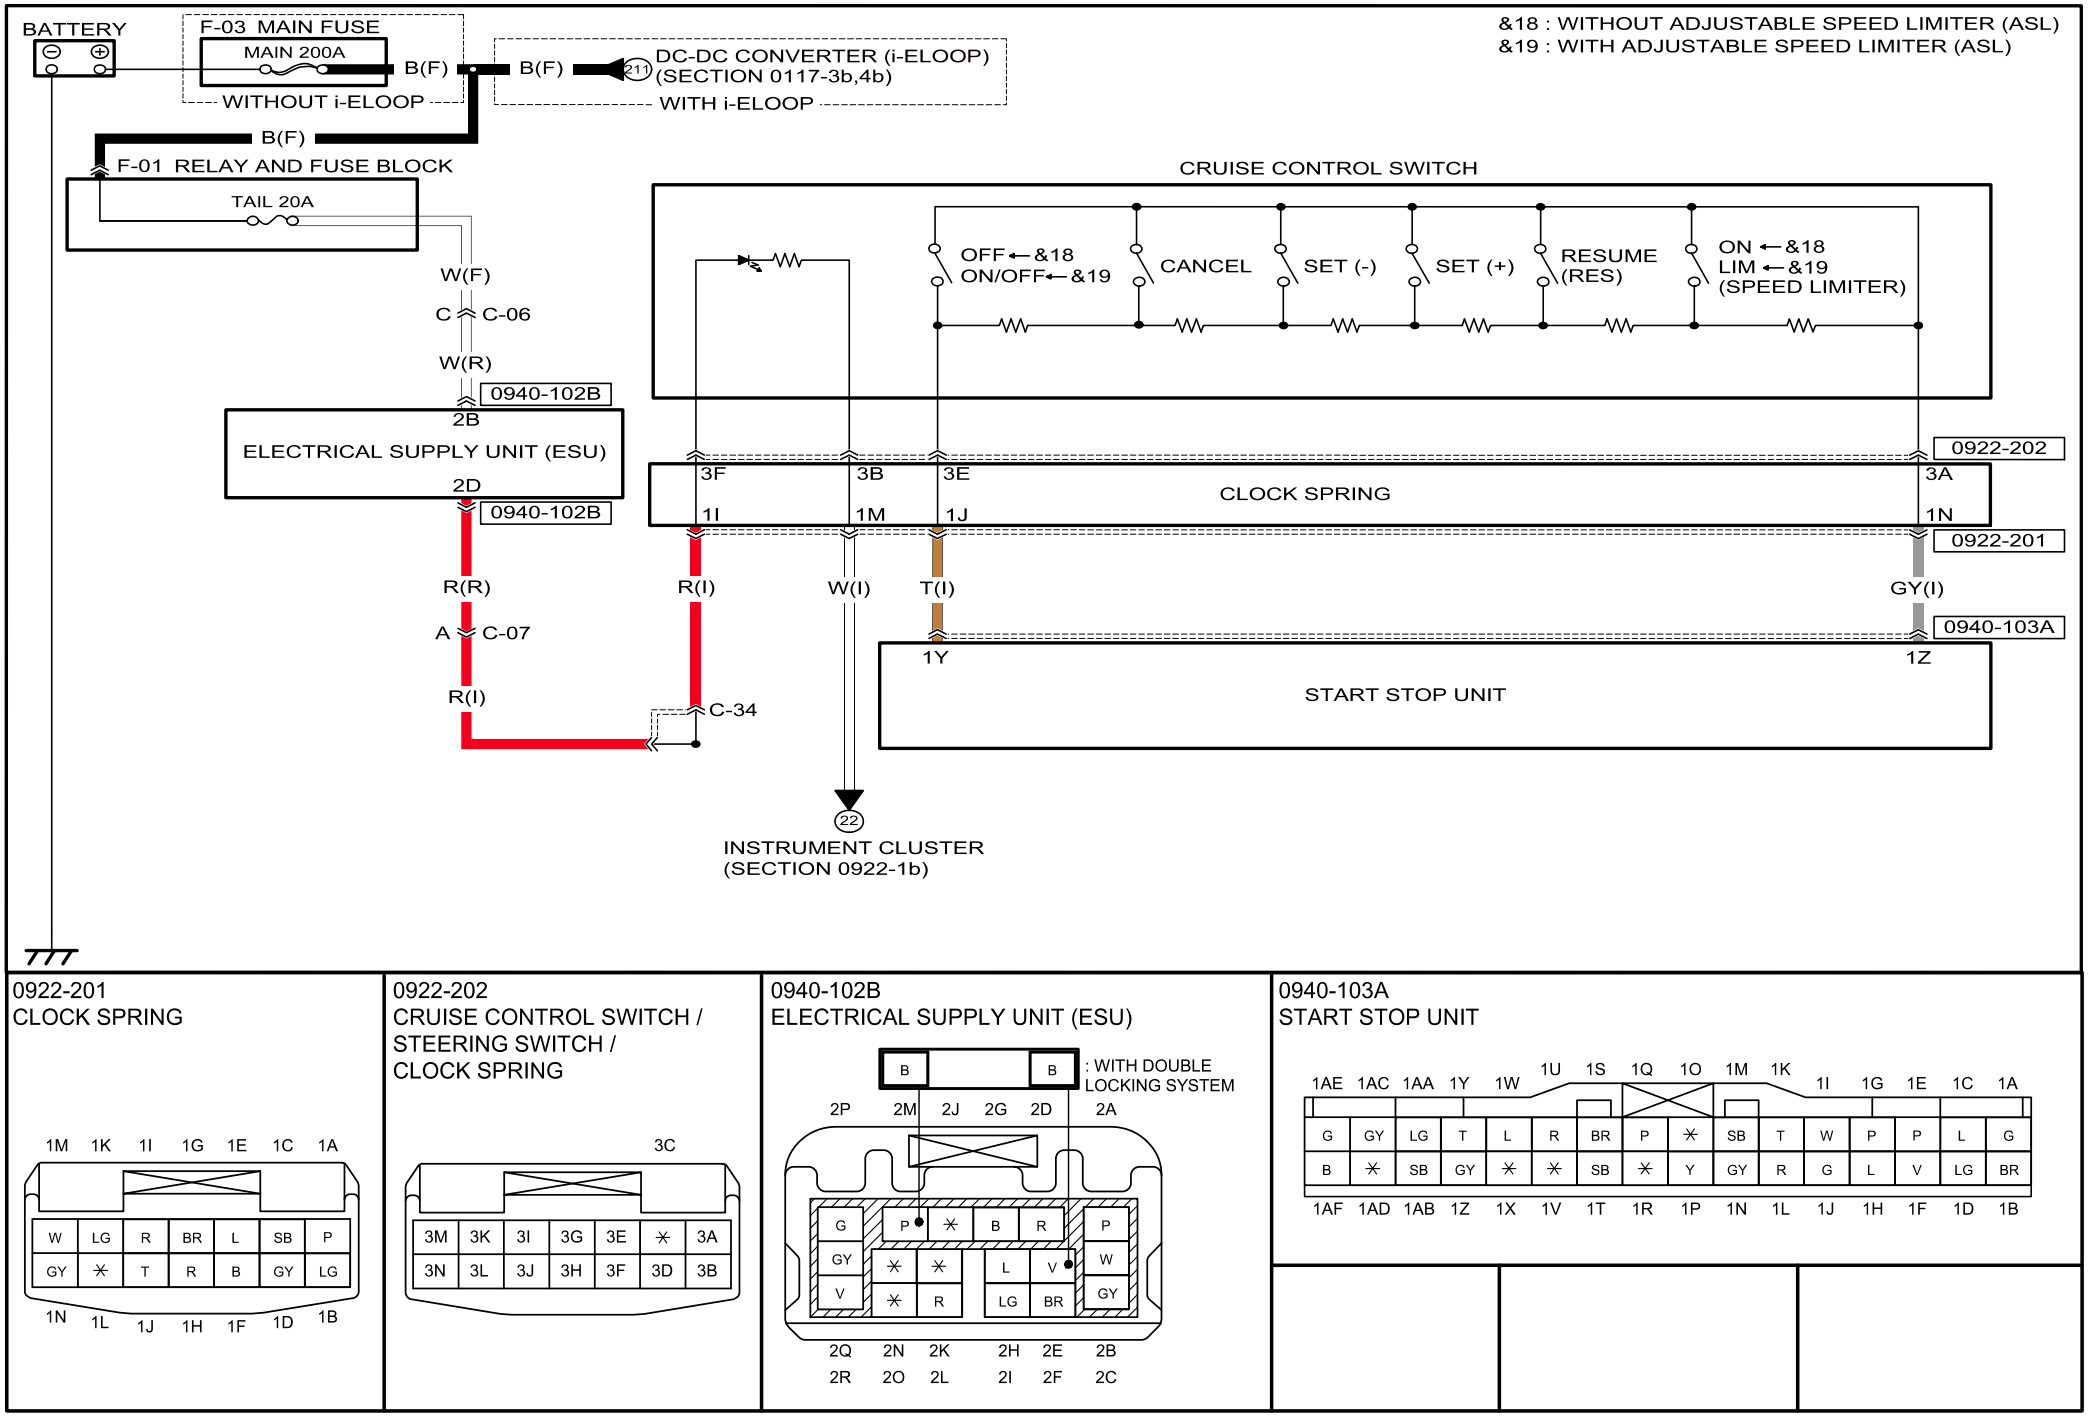


0922-201
CLOCK SPRING

0922-202
CRUISE CONTROL SWITCH /
STEERING SWITCH /
CLOCK SPRING


0940-102B
ELECTRICAL SUPPLY UNIT (ESU)

0940-103A
START STOP UNIT


Refer to 00F section for the FUSE BOX, 00C section for the PCM CONNECTOR and COMMON CONNECTOR LIST.

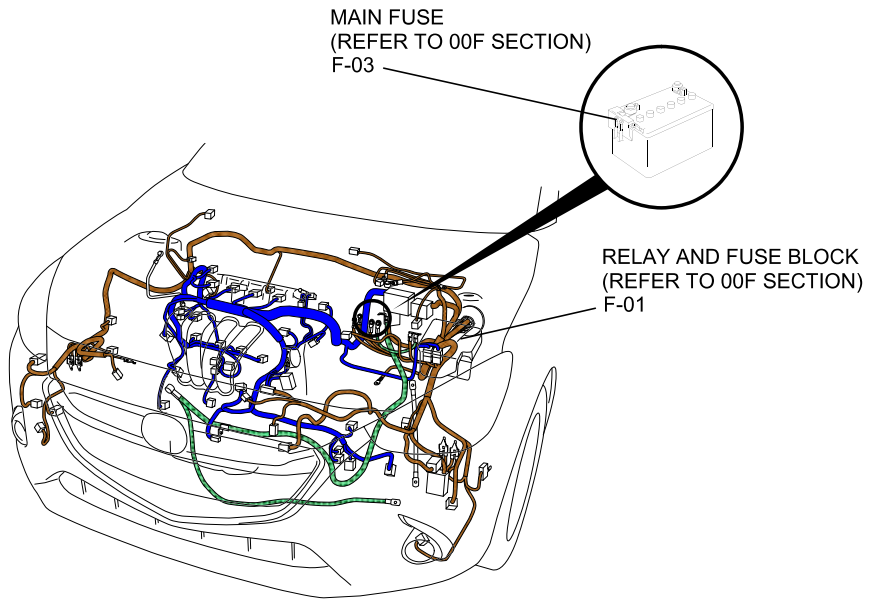


[SKYACTIV-G 1.3, 1.5]

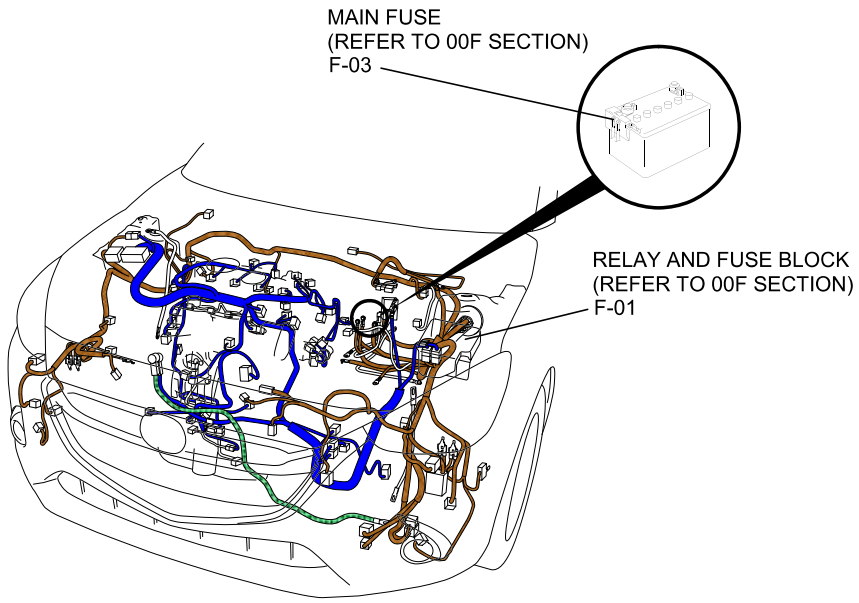

[SKYACTIV-D 1.5]

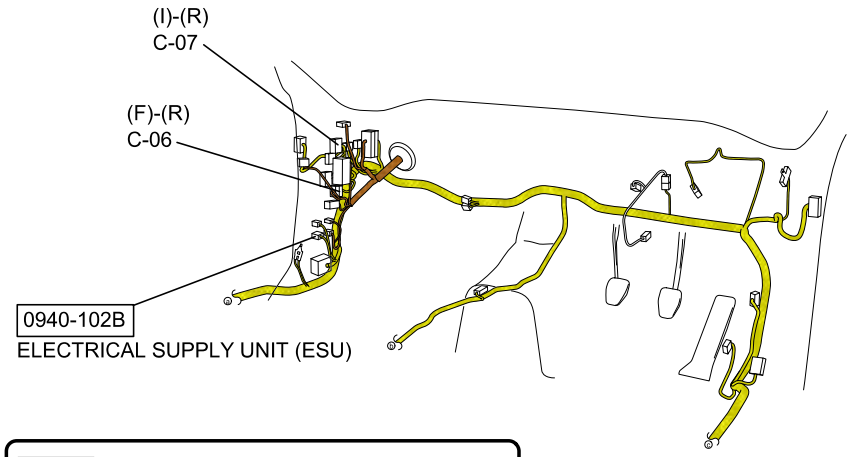

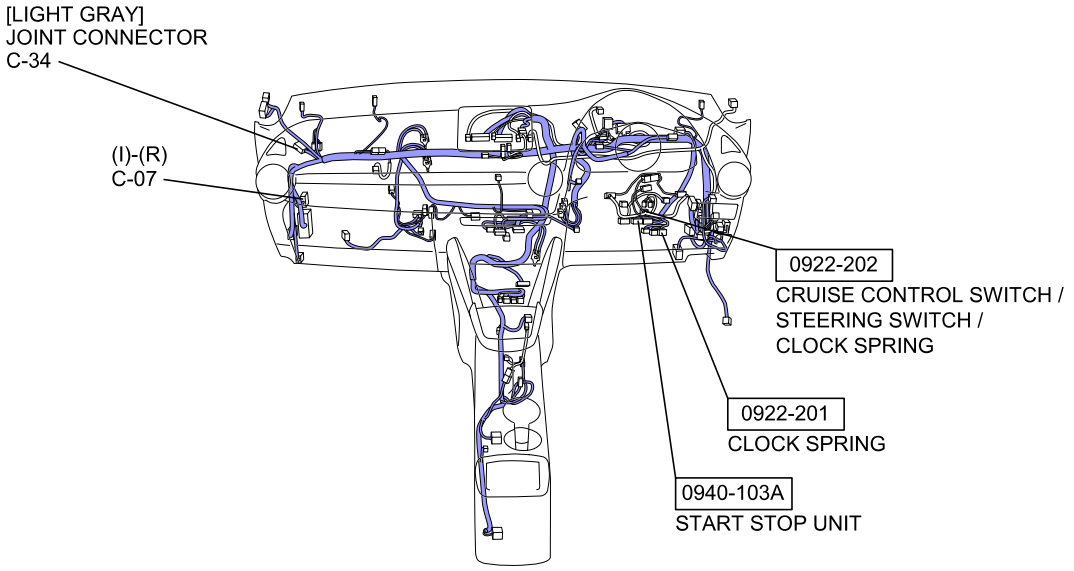

: FRONT HARNESS
: ENGINE HARNESS
ENGINE No.2 HARNESS
: REAR HARNESS
: INSTRUMENT PANEL HARNESS
: EMISSION HARNESS