
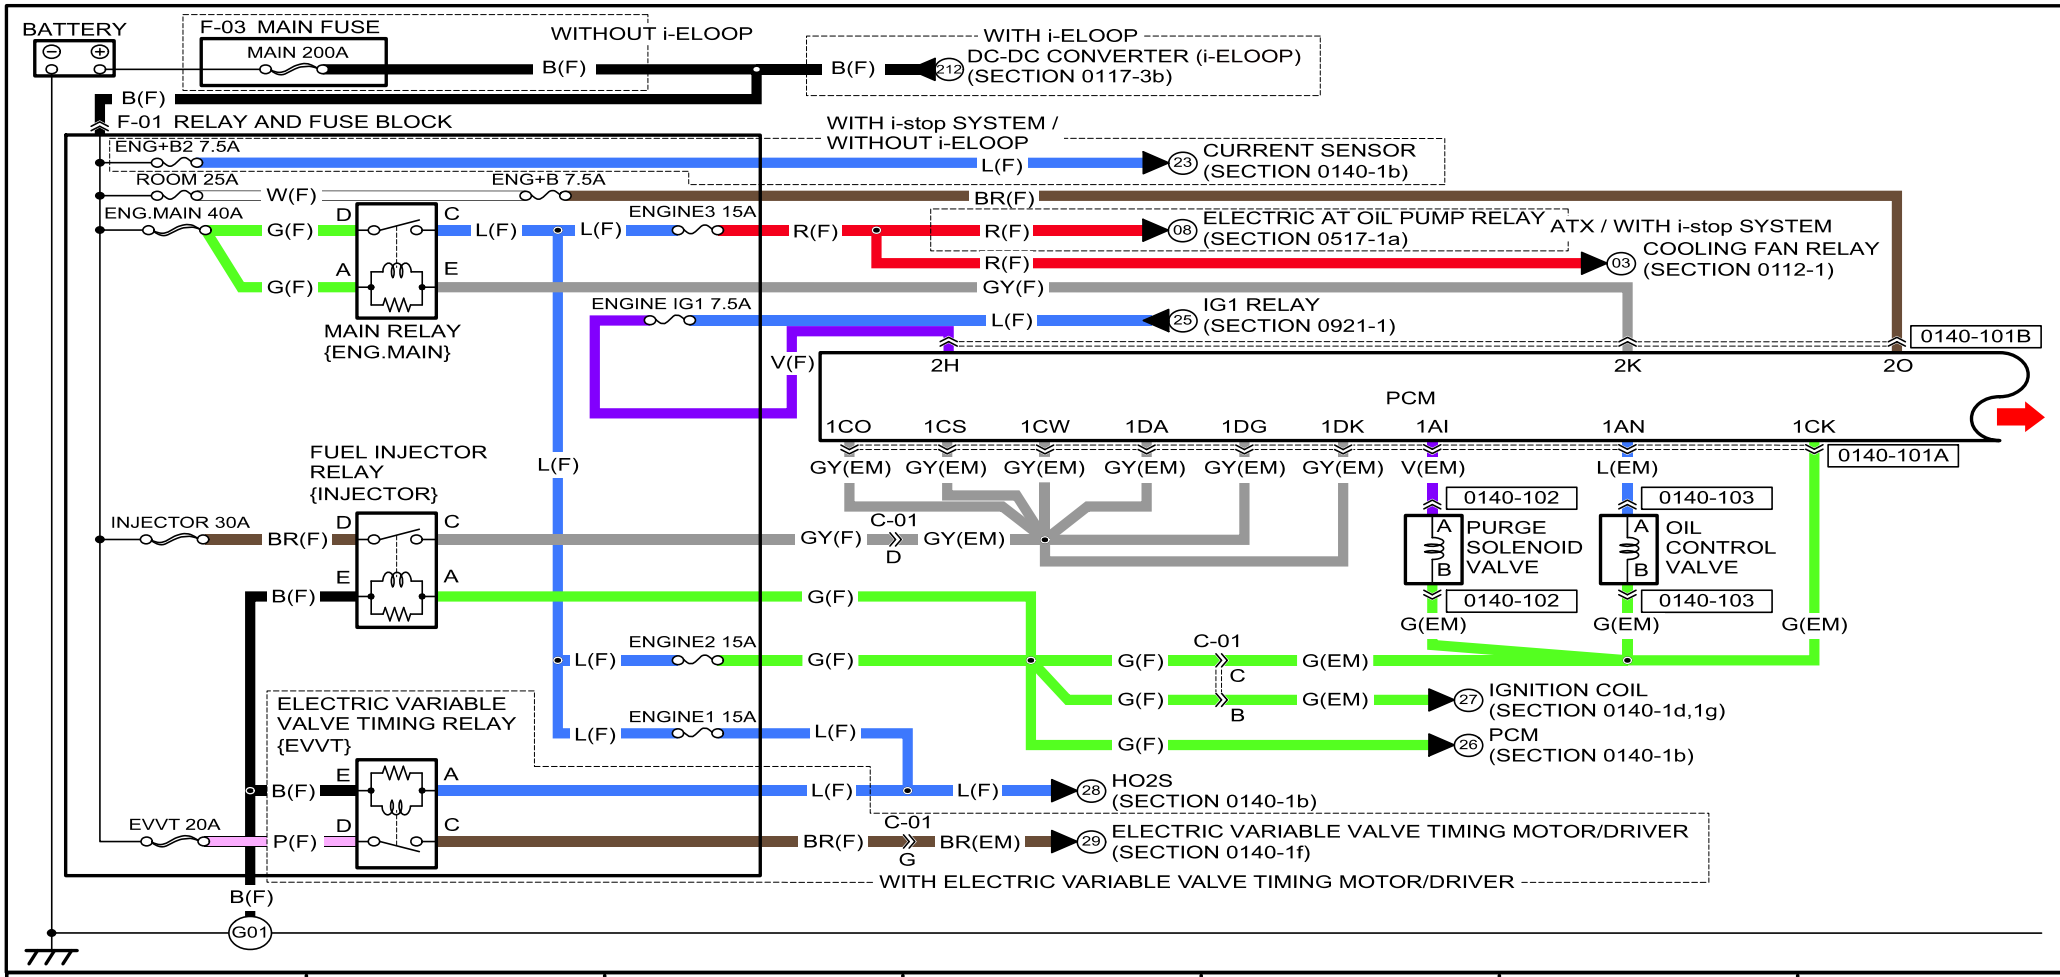

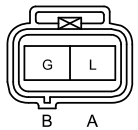


0140-102 PURGE SOLENOID VALVE	0140-103 OIL CONTROL VALVE					
						

Refer to 00F section for the FUSE BOX, 00C section for the PCM CONNECTOR and COMMON CONNECTOR LIST.

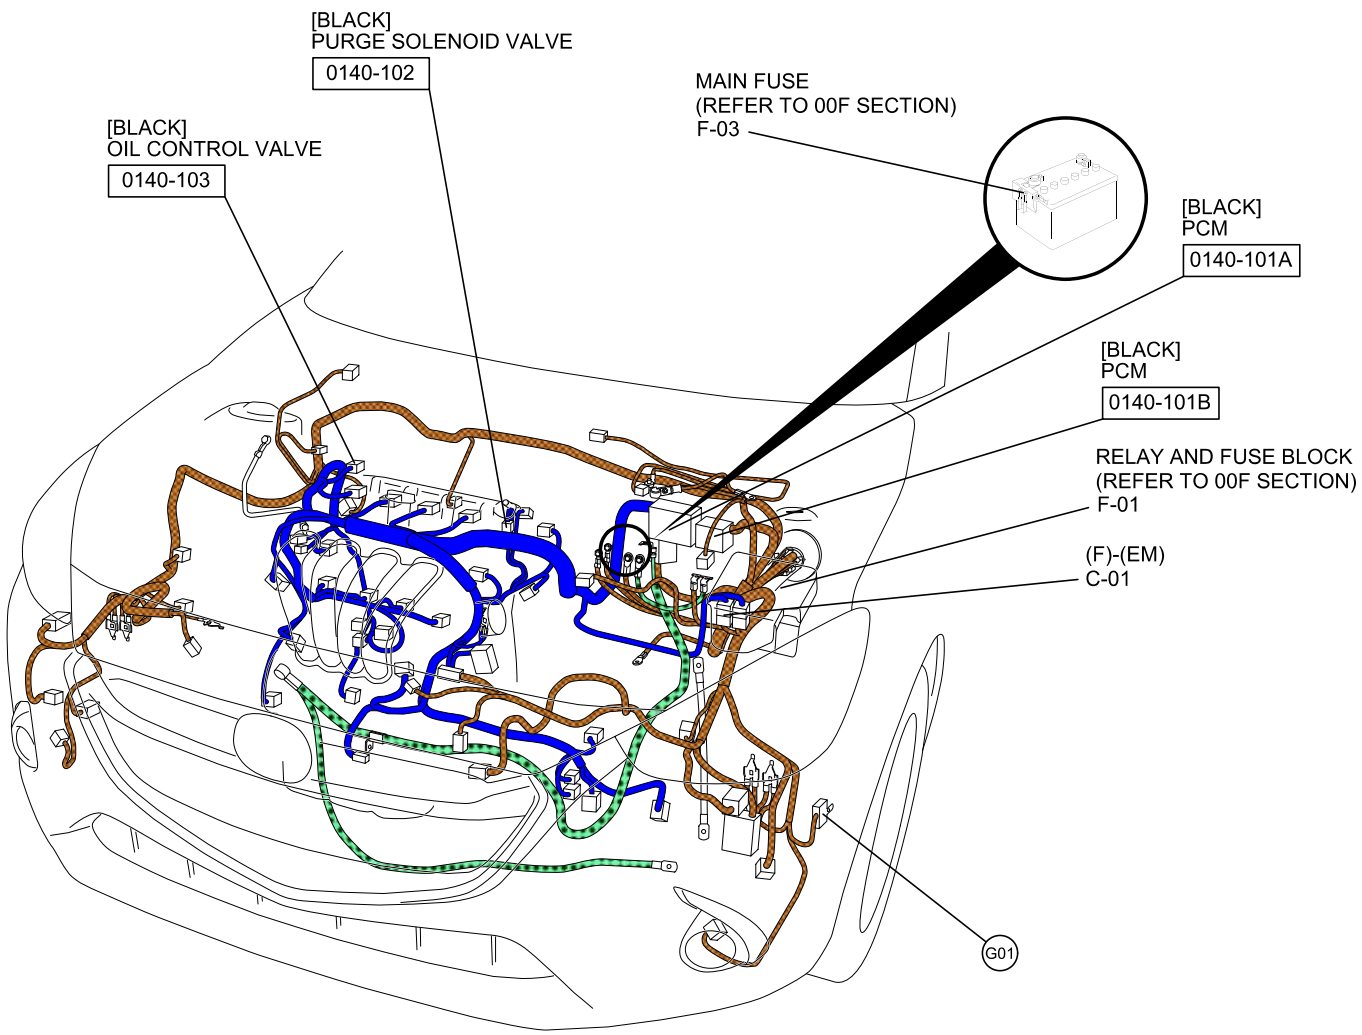

: FRONT HARNESS
: ENGINE HARNESS
ENGINE No.2 HARNESS
: EMISSION HARNESS