


: BARE WIRE

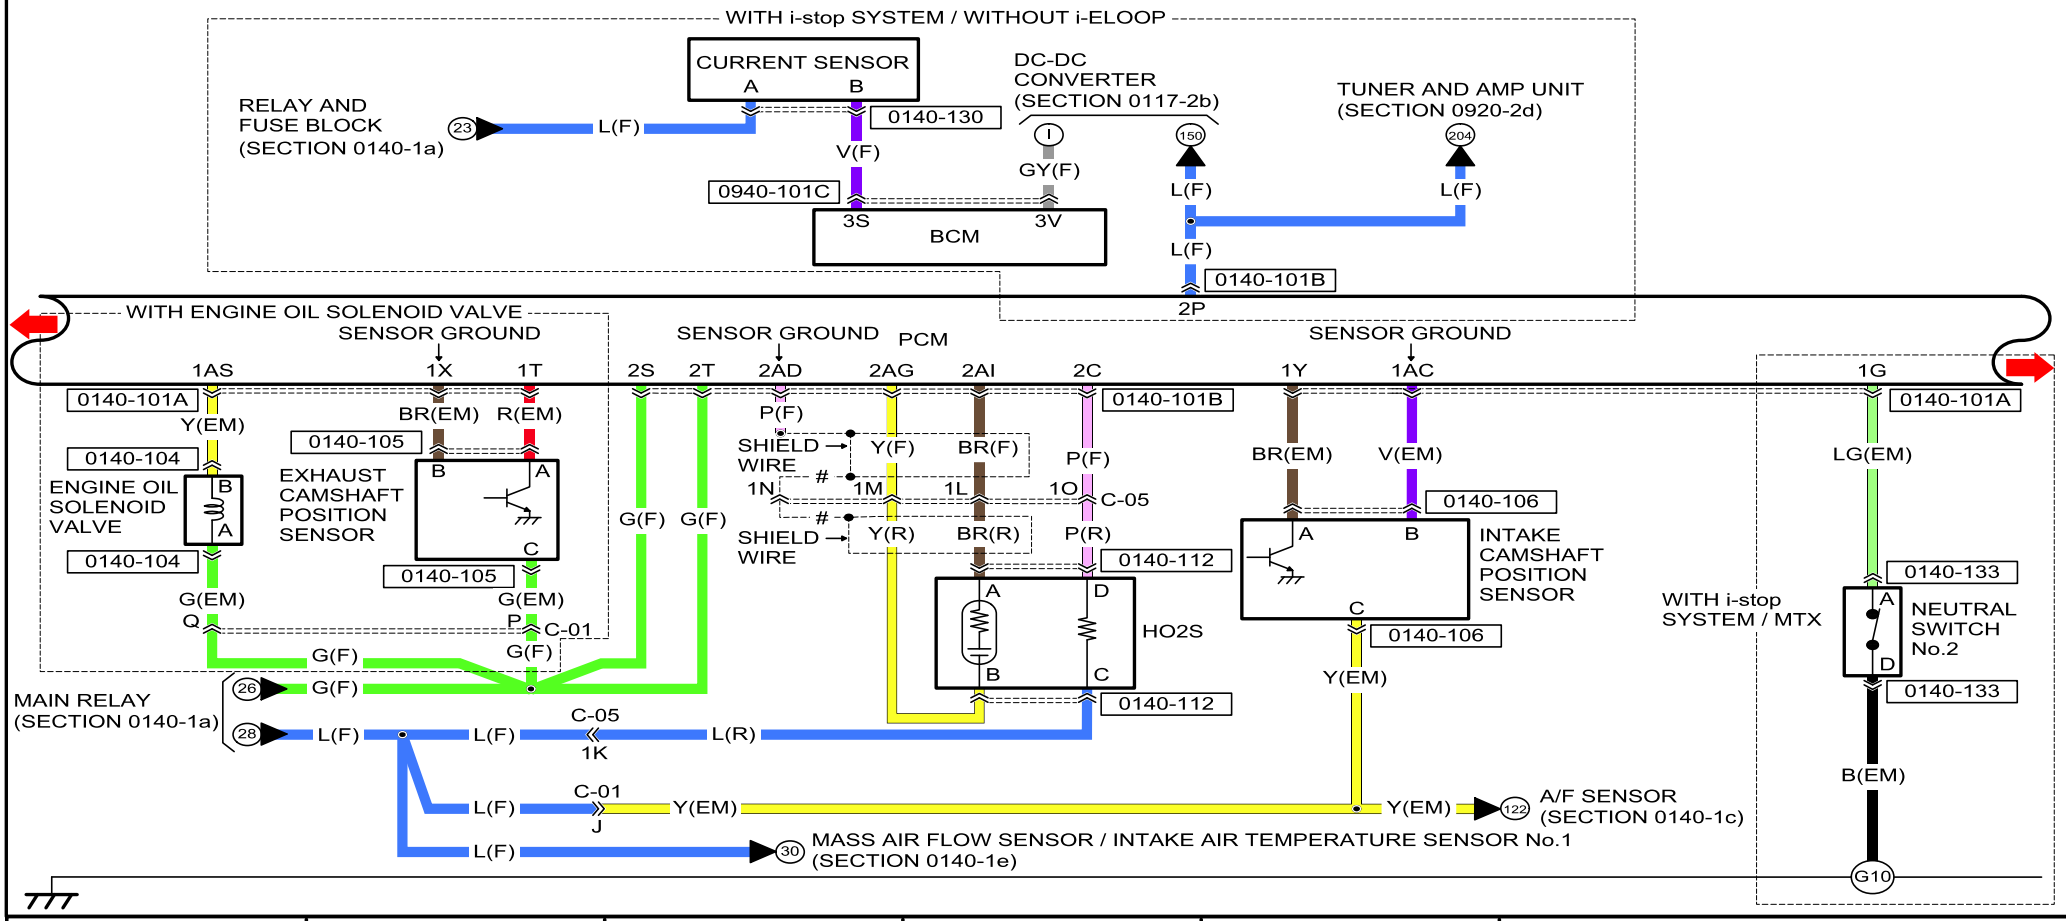


0140-104
ENGINE OIL SOLENOID VALVE




0140-105
EXHAUST CAMSHAFT POSITION SENSOR



0140-106
INTAKE CAMSHAFT POSITION SENSOR




0140-112
HO2S

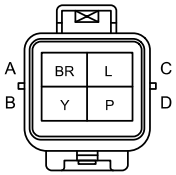


0140-130
CURRENT SENSOR




0940-101C
BCM

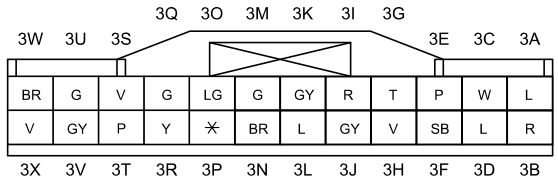


0140-133
NEUTRAL SWITCH No.2

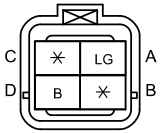


Refer to 00F section for the FUSE BOX, 00C section for the PCM CONNECTOR and COMMON CONNECTOR LIST.

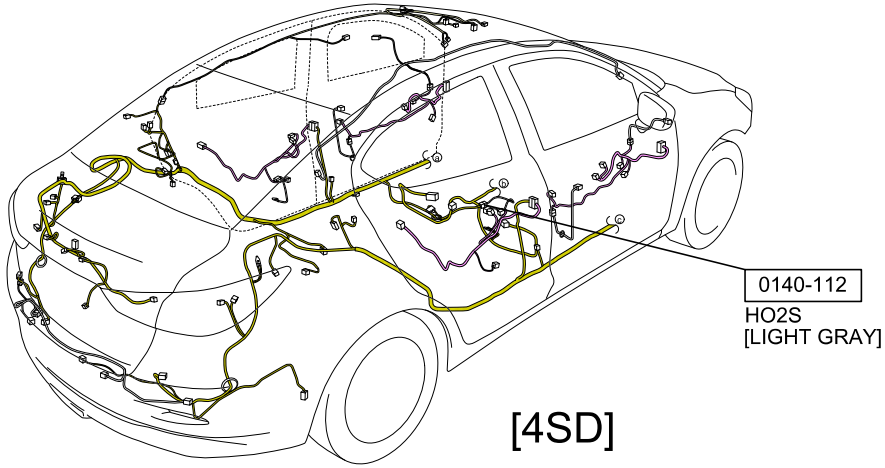


[4SD]

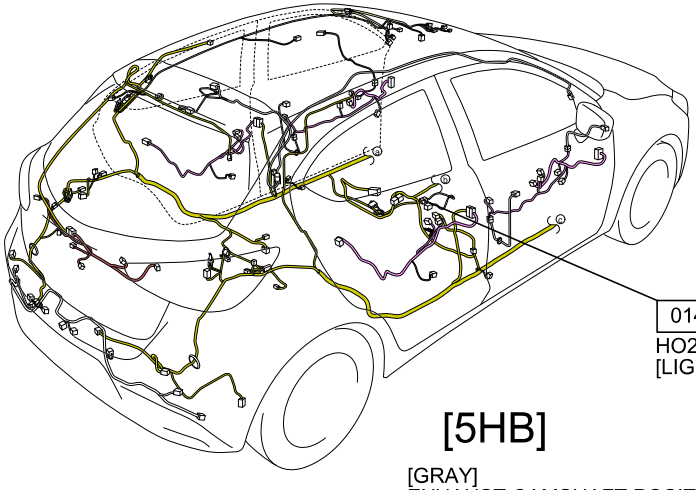

[5HB]

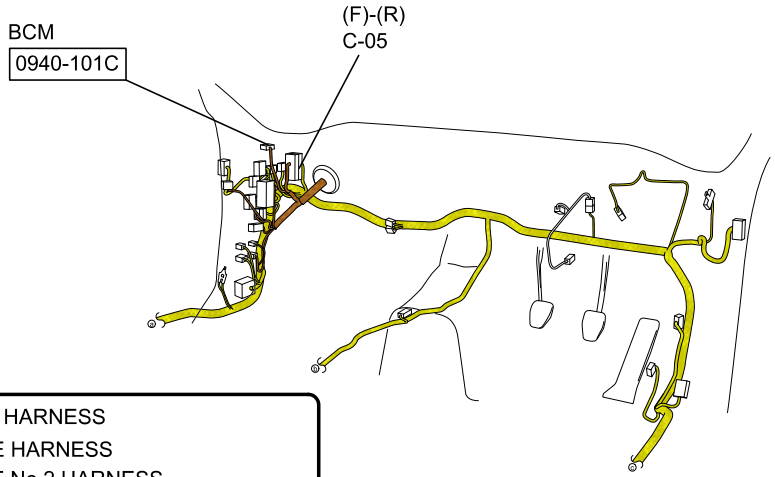

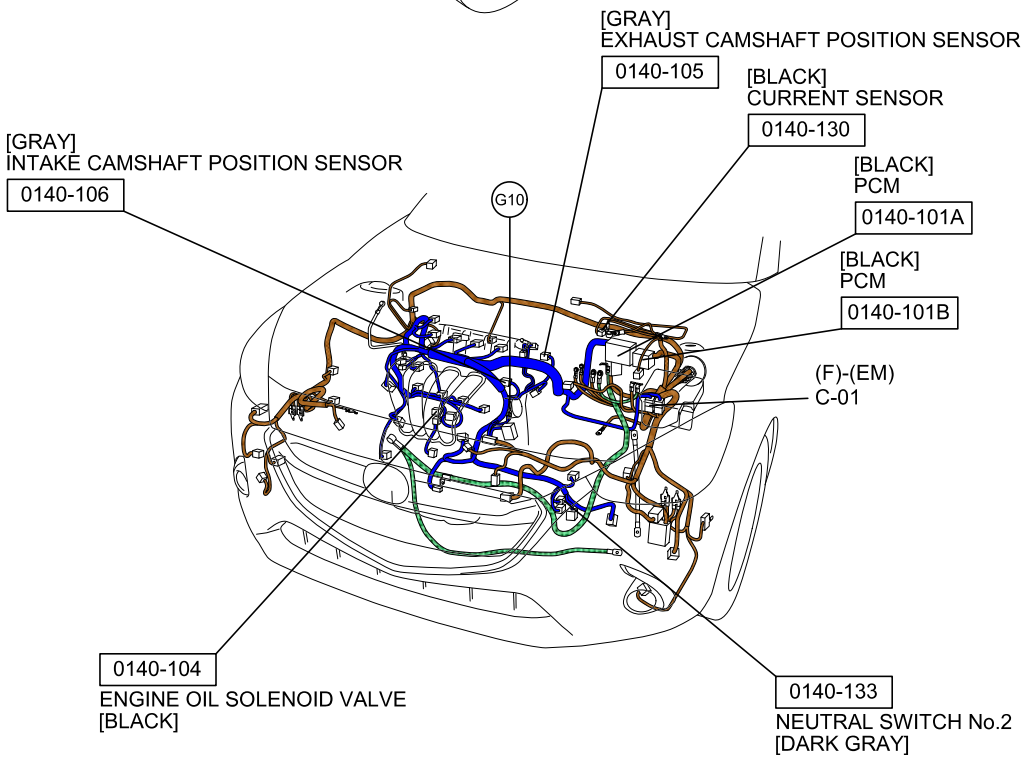

: FRONT HARNESS
: ENGINE HARNESS
ENGINE No.2 HARNESS
: REAR HARNESS
: REAR No.2 HARNESS
: EMISSION HARNESS
: DOOR HARNESS
: INTERIOR LIGHT HARNESS
INTERIOR LIGHT No.2 HARNESS