

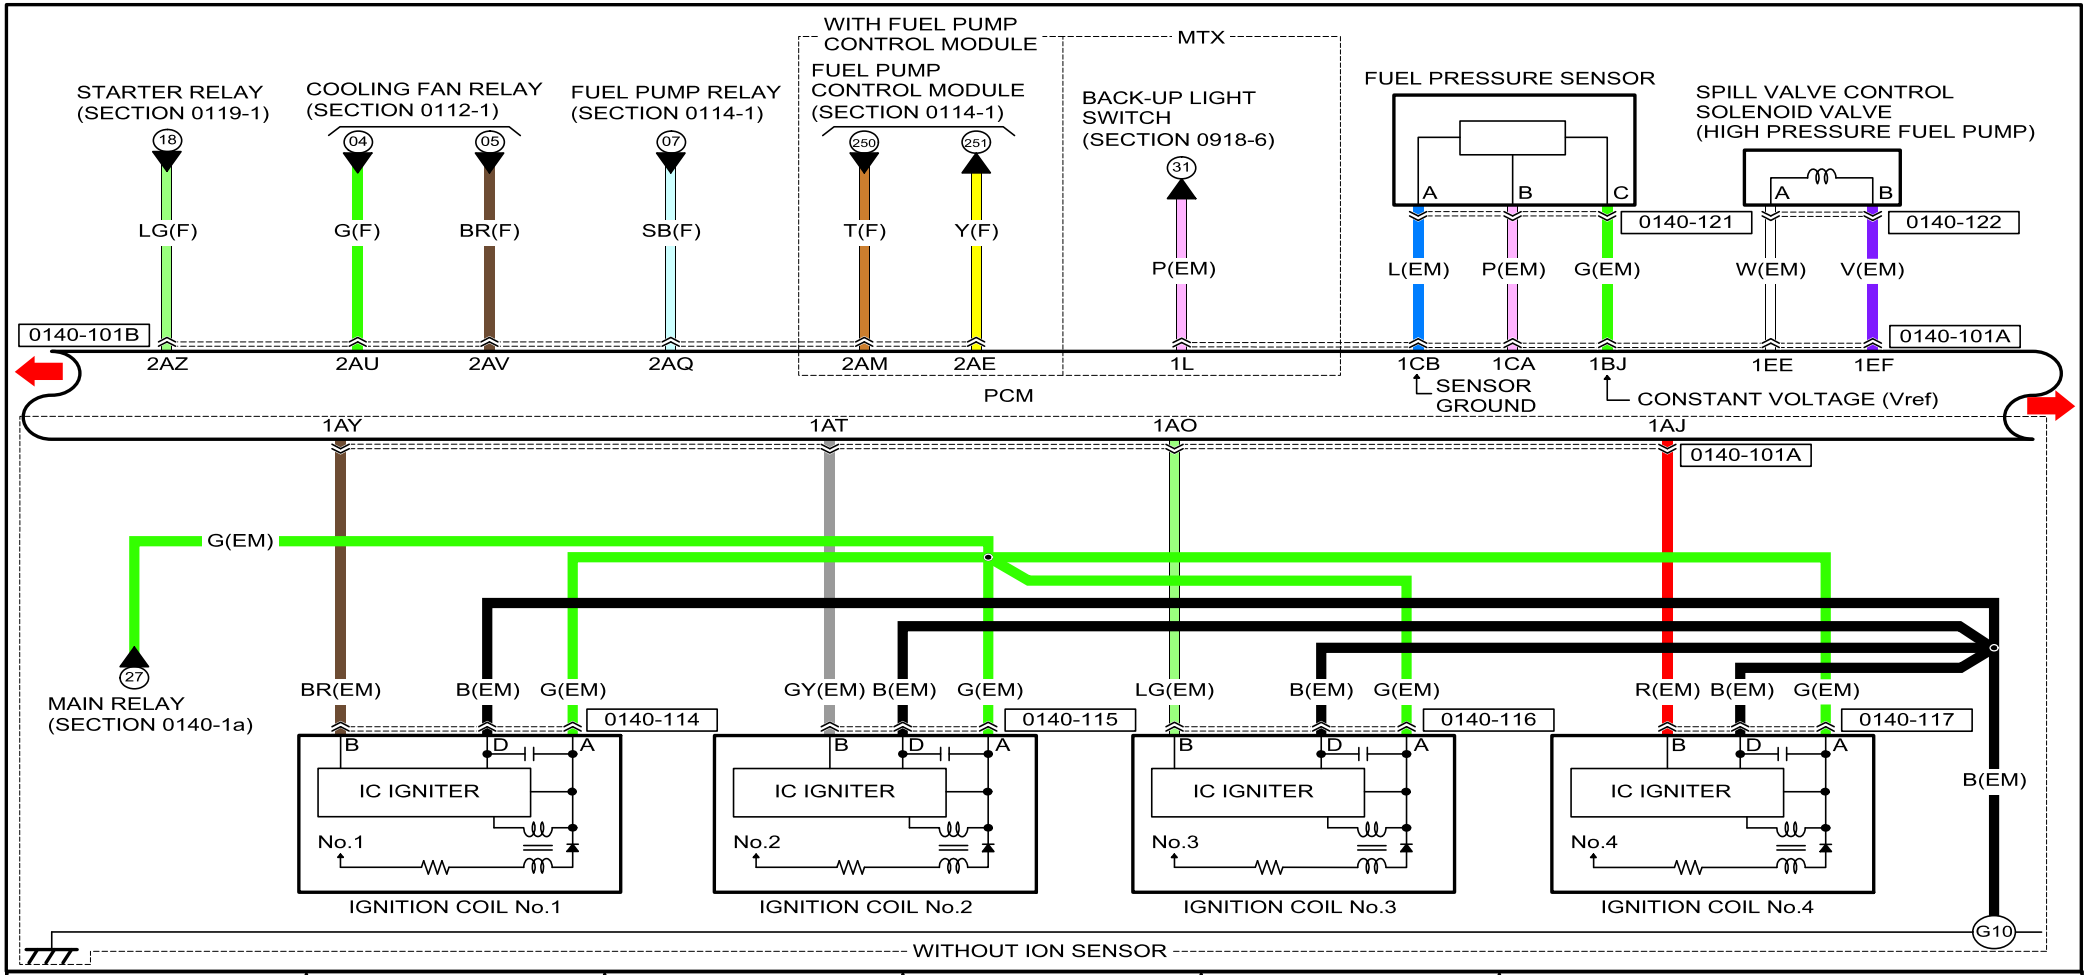



0140-114
IGNITION COIL No.1

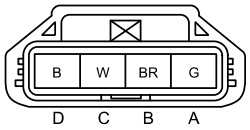


0140-115
IGNITION COIL No.2

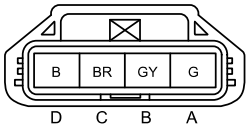


0140-116
IGNITION COIL No.3

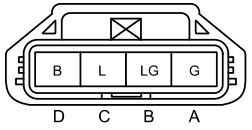


0140-117
IGNITION COIL No.4

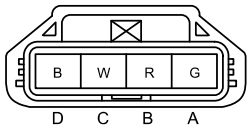


0140-121
FUEL PRESSURE SENSOR

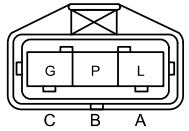

0140-122
SPILL VALVE CONTROL SOLENOID VALVE
(HIGH PRESSURE FUEL PUMP)

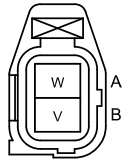

Refer to 00F section for the FUSE BOX, 00C section for the PCM CONNECTOR and COMMON CONNECTOR LIST.

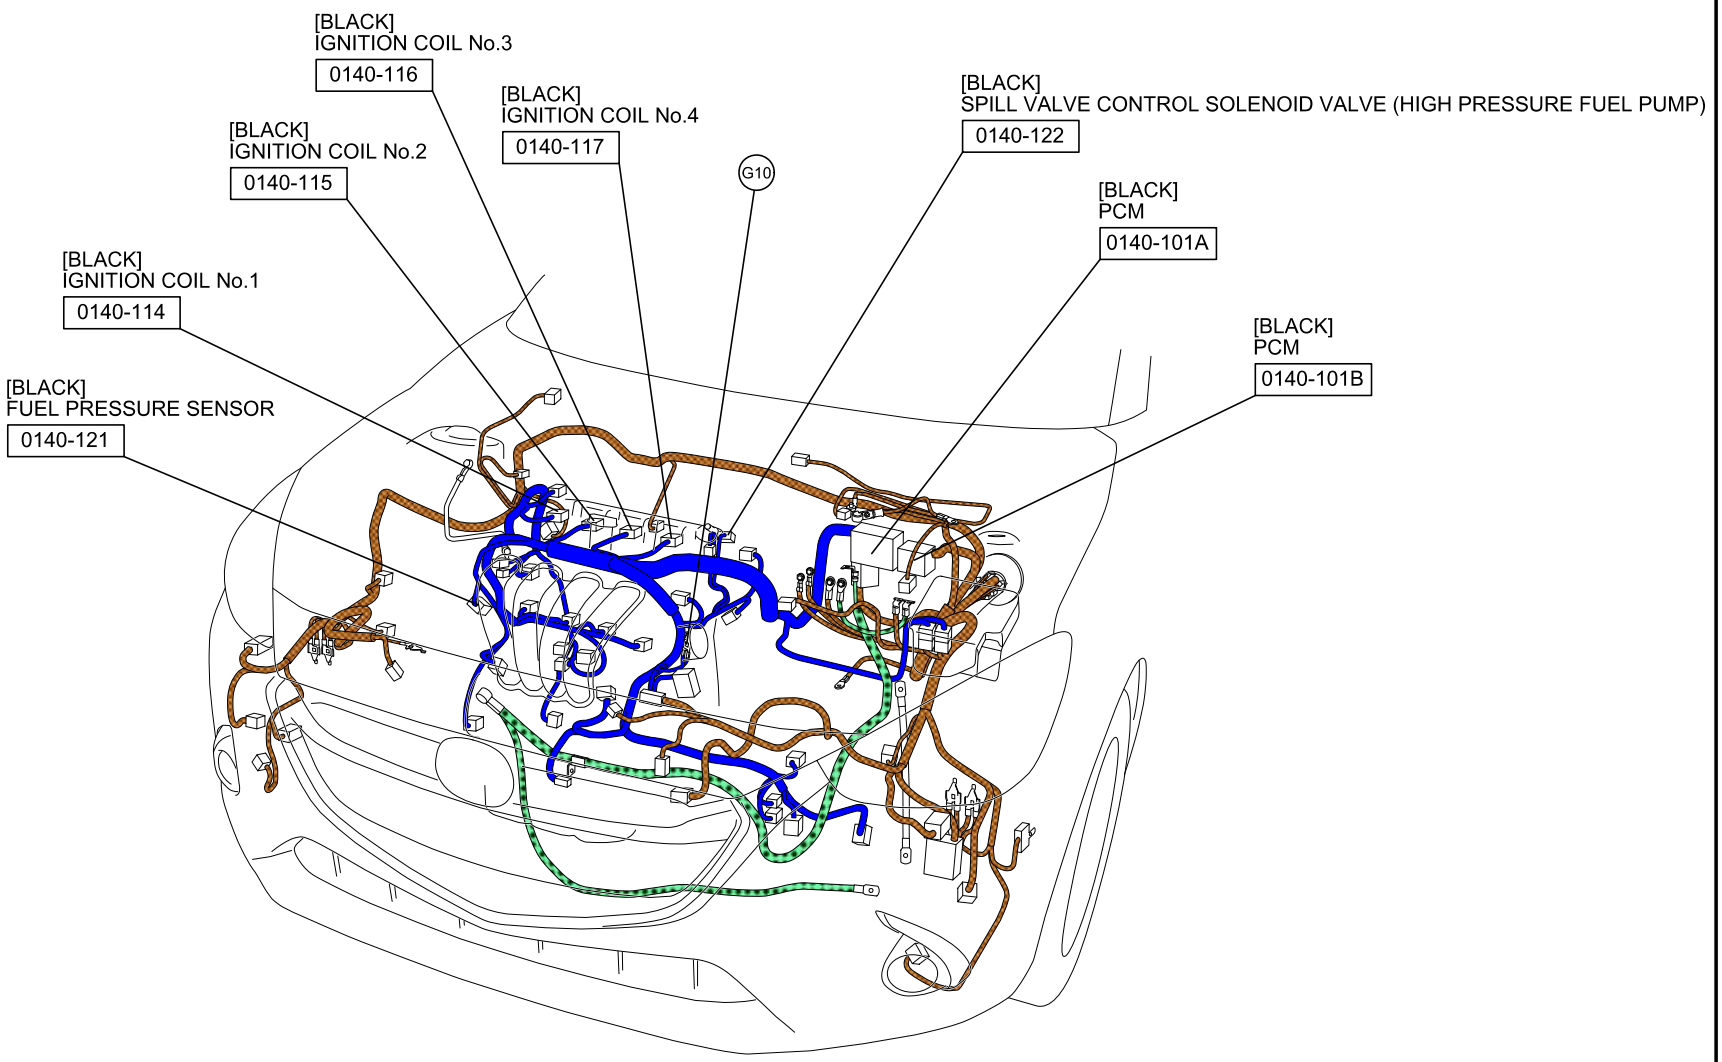
[BLACK]
IGNITION COIL No.3
0140-116
[BLACK]
IGNITION COIL No.4
0140-117
[BLACK]
IGNITION COIL No.2
0140-115
G10
[BLACK]
SPILL VALVE CONTROL SOLENOID VALVE (HIGH PRESSURE FUEL PUMP)
0140-122
[BLACK]
PCM
0140-101A
[BLACK]
IGNITION COIL No.1
0140-114
[BLACK]
PCM
0140-101B
[BLACK]
FUEL PRESSURE SENSOR
0140-121
: FRONT HARNESS
: ENGINE HARNESS
ENGINE No.2 HARNESS
: EMISSION HARNESS