

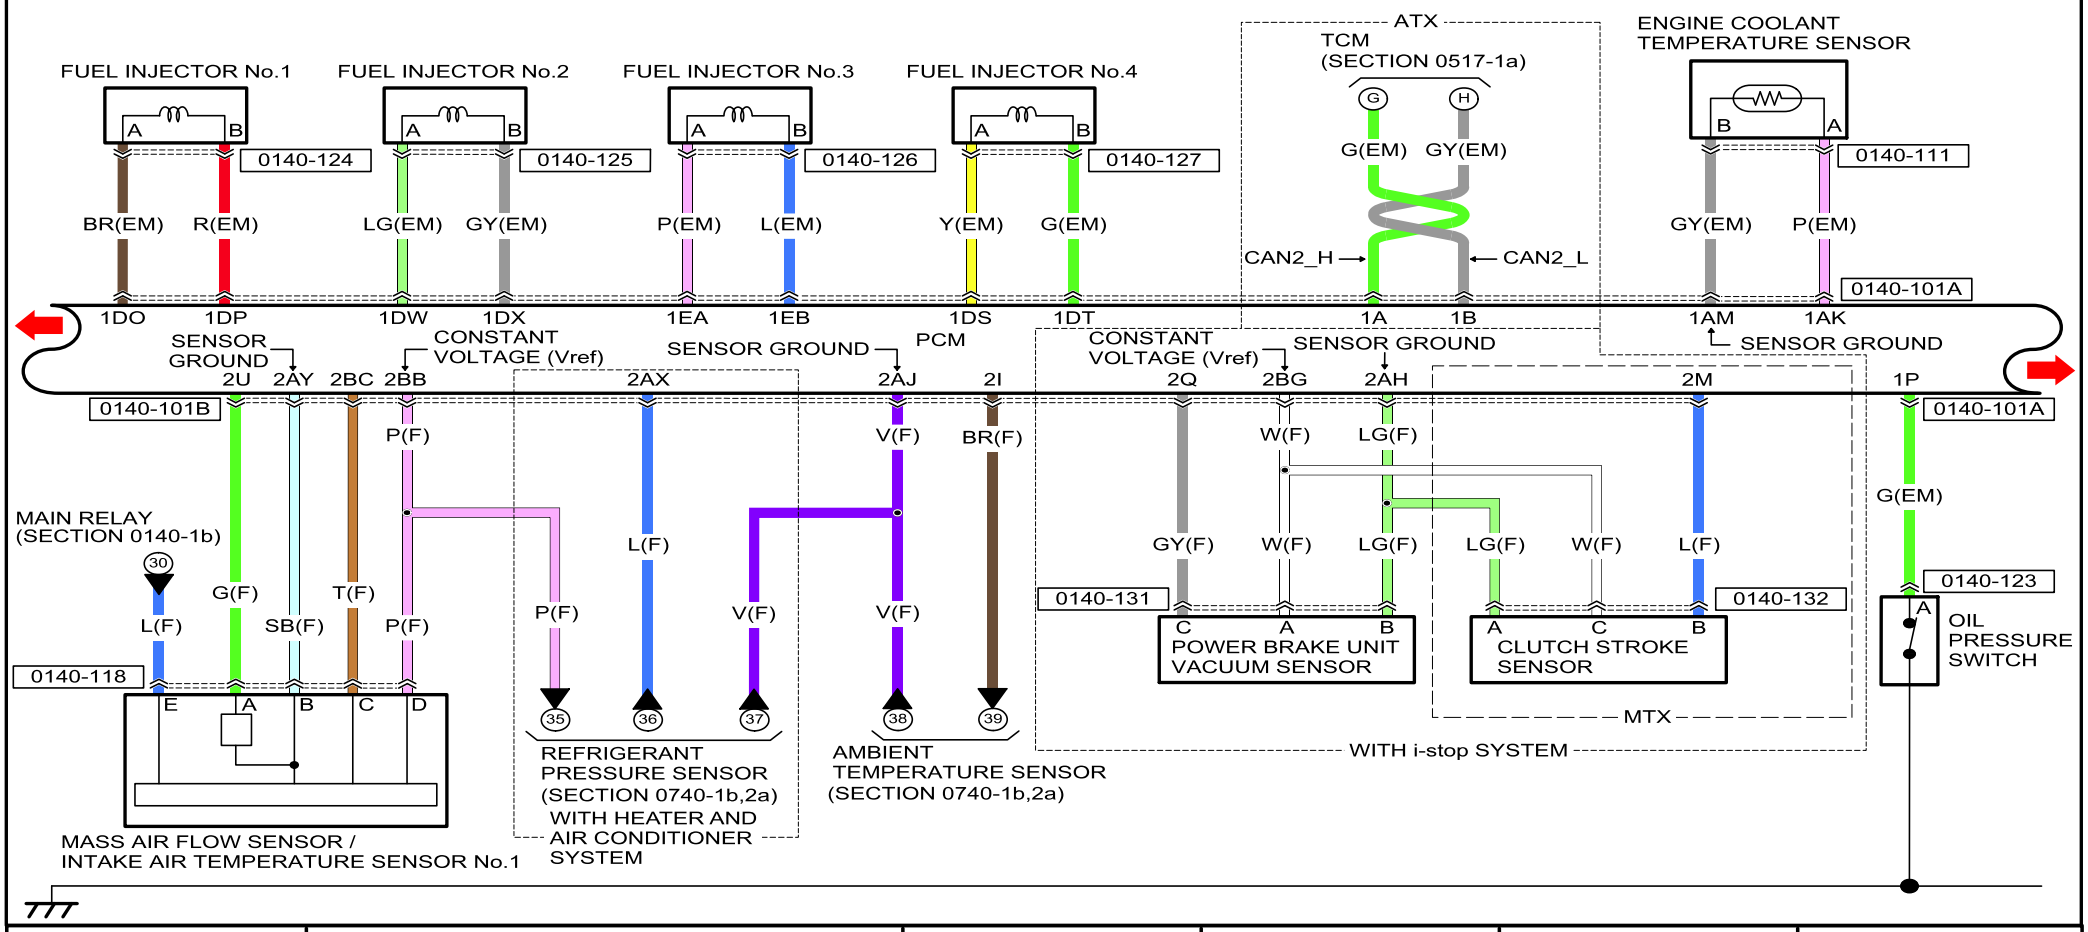



0140-111
ENGINE COOLANT TEMPERATURE SENSOR

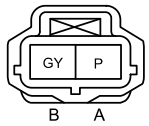


0140-118
MASS AIR FLOW SENSOR / INTAKE AIR TEMPERATURE SENSOR No.1



0140-123
OIL PRESSURE SWITCH




0140-124
FUEL INJECTOR No.1

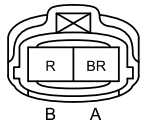

0140-125
FUEL INJECTOR No.2




0140-126
FUEL INJECTOR No.3

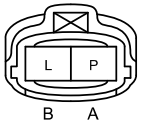


0140-127
FUEL INJECTOR No.4




0140-131
POWER BRAKE UNIT VACUUM SENSOR

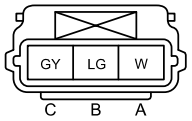

0140-132
CLUTCH STROKE SENSOR

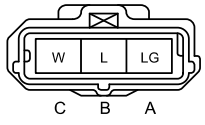

Refer to 00F section for the FUSE BOX, 00C section for the PCM CONNECTOR and COMMON CONNECTOR LIST.

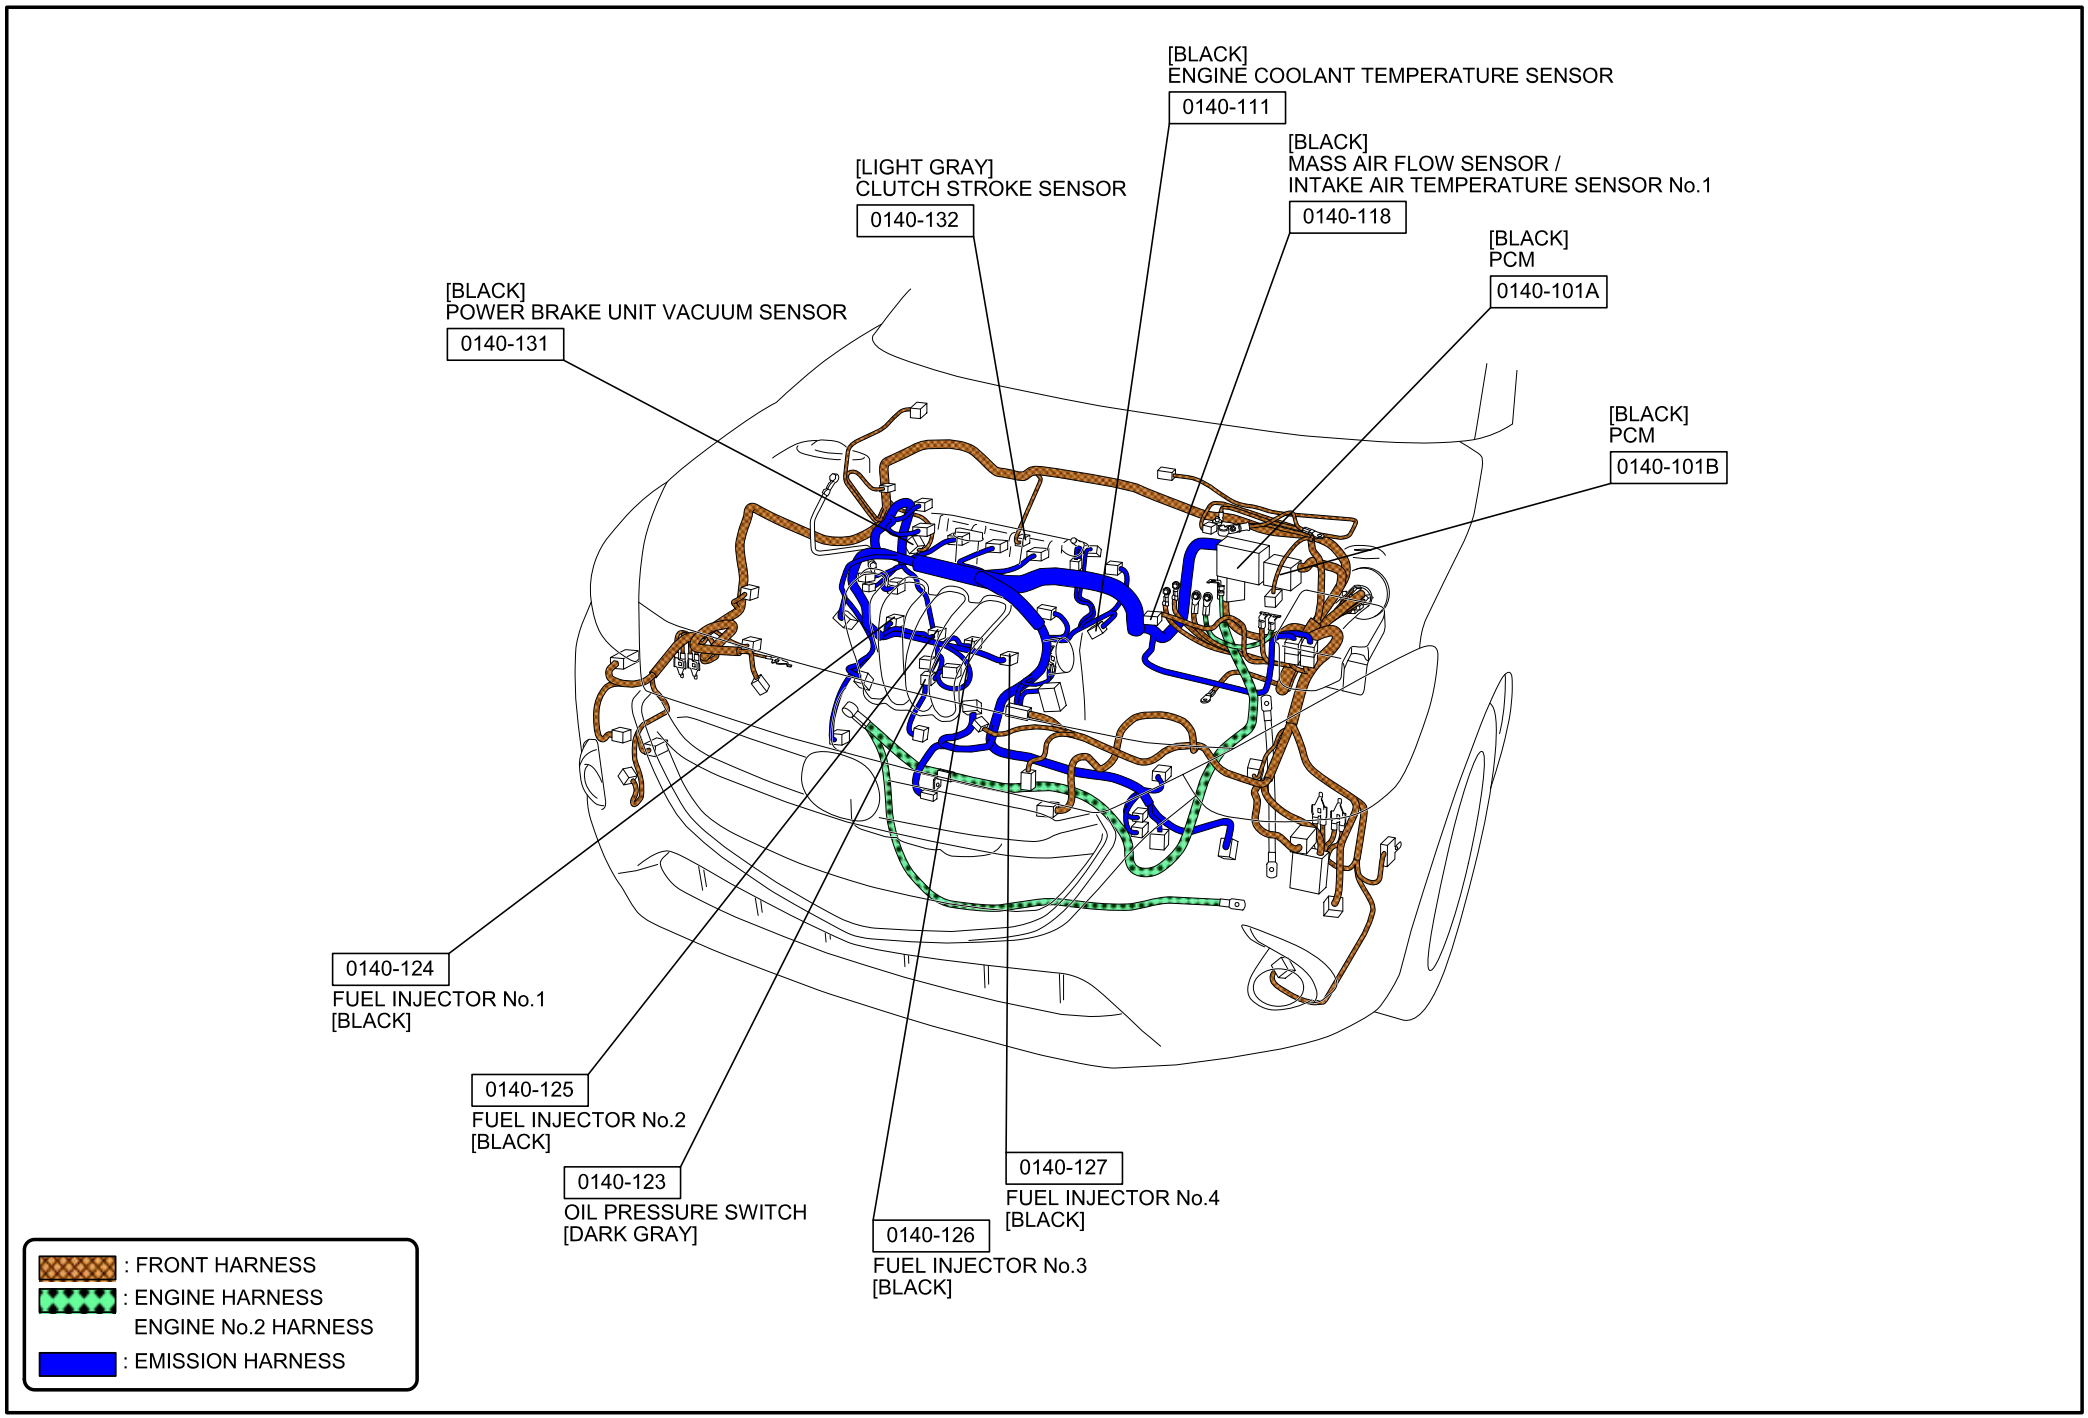
[BLACK]
ENGINE COOLANT TEMPERATURE SENSOR
0140-111
[BLACK]
MASS AIR FLOW SENSOR /
INTAKE AIR TEMPERATURE SENSOR No.1
0140-118
[LIGHT GRAY]
CLUTCH STROKE SENSOR
0140-132
[BLACK]
PCM
0140-101A
[BLACK]
POWER BRAKE UNIT VACUUM SENSOR
0140-131
[BLACK]
PCM
0140-101B
0140-124
FUEL INJECTOR No.1
[BLACK]
0140-125
FUEL INJECTOR No.2
[BLACK]
0140-123
OIL PRESSURE SWITCH
[DARK GRAY]
0140-126
FUEL INJECTOR No.3
[BLACK]
0140-127
FUEL INJECTOR No.4
[BLACK]
: FRONT HARNESS
: ENGINE HARNESS
ENGINE No.2 HARNESS
: EMISSION HARNESS