

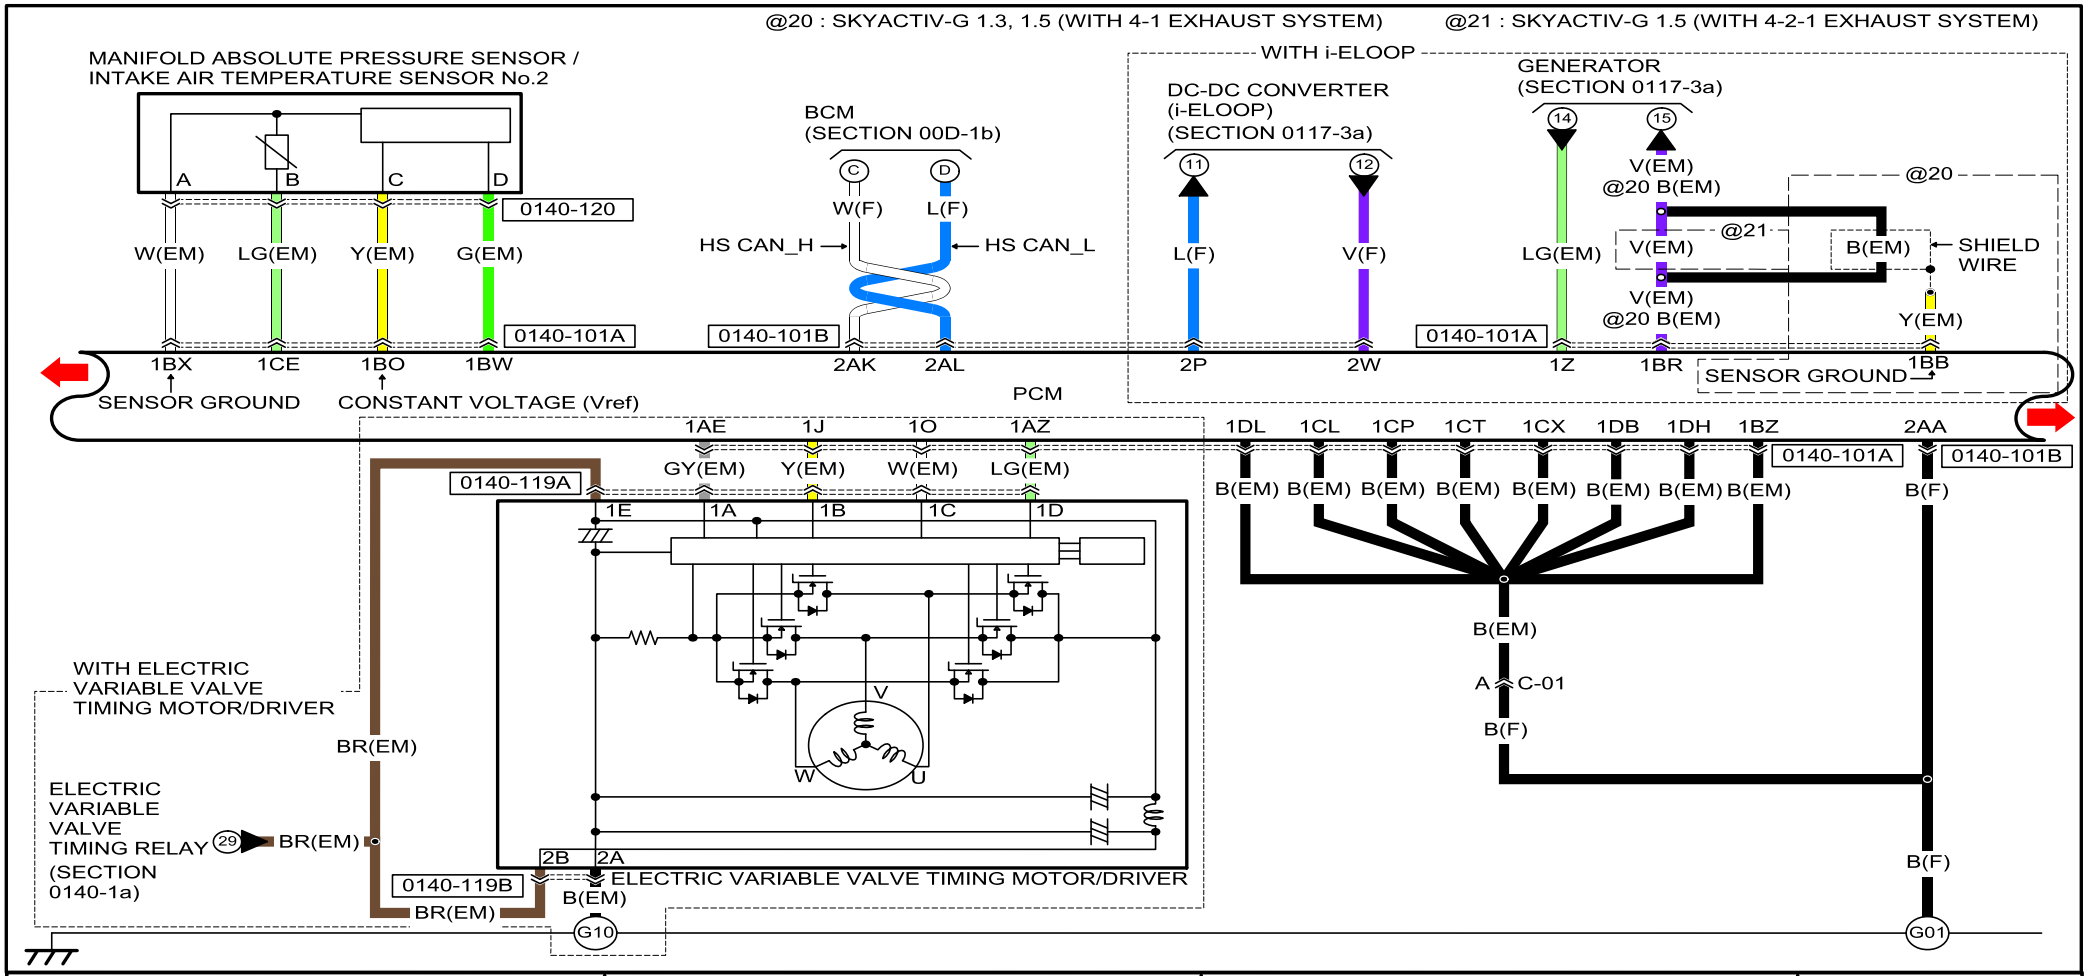



0140-119A
ELECTRIC VARIABLE VALVE TIMING MOTOR/DRIVER

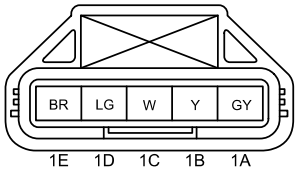


0140-119B
ELECTRIC VARIABLE VALVE TIMING MOTOR/DRIVER

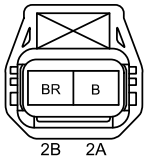

0140-120
MANIFOLD ABSOLUTE PRESSURE SENSOR / INTAKE AIR TEMPERATURE SENSOR No.2



Refer to 00F section for the FUSE BOX, 00C section for the PCM CONNECTOR and COMMON CONNECTOR LIST.

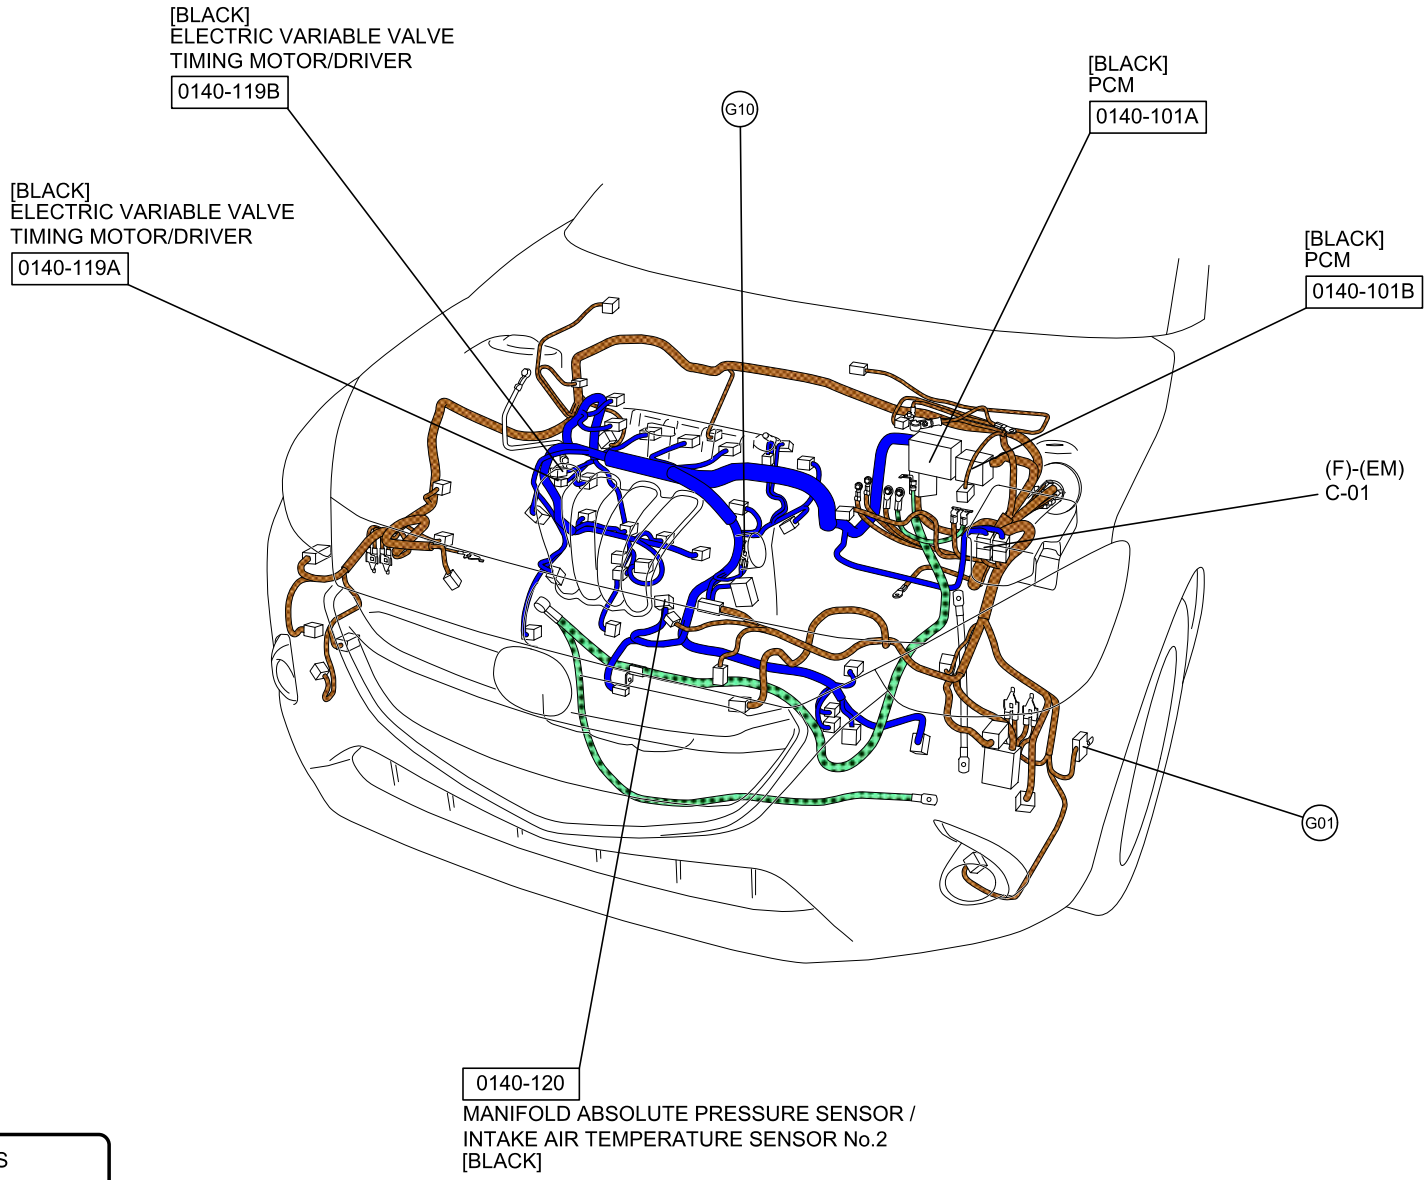
[BLACK]
ELECTRIC VARIABLE VALVE
TIMING MOTOR/DRIVER
0140-119B
[BLACK]
ELECTRIC VARIABLE VALVE
TIMING MOTOR/DRIVER
0140-119A
G10
[BLACK]
PCM
0140-101A
[BLACK]
PCM
0140-101B
(F)-(EM)
C-01
G01
0140-120
MANIFOLD ABSOLUTE PRESSURE SENSOR /
INTAKE AIR TEMPERATURE SENSOR No.2
[BLACK]
: FRONT HARNESS
: ENGINE HARNESS
ENGINE No.2 HARNESS
: EMISSION HARNESS