

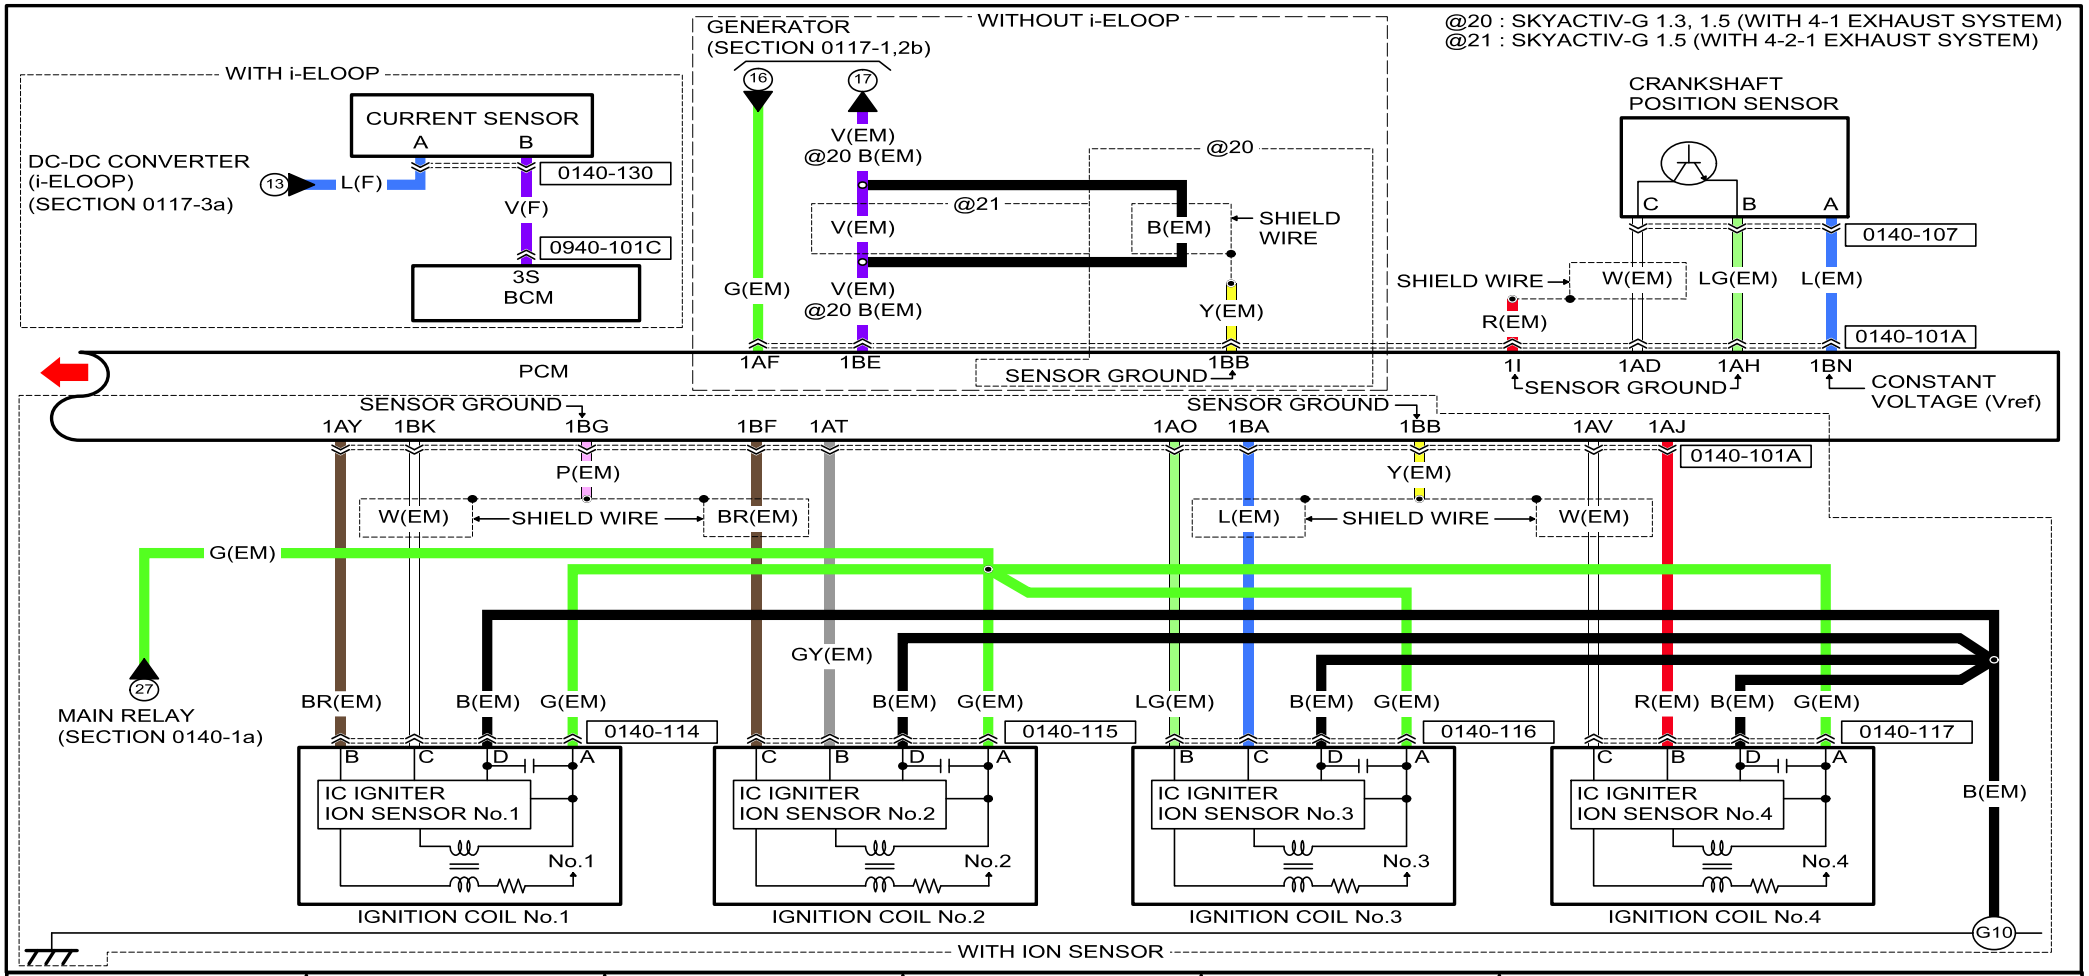



0140-107
CRANKSHAFT POSITION SENSOR




0140-130
CURRENT SENSOR

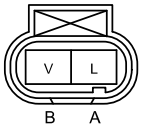


0140-114
IGNITION COIL No.1

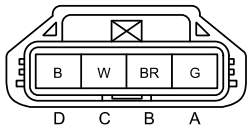


0140-115
IGNITION COIL No.2

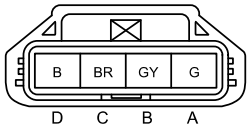


0140-116
IGNITION COIL No.3

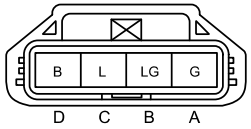


0140-117
IGNITION COIL No.4

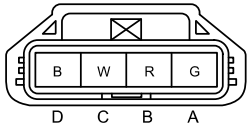

0940-101C
BCM

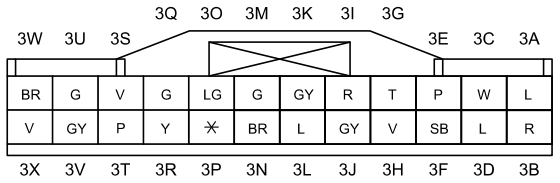

Refer to 00F section for the FUSE BOX, 00C section for the PCM CONNECTOR and COMMON CONNECTOR LIST.

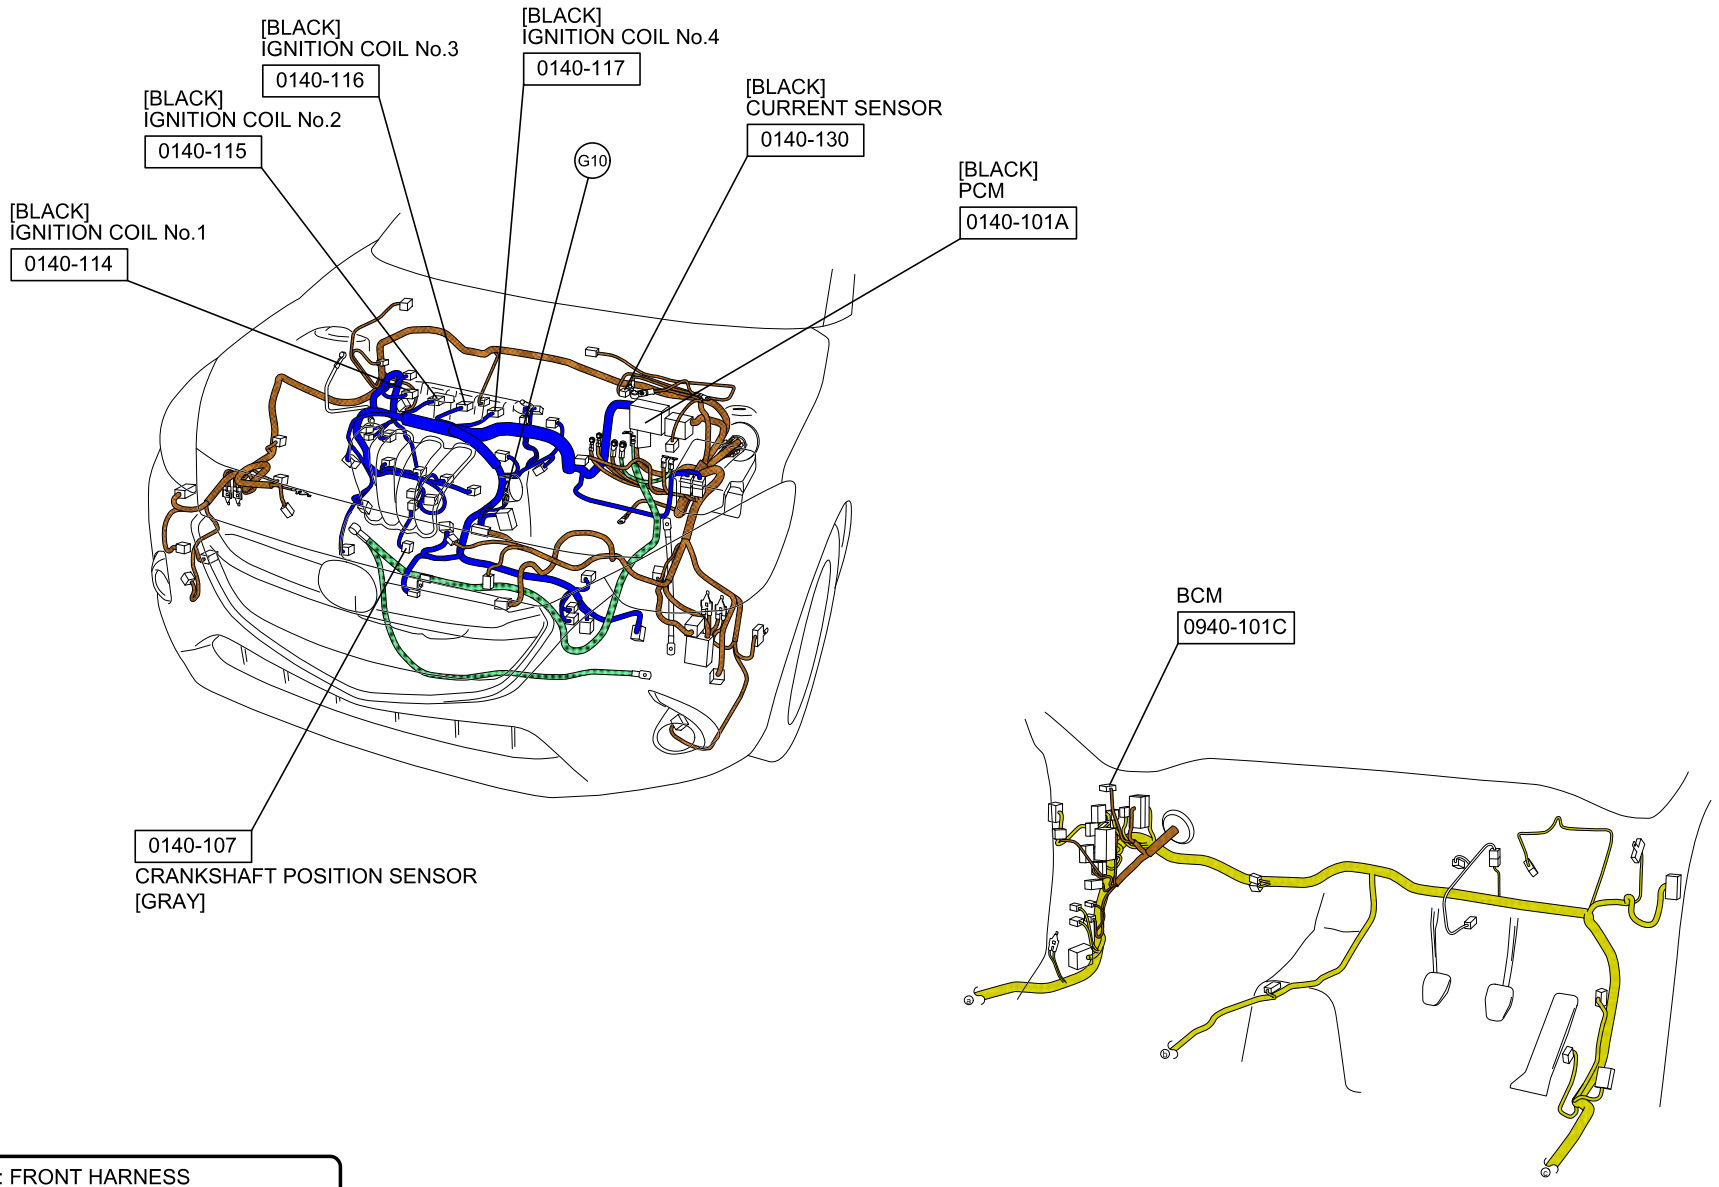
[BLACK]
IGNITION COIL No.3
0140-116
[BLACK]
IGNITION COIL No.4
0140-117
[BLACK]
IGNITION COIL No.2
0140-115
[BLACK]
CURRENT SENSOR
0140-130
G10
[BLACK]
PCM
0140-101A
[BLACK]
IGNITION COIL No.1
0140-114
BCM
0940-101C
0140-107
CRANKSHAFT POSITION SENSOR
[GRAY]
: FRONT HARNESS
: ENGINE HARNESS
ENGINE No.2 HARNESS
: REAR HARNESS
: EMISSION HARNESS