

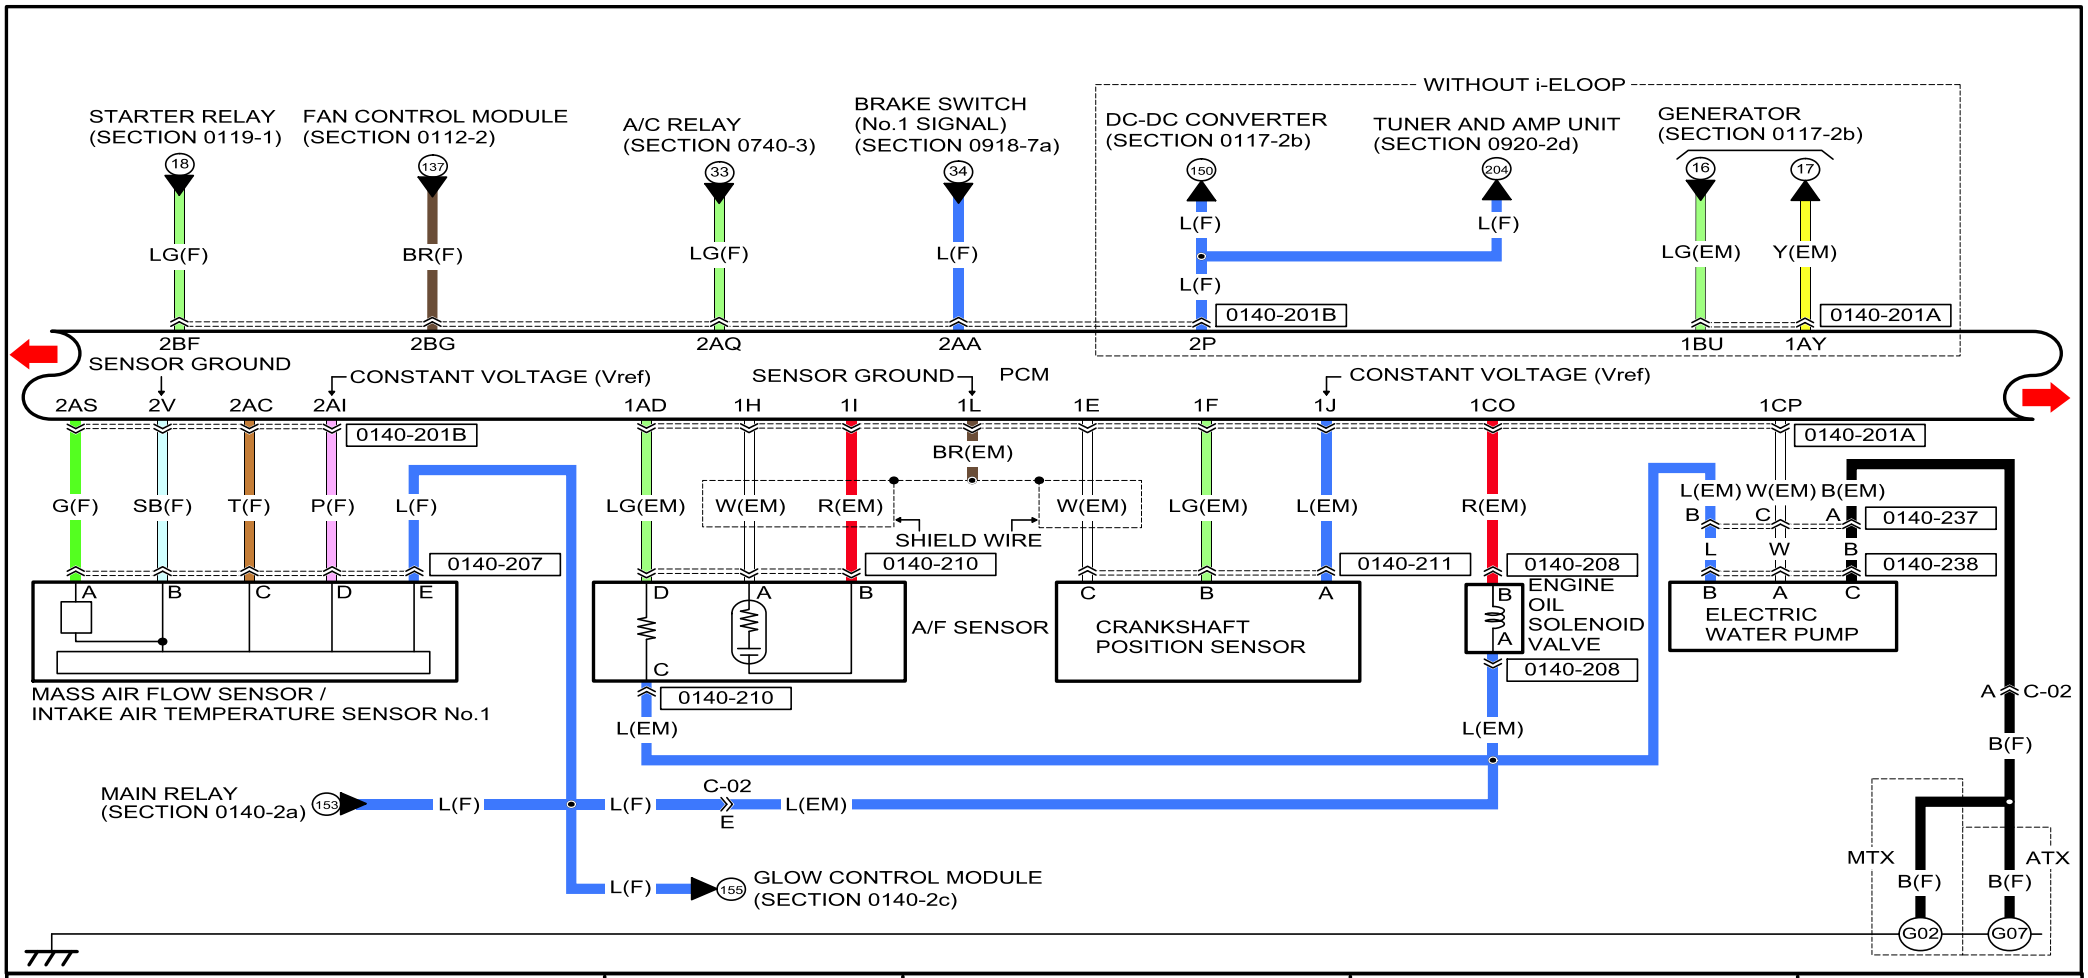



0140-207
MASS AIR FLOW SENSOR / INTAKE AIR TEMPERATURE SENSOR No.1




0140-208
ENGINE OIL SOLENOID VALVE




0140-210
A/F SENSOR

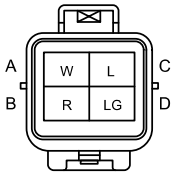


0140-211
CRANKSHAFT POSITION SENSOR




0140-237
EMISSION HARNESS-SHORT CORD

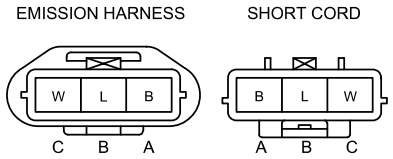

0140-238
ELECTRIC WATER PUMP

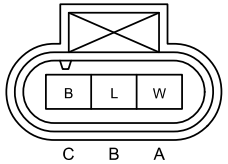

Refer to 00F section for the FUSE BOX, 00C section for the PCM CONNECTOR and COMMON CONNECTOR LIST.

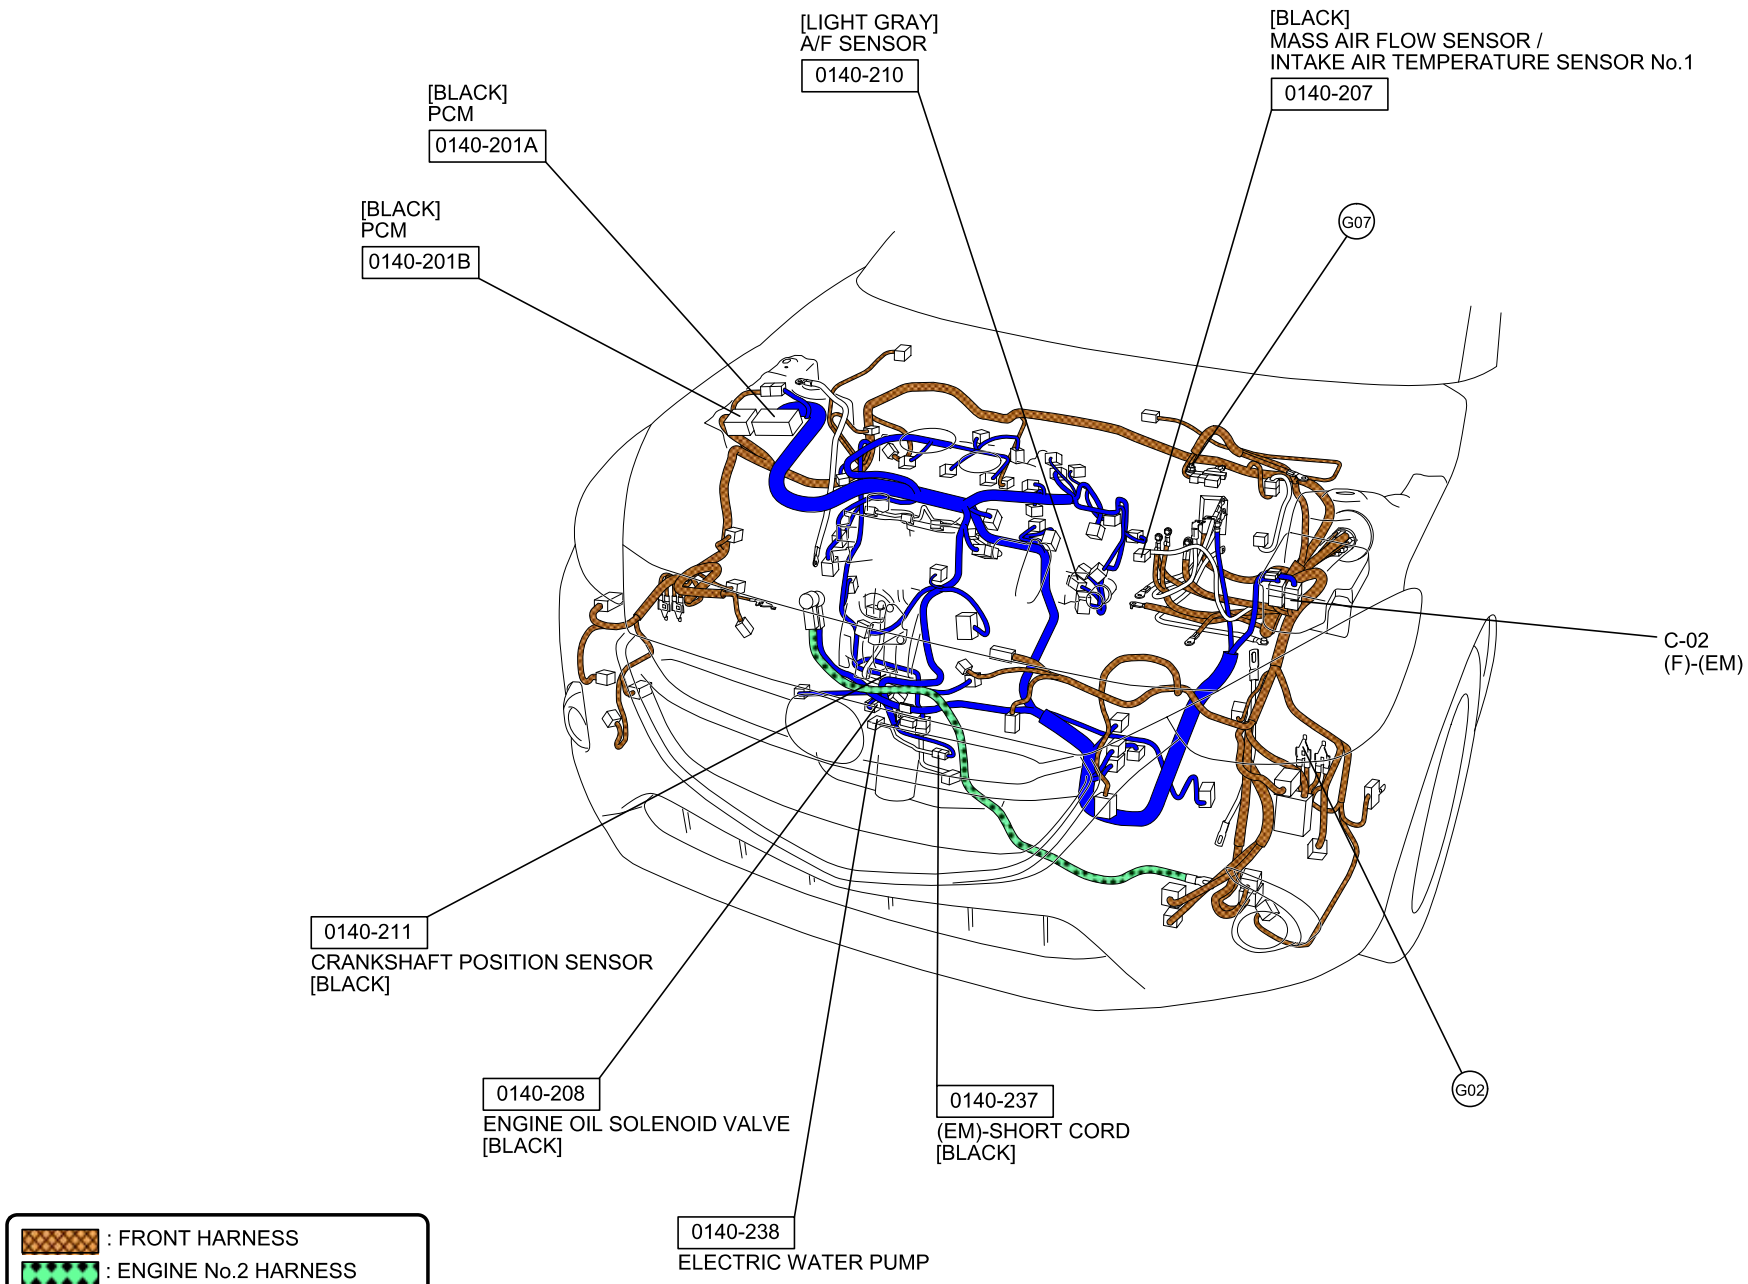
[LIGHT GRAY]
A/F SENSOR
0140-210
[BLACK]
MASS AIR FLOW SENSOR /
INTAKE AIR TEMPERATURE SENSOR No.1
0140-207
[BLACK]
PCM
0140-201A
[BLACK]
PCM
0140-201B
G07
C-02
(F)-(EM)
0140-211
CRANKSHAFT POSITION SENSOR
[BLACK]
0140-208
ENGINE OIL SOLENOID VALVE
[BLACK]
0140-238
ELECTRIC WATER PUMP
0140-237
(EM)-SHORT CORD
[BLACK]
G02
: FRONT HARNESS
: ENGINE No.2 HARNESS
: EMISSION HARNESS