

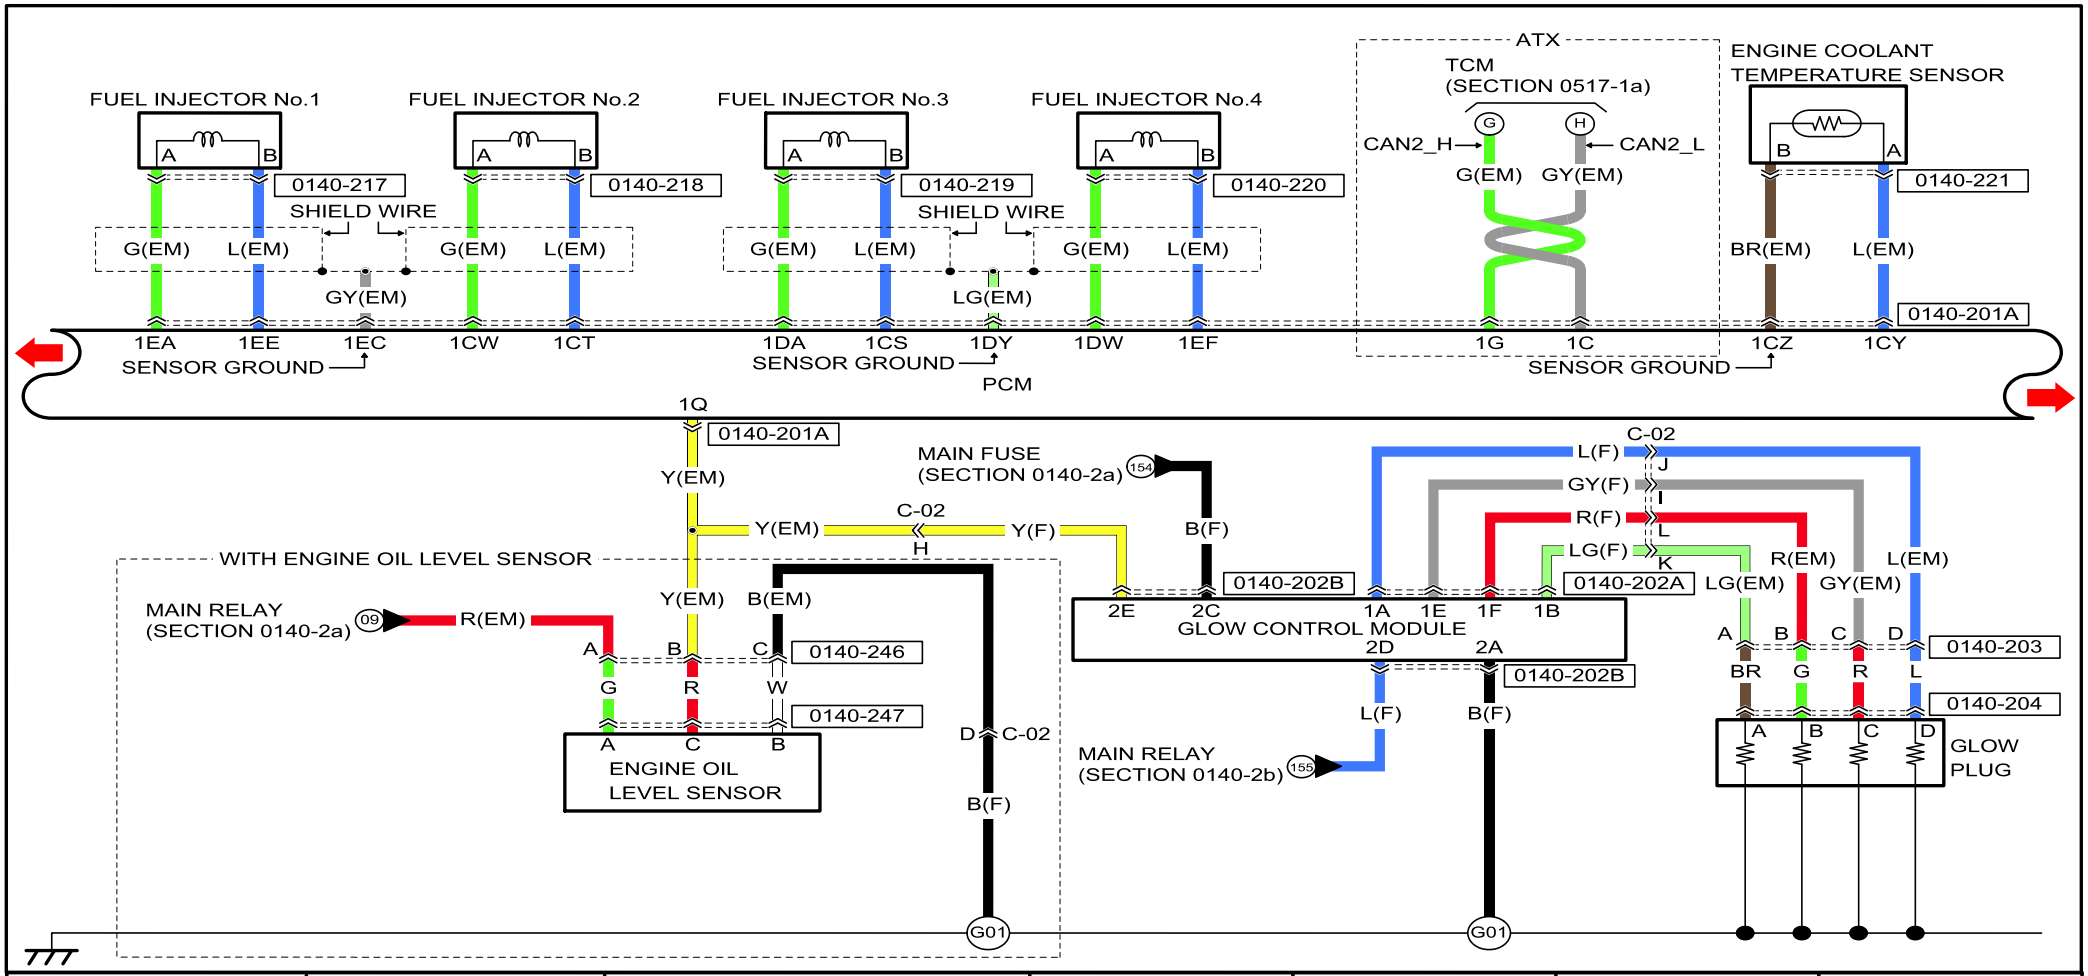



0140-202A
GLOW CONTROL MODULE

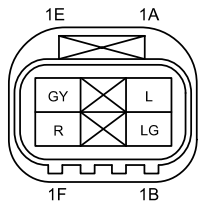


0140-202B
GLOW CONTROL MODULE

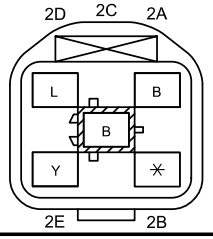


0140-203
EMISSION HARNESS-SHORT CORD

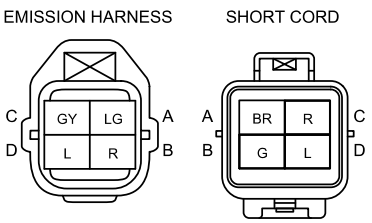


0140-204
GLOW PLUG




0140-217
FUEL INJECTOR No.1




0140-218
FUEL INJECTOR No.2




0140-219
FUEL INJECTOR No.3




0140-220
FUEL INJECTOR No.4




0140-221
ENGINE
COOLANT
TEMPERATURE
SENSOR

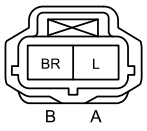


0140-246
EMISSION HARNESS-SHORT CORD

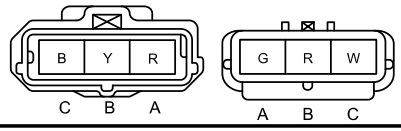

0140-247
ENGINE OIL LEVEL SENSOR



Refer to 00F section for the FUSE BOX, 00C section for the PCM CONNECTOR and COMMON CONNECTOR LIST.

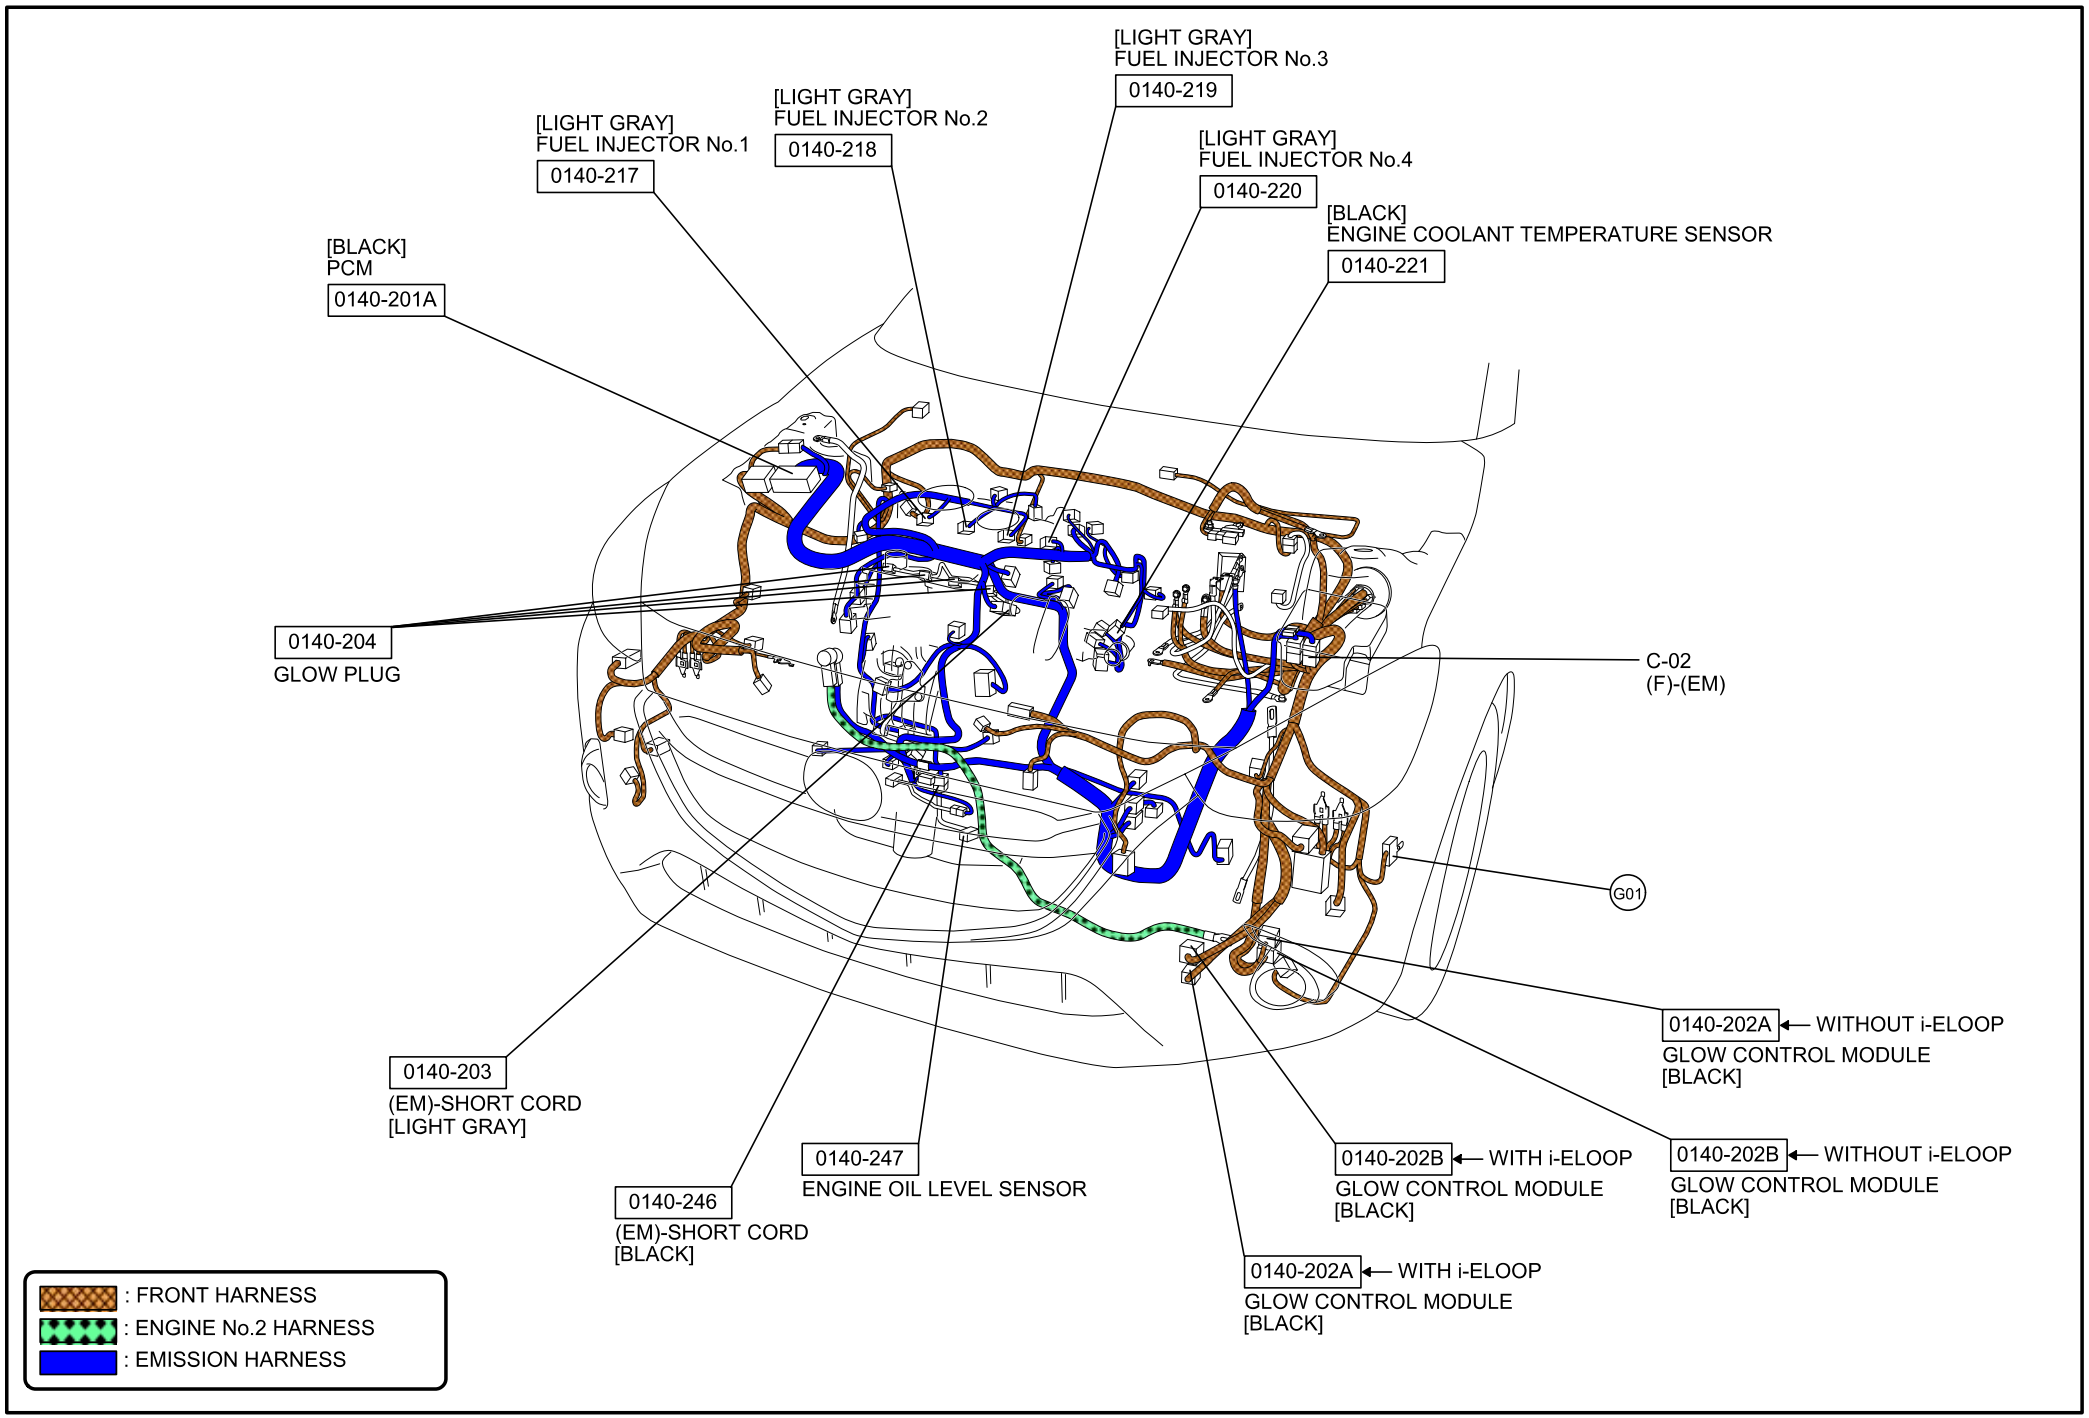
[LIGHT GRAY]
FUEL INJECTOR No.3
0140-219
[LIGHT GRAY]
FUEL INJECTOR No.2
0140-218
[LIGHT GRAY]
FUEL INJECTOR No.1
0140-217
[LIGHT GRAY]
FUEL INJECTOR No.4
0140-220
[BLACK]
ENGINE COOLANT TEMPERATURE SENSOR
0140-221
[BLACK]
PCM
0140-201A
0140-204
GLOW PLUG
C-02
(F)-(EM)
G01
0140-202A ← WITHOUT i-ELOOP
GLOW CONTROL MODULE
[BLACK]
0140-203
(EM)-SHORT CORD
[LIGHT GRAY]
0140-247
ENGINE OIL LEVEL SENSOR
0140-246
(EM)-SHORT CORD
[BLACK]
0140-202B ← WITH i-ELOOP
GLOW CONTROL MODULE
[BLACK]
0140-202B ← WITHOUT i-ELOOP
GLOW CONTROL MODULE
[BLACK]
0140-202A ← WITH i-ELOOP
GLOW CONTROL MODULE
[BLACK]
: FRONT HARNESS
: ENGINE No.2 HARNESS
: EMISSION HARNESS