

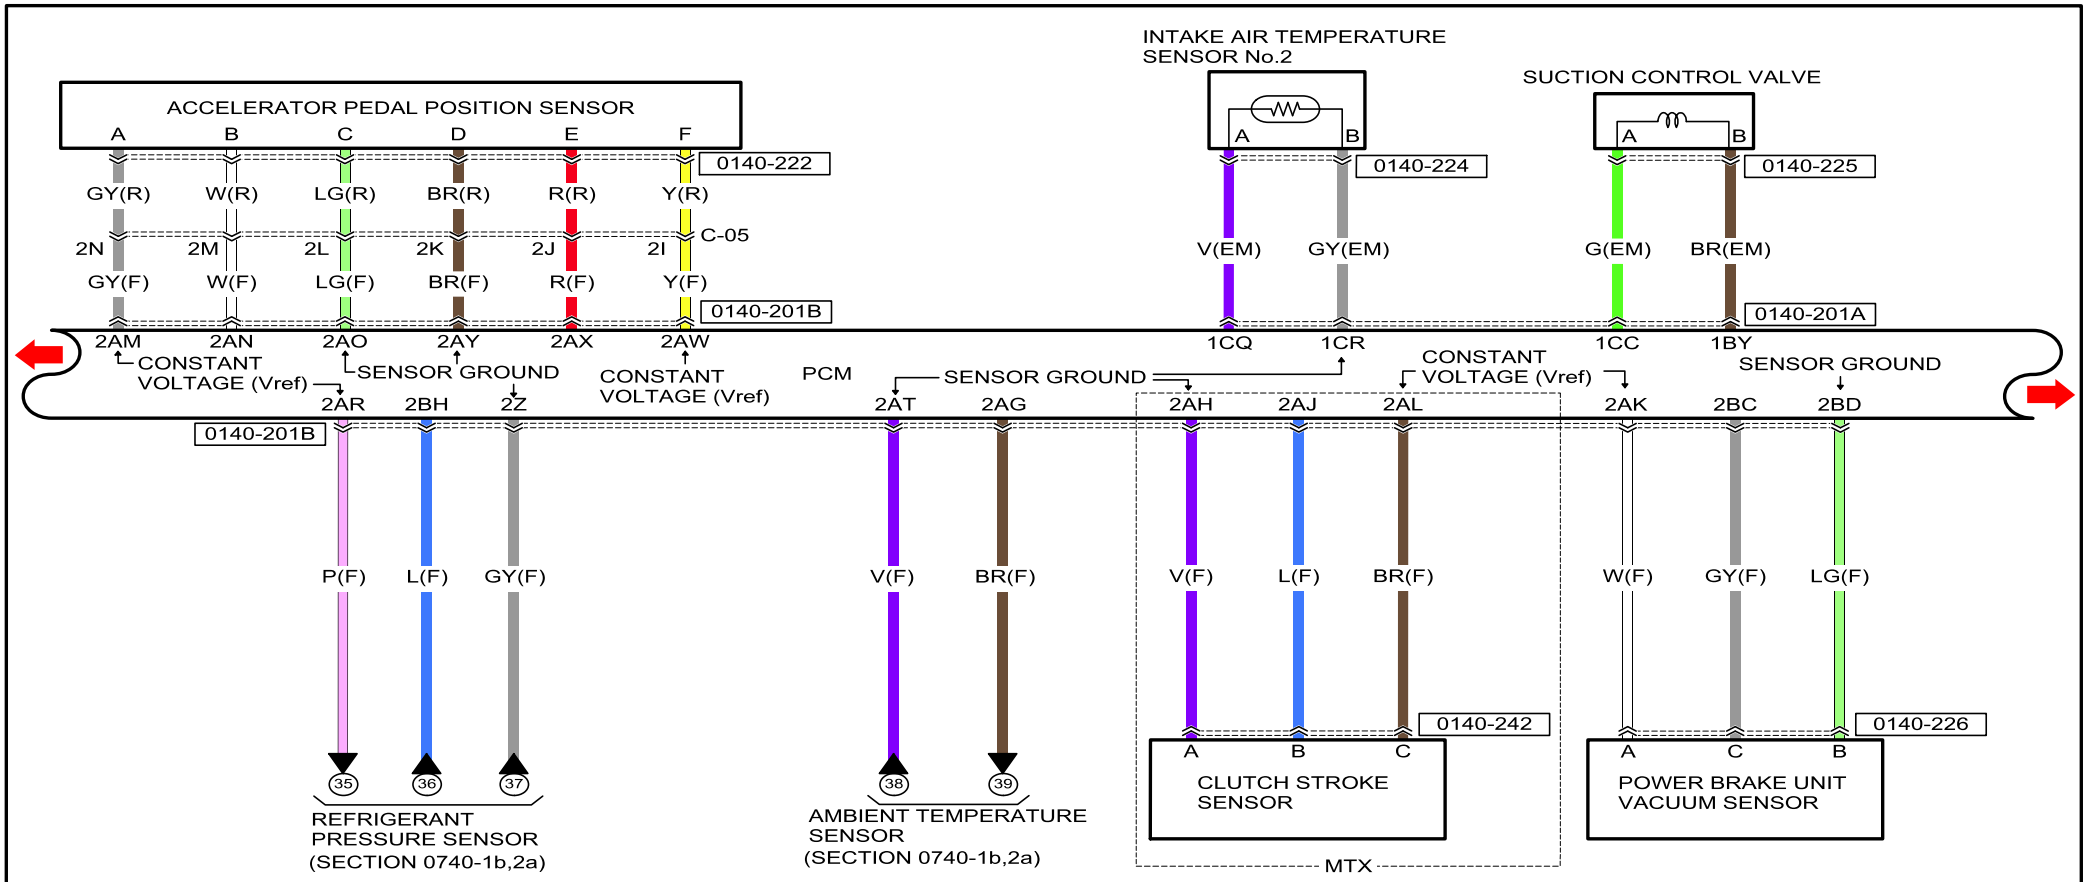


0140-222
ACCELERATOR PEDAL POSITION SENSOR

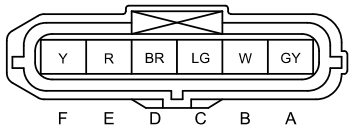


0140-224
INTAKE AIR TEMPERATURE SENSOR No.2




0140-225
SUCTION CONTROL VALVE




0140-226
POWER BRAKE UNIT VACUUM SENSOR

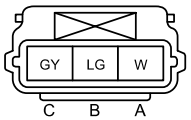

0140-242
CLUTCH STROKE SENSOR



Refer to 00F section for the FUSE BOX, 00C section for the PCM CONNECTOR and COMMON CONNECTOR LIST.

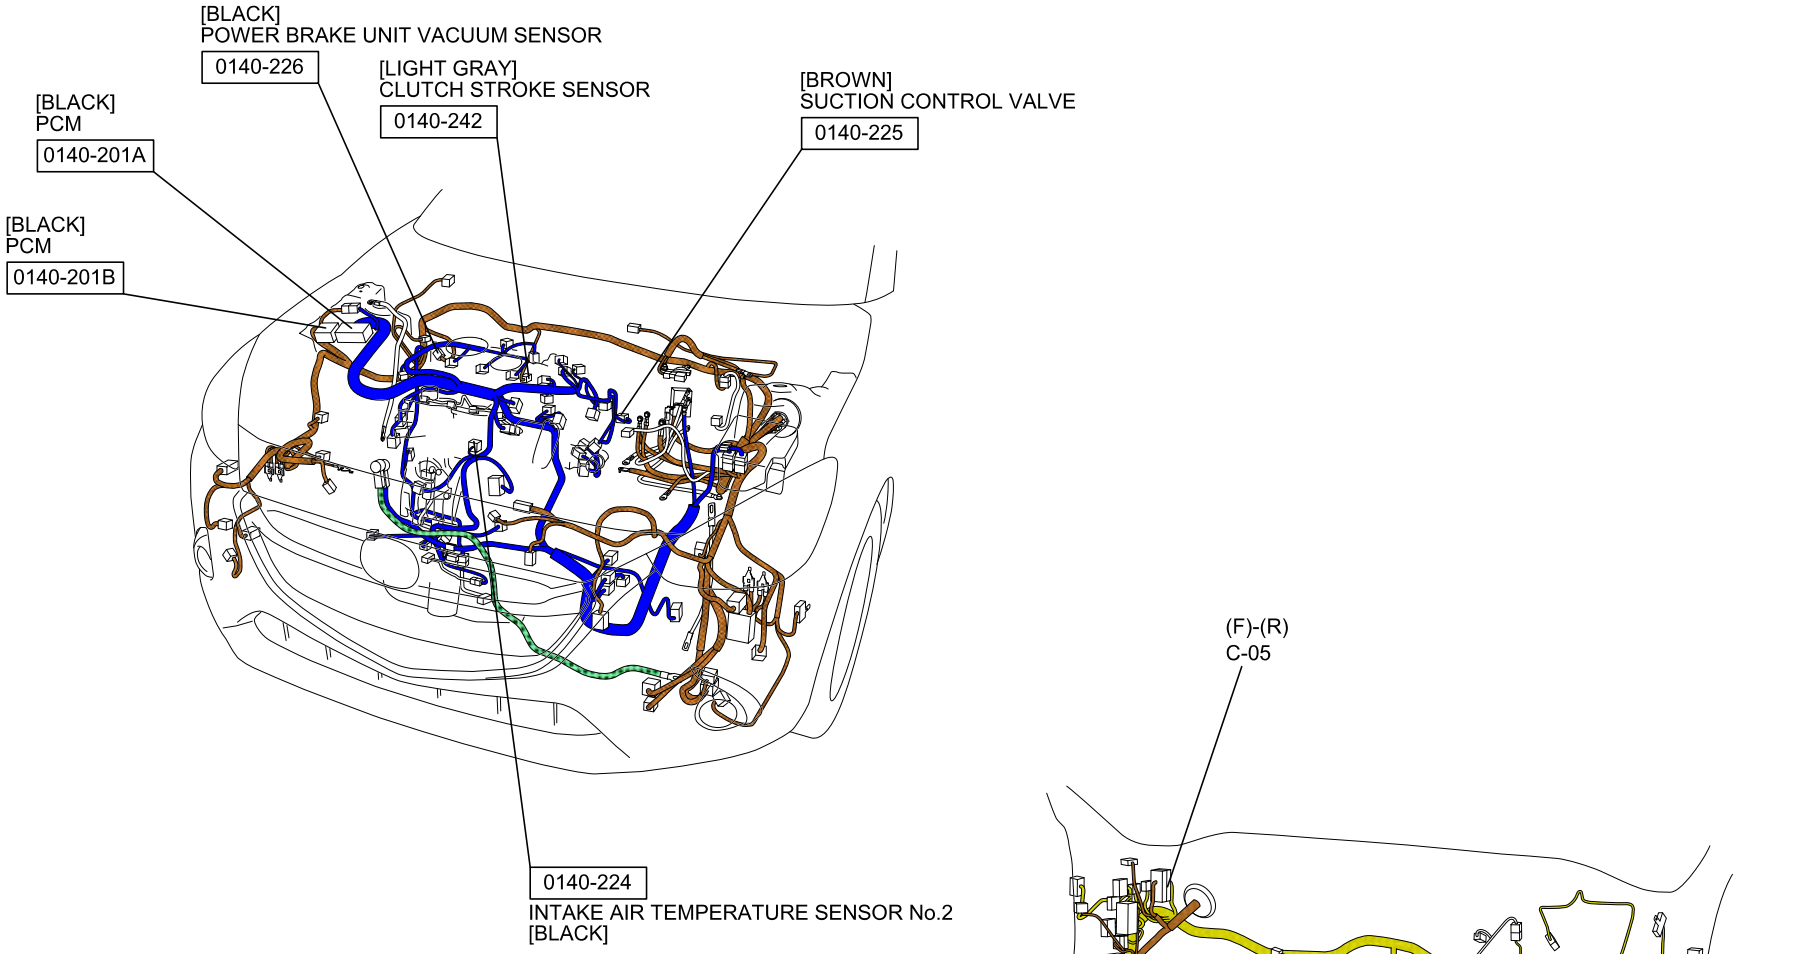
[BLACK]
POWER BRAKE UNIT VACUUM SENSOR
0140-226
[LIGHT GRAY]
CLUTCH STROKE SENSOR
0140-242
[BROWN]
SUCTION CONTROL VALVE
0140-225
[BLACK]
PCM
0140-201A
[BLACK]
PCM
0140-201B
0140-224
INTAKE AIR TEMPERATURE SENSOR No.2
[BLACK]
(F)-(R)
C-05
0140-222
ACCELERATOR PEDAL POSITION SENSOR
[BLACK]
: FRONT HARNESS
: ENGINE No.2 HARNESS
: REAR HARNESS
: EMISSION HARNESS