

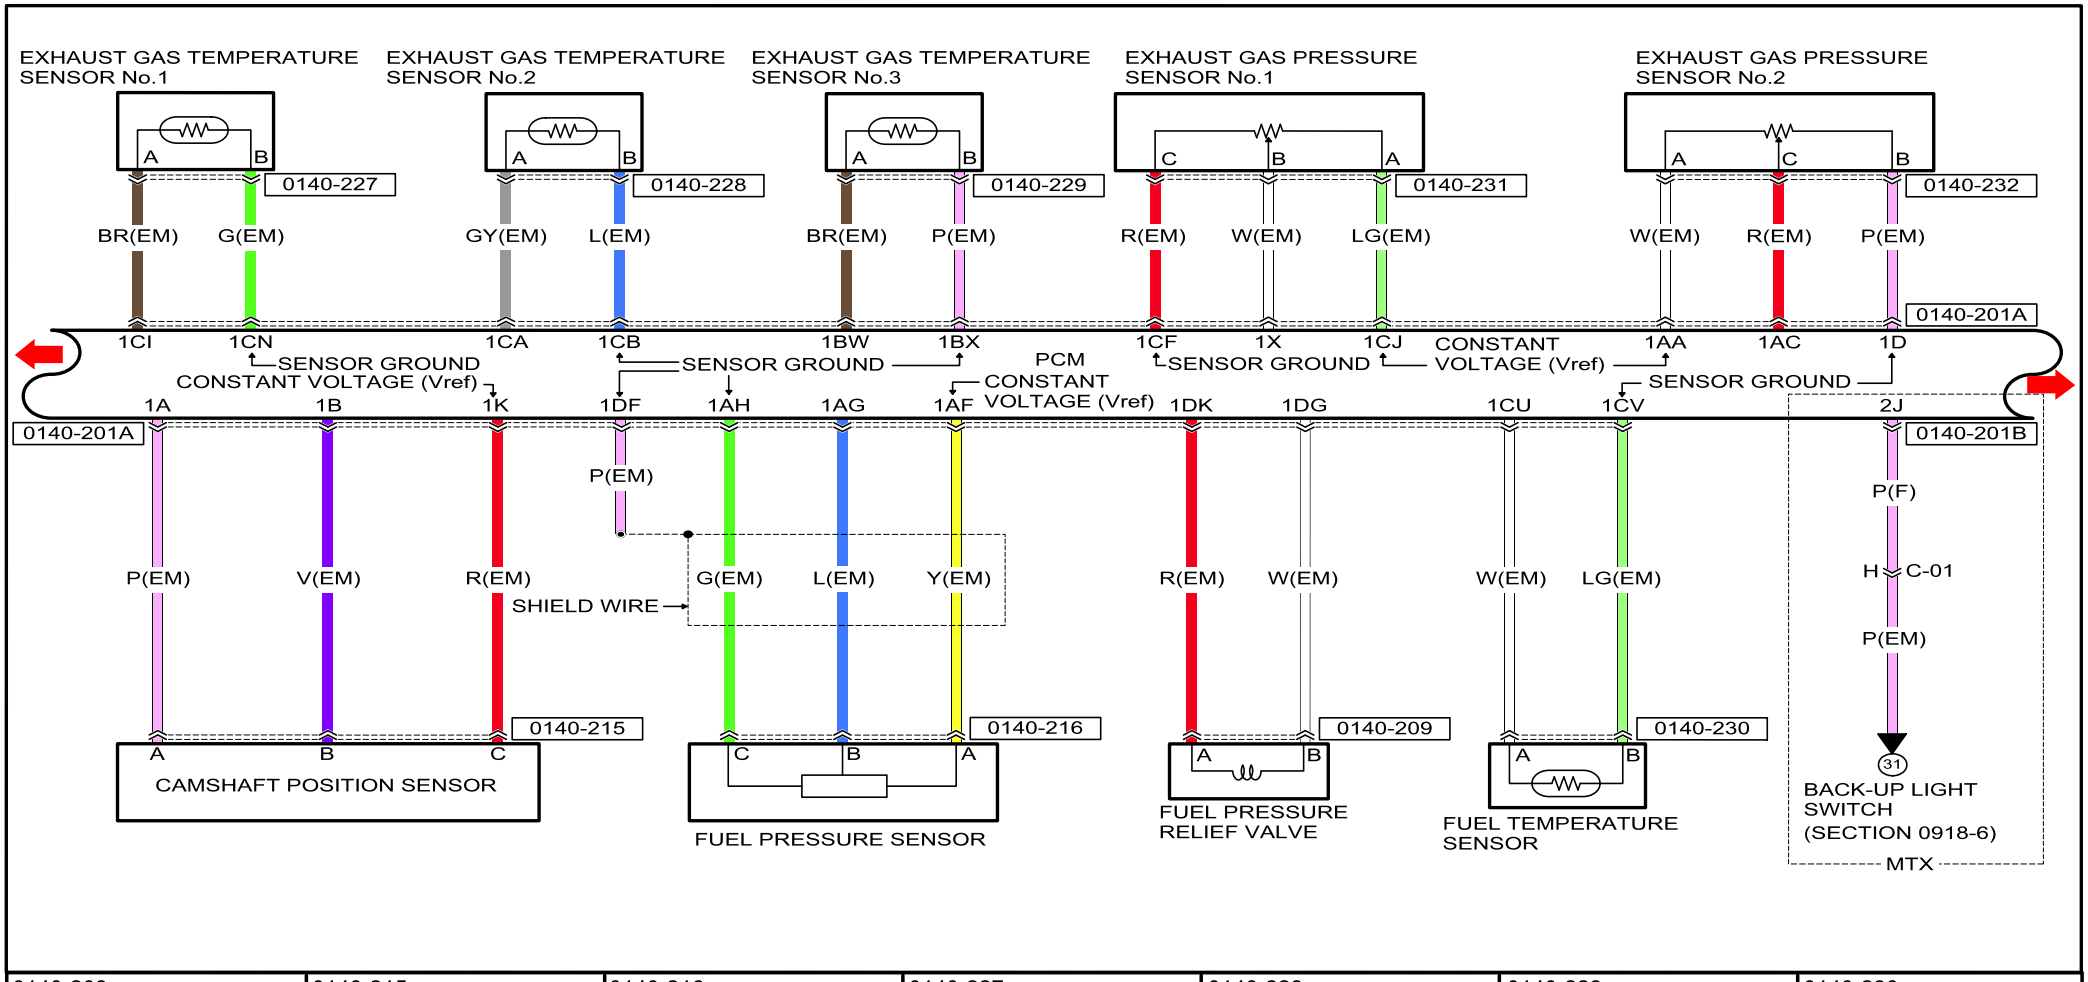



0140-209
FUEL PRESSURE RELIEF VALVE




0140-215
CAMSHAFT POSITION SENSOR




0140-216
FUEL PRESSURE SENSOR




0140-227
EXHAUST GAS TEMPERATURE SENSOR No.1




0140-228
EXHAUST GAS TEMPERATURE SENSOR No.2




0140-229
EXHAUST GAS TEMPERATURE SENSOR No.3




0140-230
FUEL TEMPERATURE SENSOR

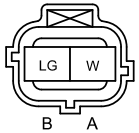


0140-231
EXHAUST GAS PRESSURE SENSOR No.1

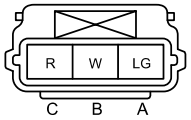

0140-232
EXHAUST GAS PRESSURE SENSOR No.2

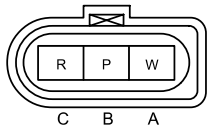

Refer to 00F section for the FUSE BOX, 00C section for the PCM CONNECTOR and COMMON CONNECTOR LIST.

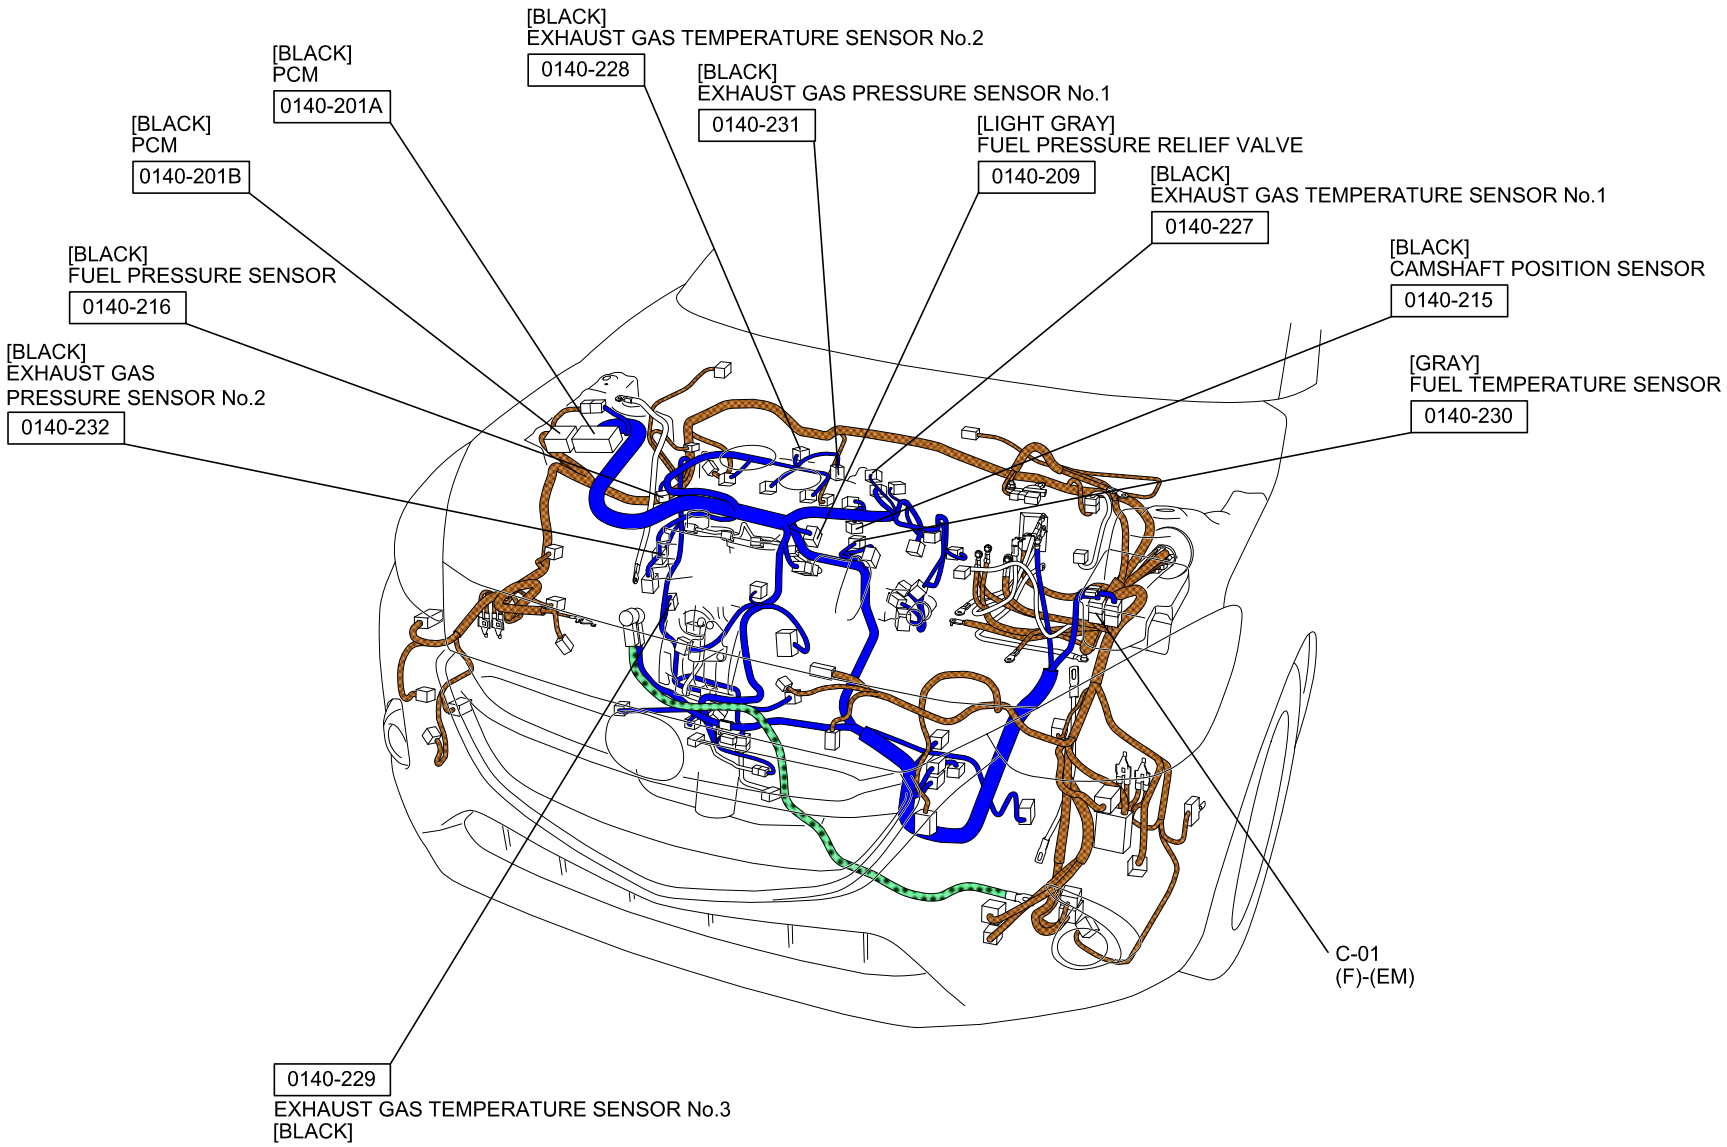
[BLACK]
EXHAUST GAS TEMPERATURE SENSOR No.2
0140-228
[BLACK]
PCM
0140-201A
[BLACK]
EXHAUST GAS PRESSURE SENSOR No.1
0140-231
[BLACK]
PCM
0140-201B
[LIGHT GRAY]
FUEL PRESSURE RELIEF VALVE
0140-209
[BLACK]
EXHAUST GAS TEMPERATURE SENSOR No.1
0140-227
[BLACK]
FUEL PRESSURE SENSOR
0140-216
[BLACK]
CAMSHAFT POSITION SENSOR
0140-215
[BLACK]
EXHAUST GAS
PRESSURE SENSOR No.2
0140-232
[GRAY]
FUEL TEMPERATURE SENSOR
0140-230
C-01
(F)-(EM)
0140-229
EXHAUST GAS TEMPERATURE SENSOR No.3
[BLACK]
: FRONT HARNESS
: ENGINE No.2 HARNESS
: EMISSION HARNESS