

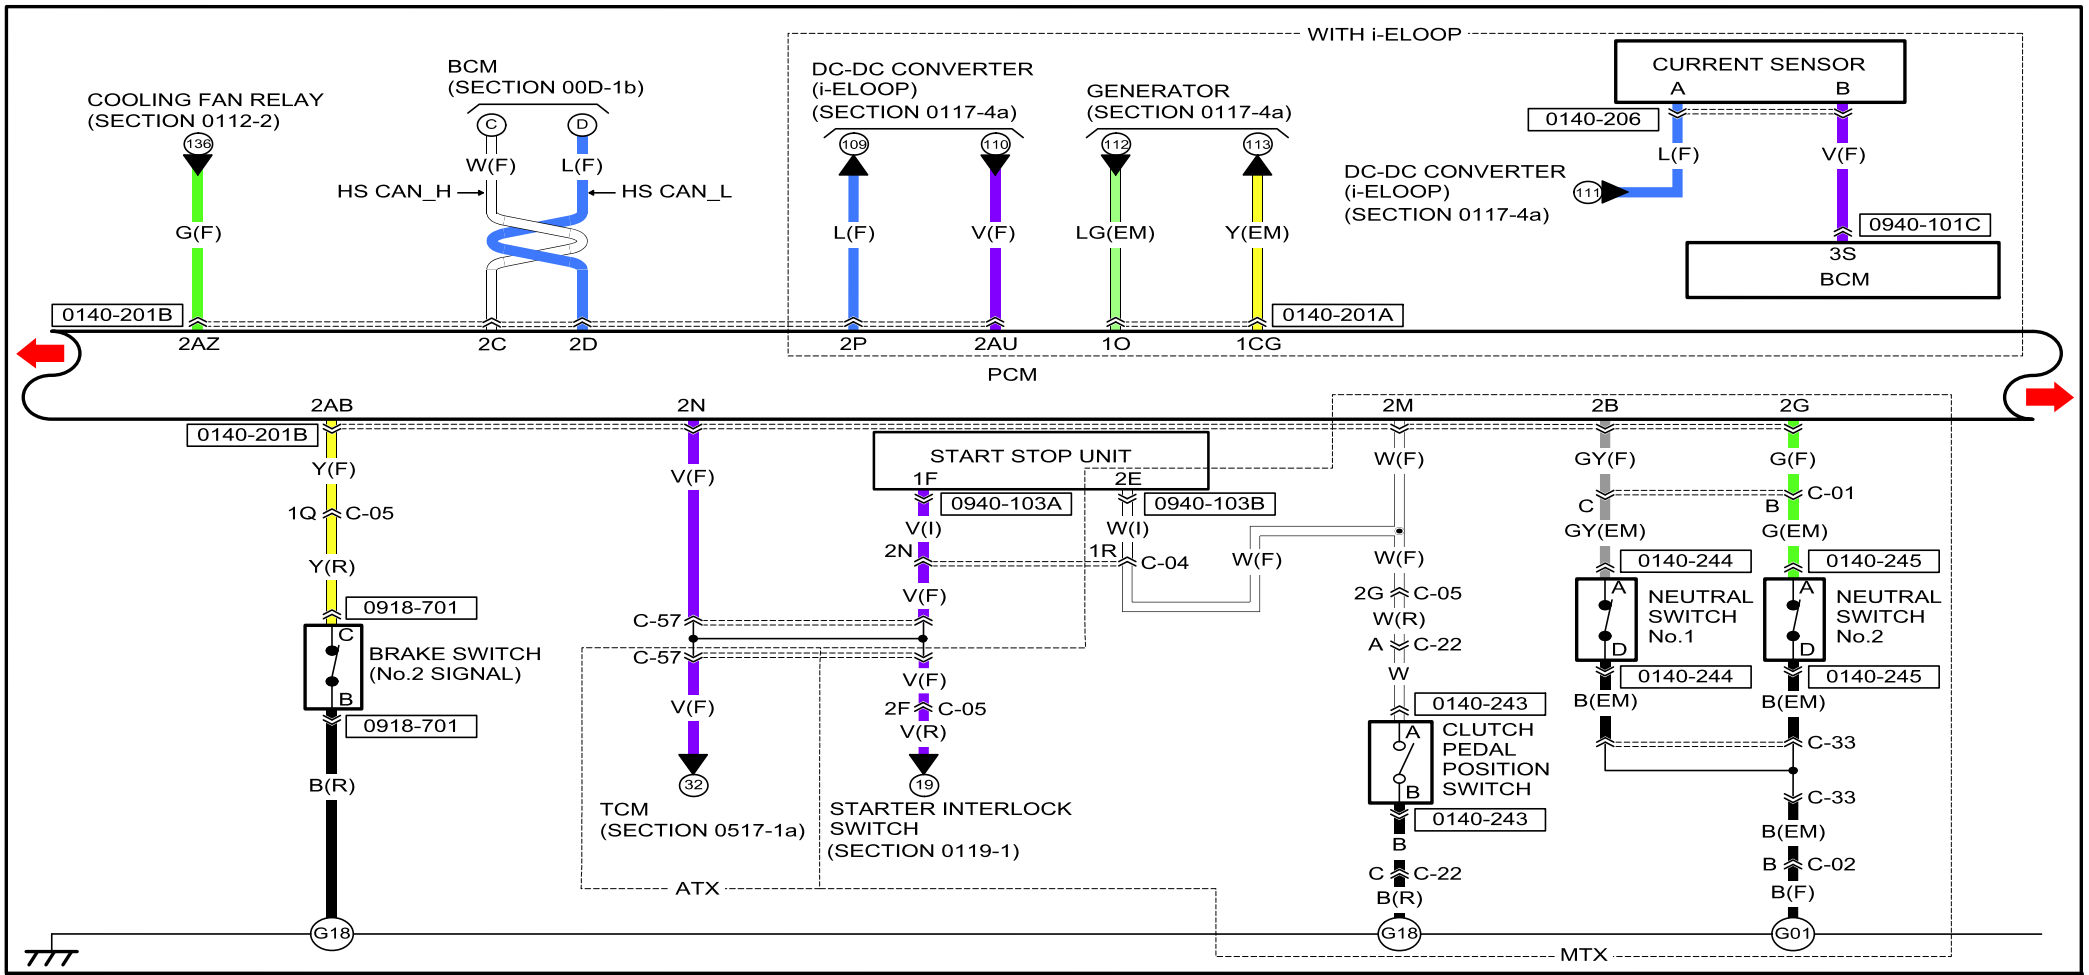



0140-206
CURRENT SENSOR

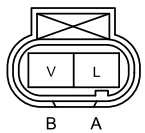


0140-243
CLUTCH PEDAL
POSITION SWITCH




0940-103A
START STOP UNIT

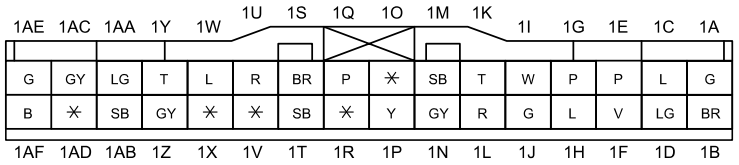


0940-103B
START STOP UNIT

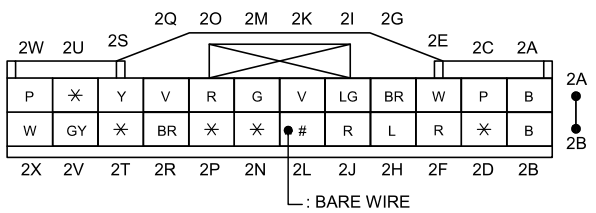


0140-244
NEUTRAL SWITCH No.1

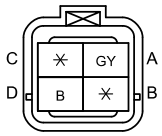


0140-245
NEUTRAL SWITCH No.2

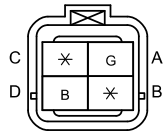


0940-101C
BCM

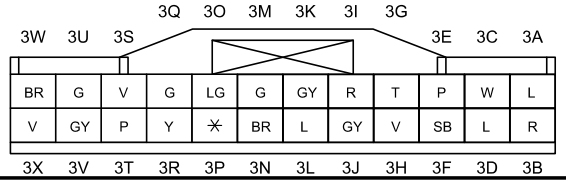

0918-701
BRAKE SWITCH



Refer to 00F section for the FUSE BOX, 00C section for the PCM CONNECTOR and COMMON CONNECTOR LIST.

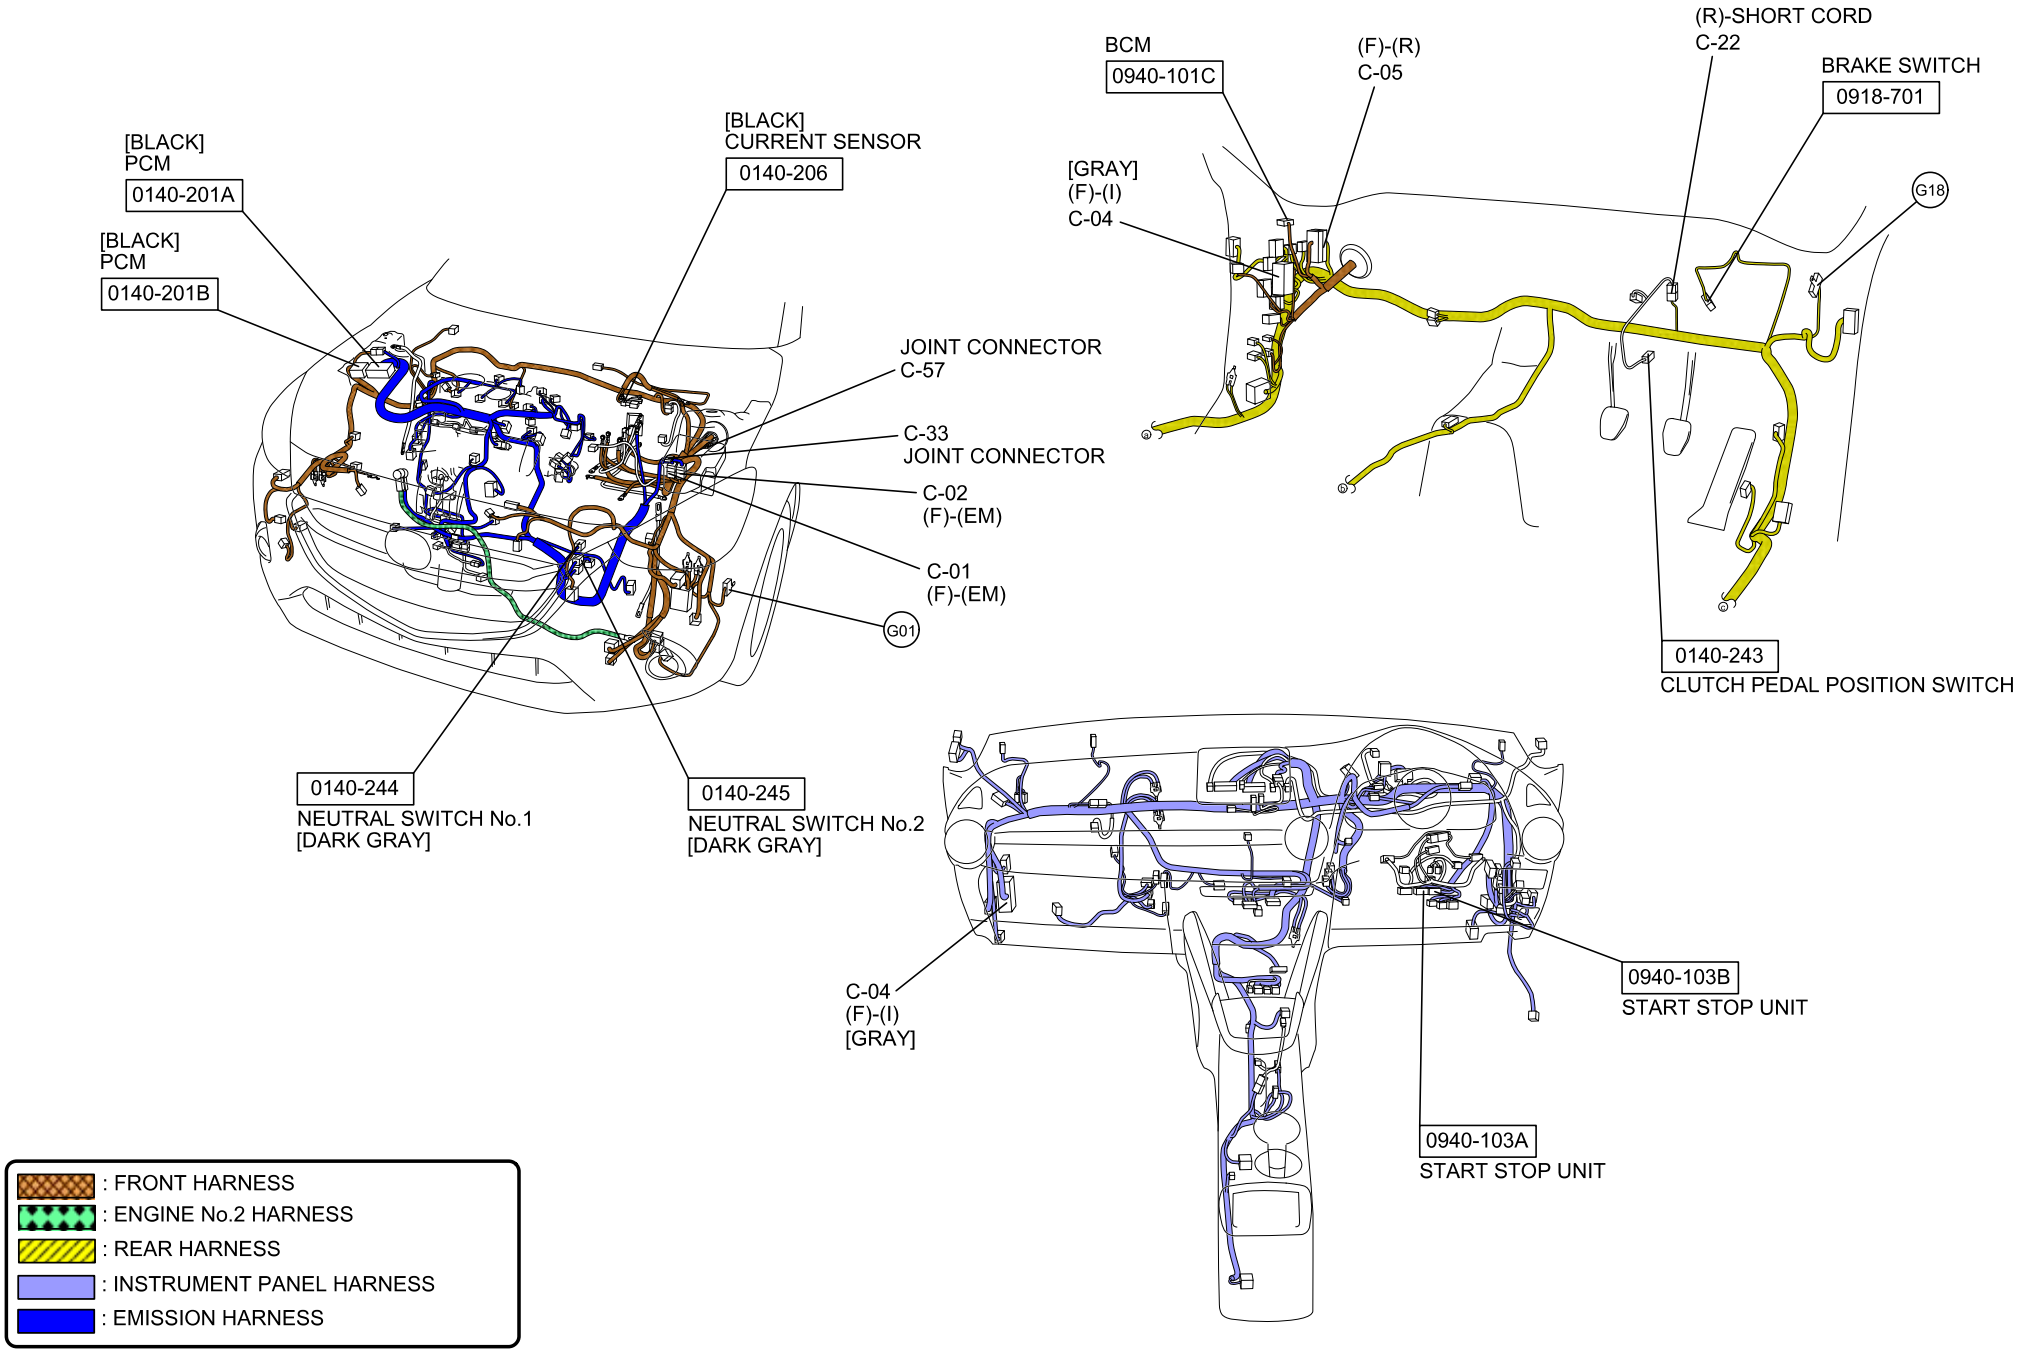
[BLACK]
PCM
0140-201A
[BLACK]
PCM
0140-201B
[BLACK]
CURRENT SENSOR
0140-206
JOINT CONNECTOR
C-57
C-33
JOINT CONNECTOR
C-02
(F)-(EM)
C-01
(F)-(EM)
G01
0140-244
NEUTRAL SWITCH No.1
[DARK GRAY]
0140-245
NEUTRAL SWITCH No.2
[DARK GRAY]
BCM
0940-101C
(F)-(R)
C-05
(R)-SHORT CORD
C-22
BRAKE SWITCH
0918-701
[GRAY]
(F)-(I)
C-04
G18
0140-243
CLUTCH PEDAL POSITION SWITCH
C-04
(F)-(I)
[GRAY]
0940-103B
START STOP UNIT
0940-103A
START STOP UNIT
: FRONT HARNESS
: ENGINE No.2 HARNESS
: REAR HARNESS
: INSTRUMENT PANEL HARNESS
: EMISSION HARNESS