

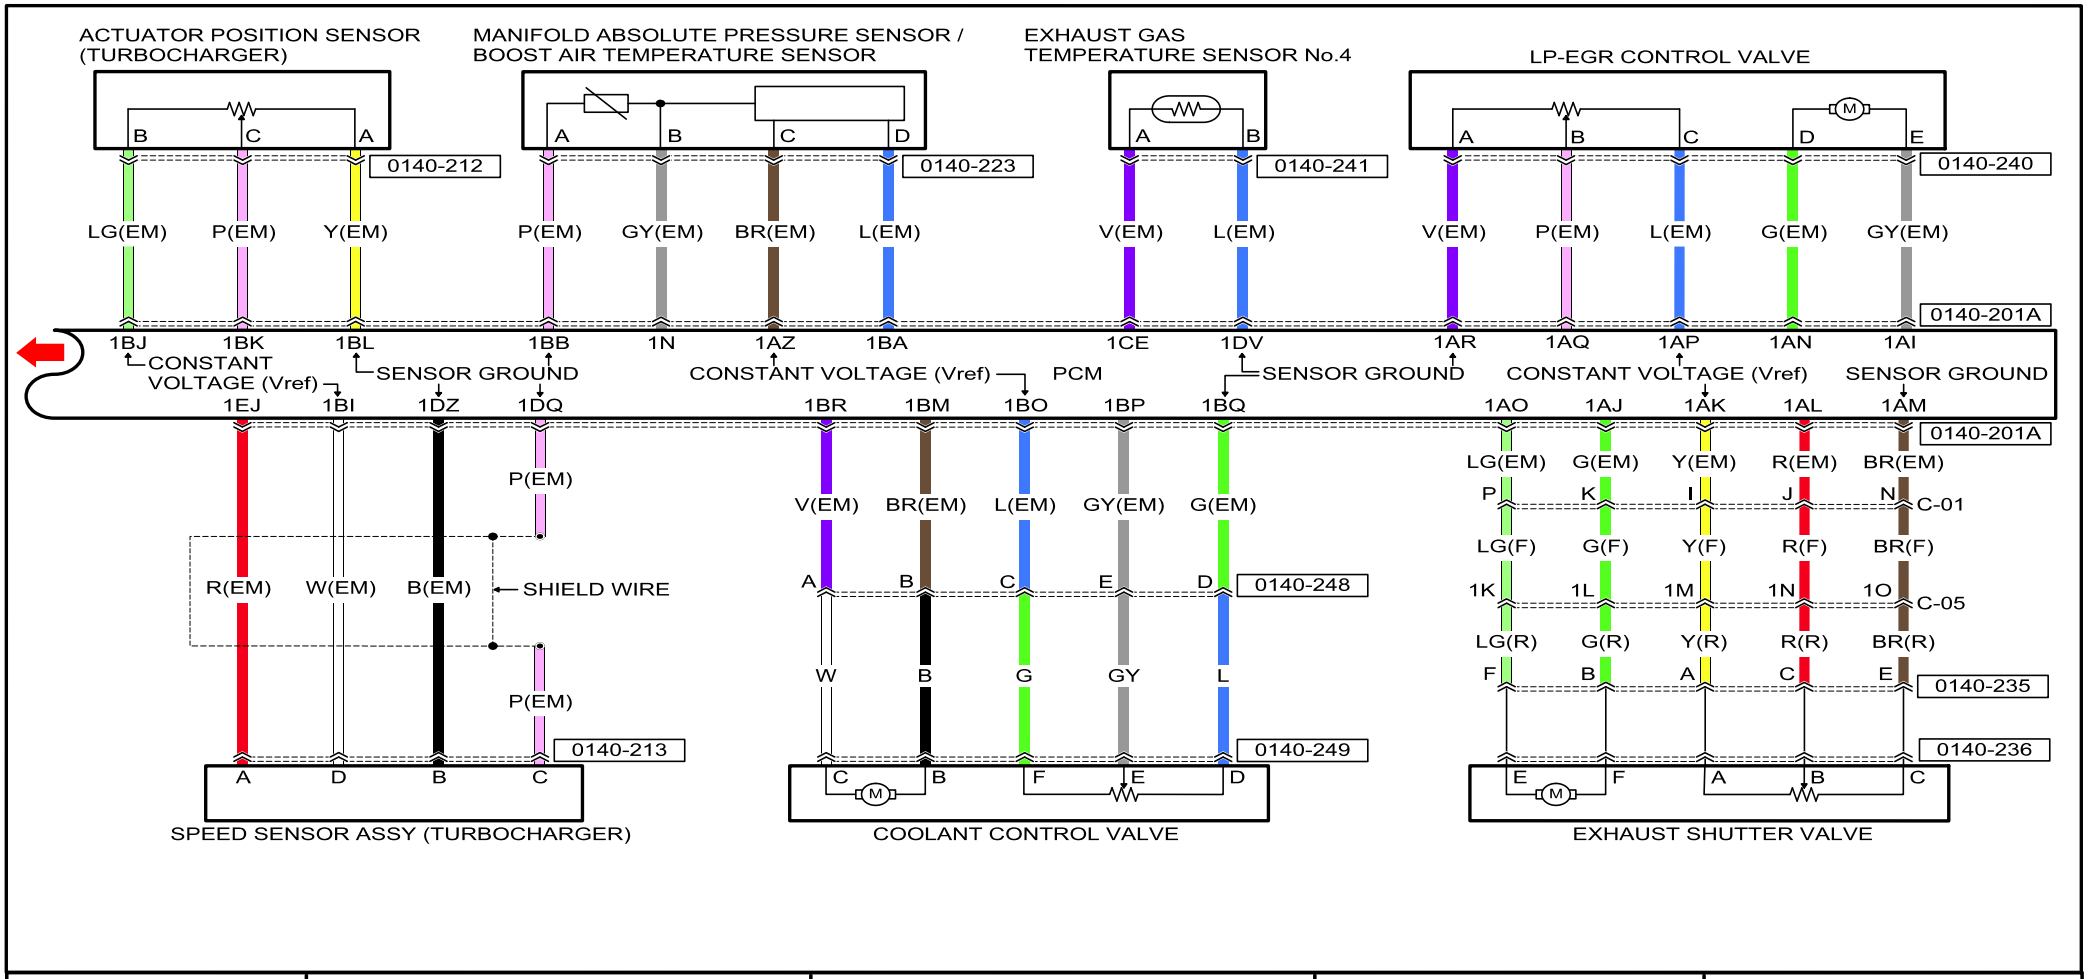



0140-212
ACTUATOR POSITION SENSOR (TURBOCHARGER)




0140-213
SPEED SENSOR ASSY (TURBOCHARGER)

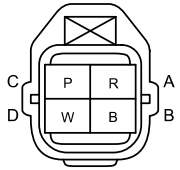


0140-223
MANIFOLD ABSOLUTE PRESSURE SENSOR / BOOST AIR TEMPERATURE SENSOR




0140-235
REAR HARNESS-SHORT CORD

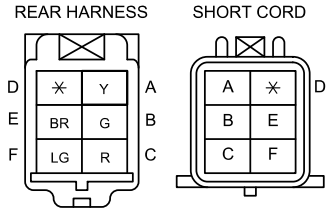


0140-236
EXHAUST SHUTTER VALVE

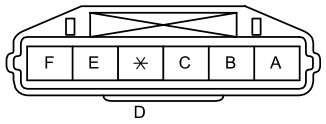


0140-240
LP-EGR CONTROL VALVE

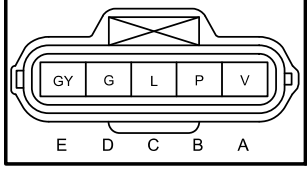


0140-241
EXHAUST GAS TEMPERATURE SENSOR No.4

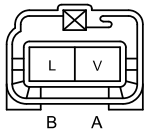


0140-248
EMISSION HARNESS-SHORT CORD

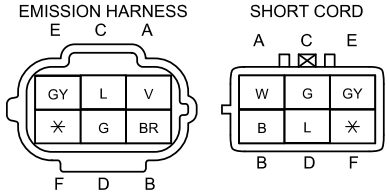



0140-249
COOLANT CONTROL VALVE

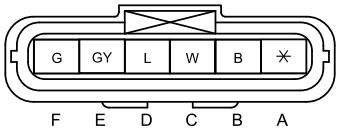


Refer to 00F section for the FUSE BOX, 00C section for the PCM CONNECTOR and COMMON CONNECTOR LIST.

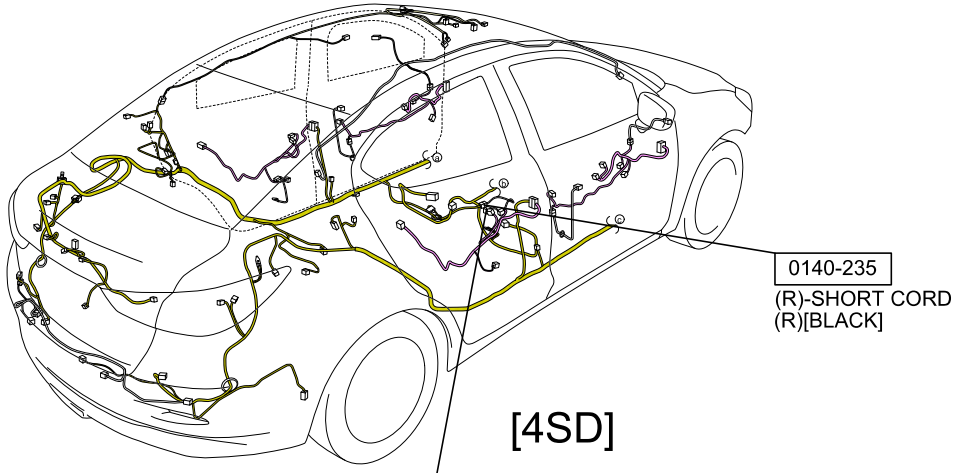

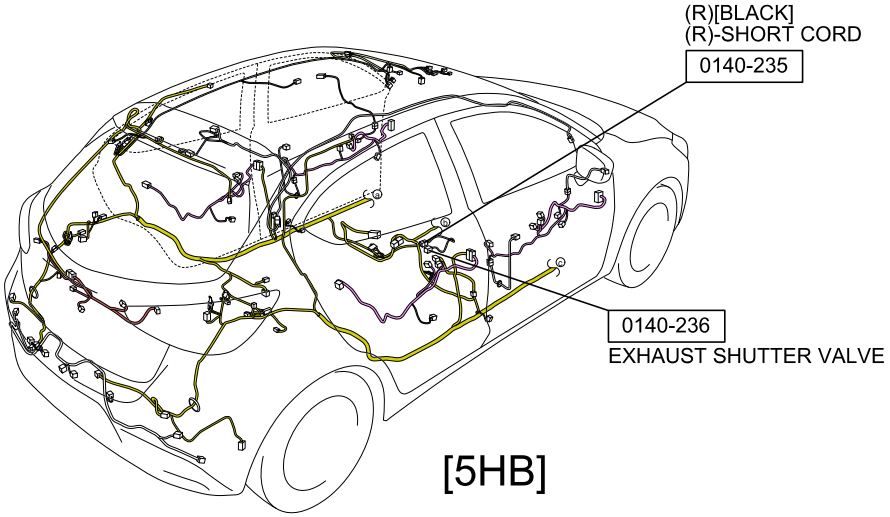

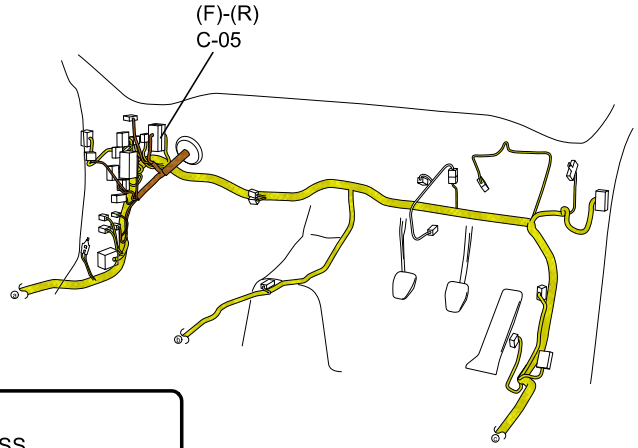

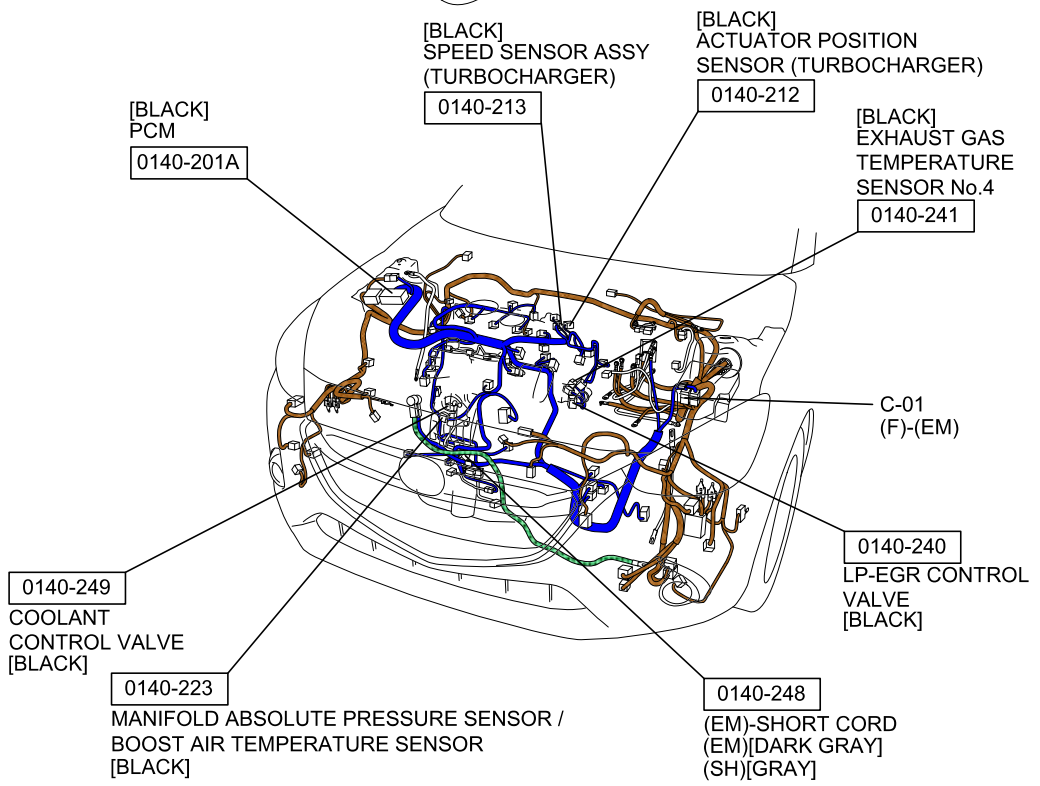

: FRONT HARNESS
: ENGINE No.2 HARNESS
: REAR HARNESS
: REAR No.2 HARNESS
: EMISSION HARNESS
: DOOR HARNESS
: INTERIOR LIGHT HARNESS
INTERIOR LIGHT No.2 HARNESS