




0140-205
BLOW-BY HEATER

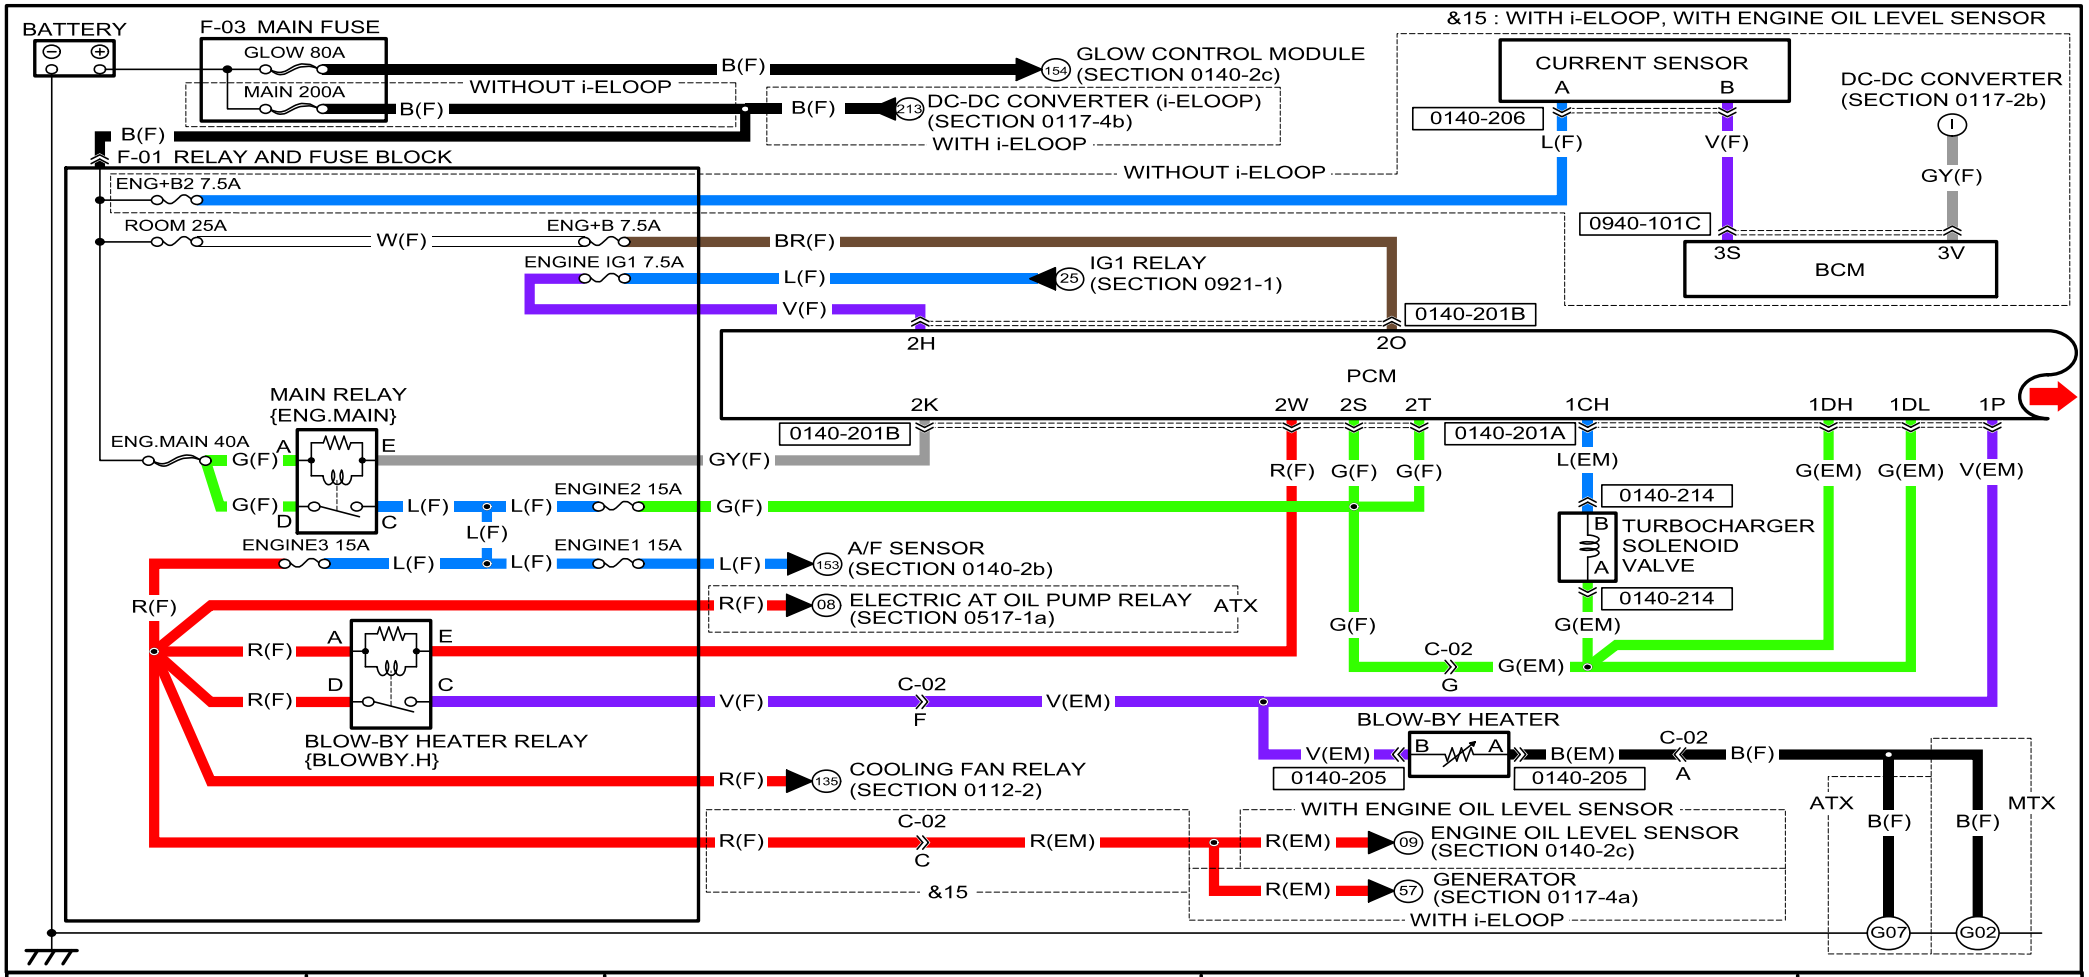


0140-206
CURRENT SENSOR




0140-214
TURBOCHARGER SOLENOID VALVE

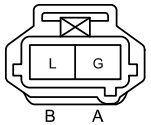

0940-101C
BCM

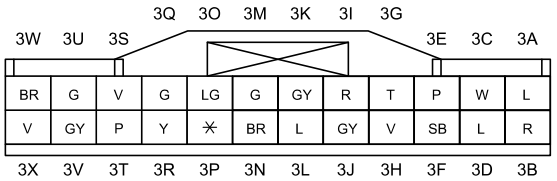

Refer to 00F section for the FUSE BOX, 00C section for the PCM CONNECTOR and COMMON CONNECTOR LIST.

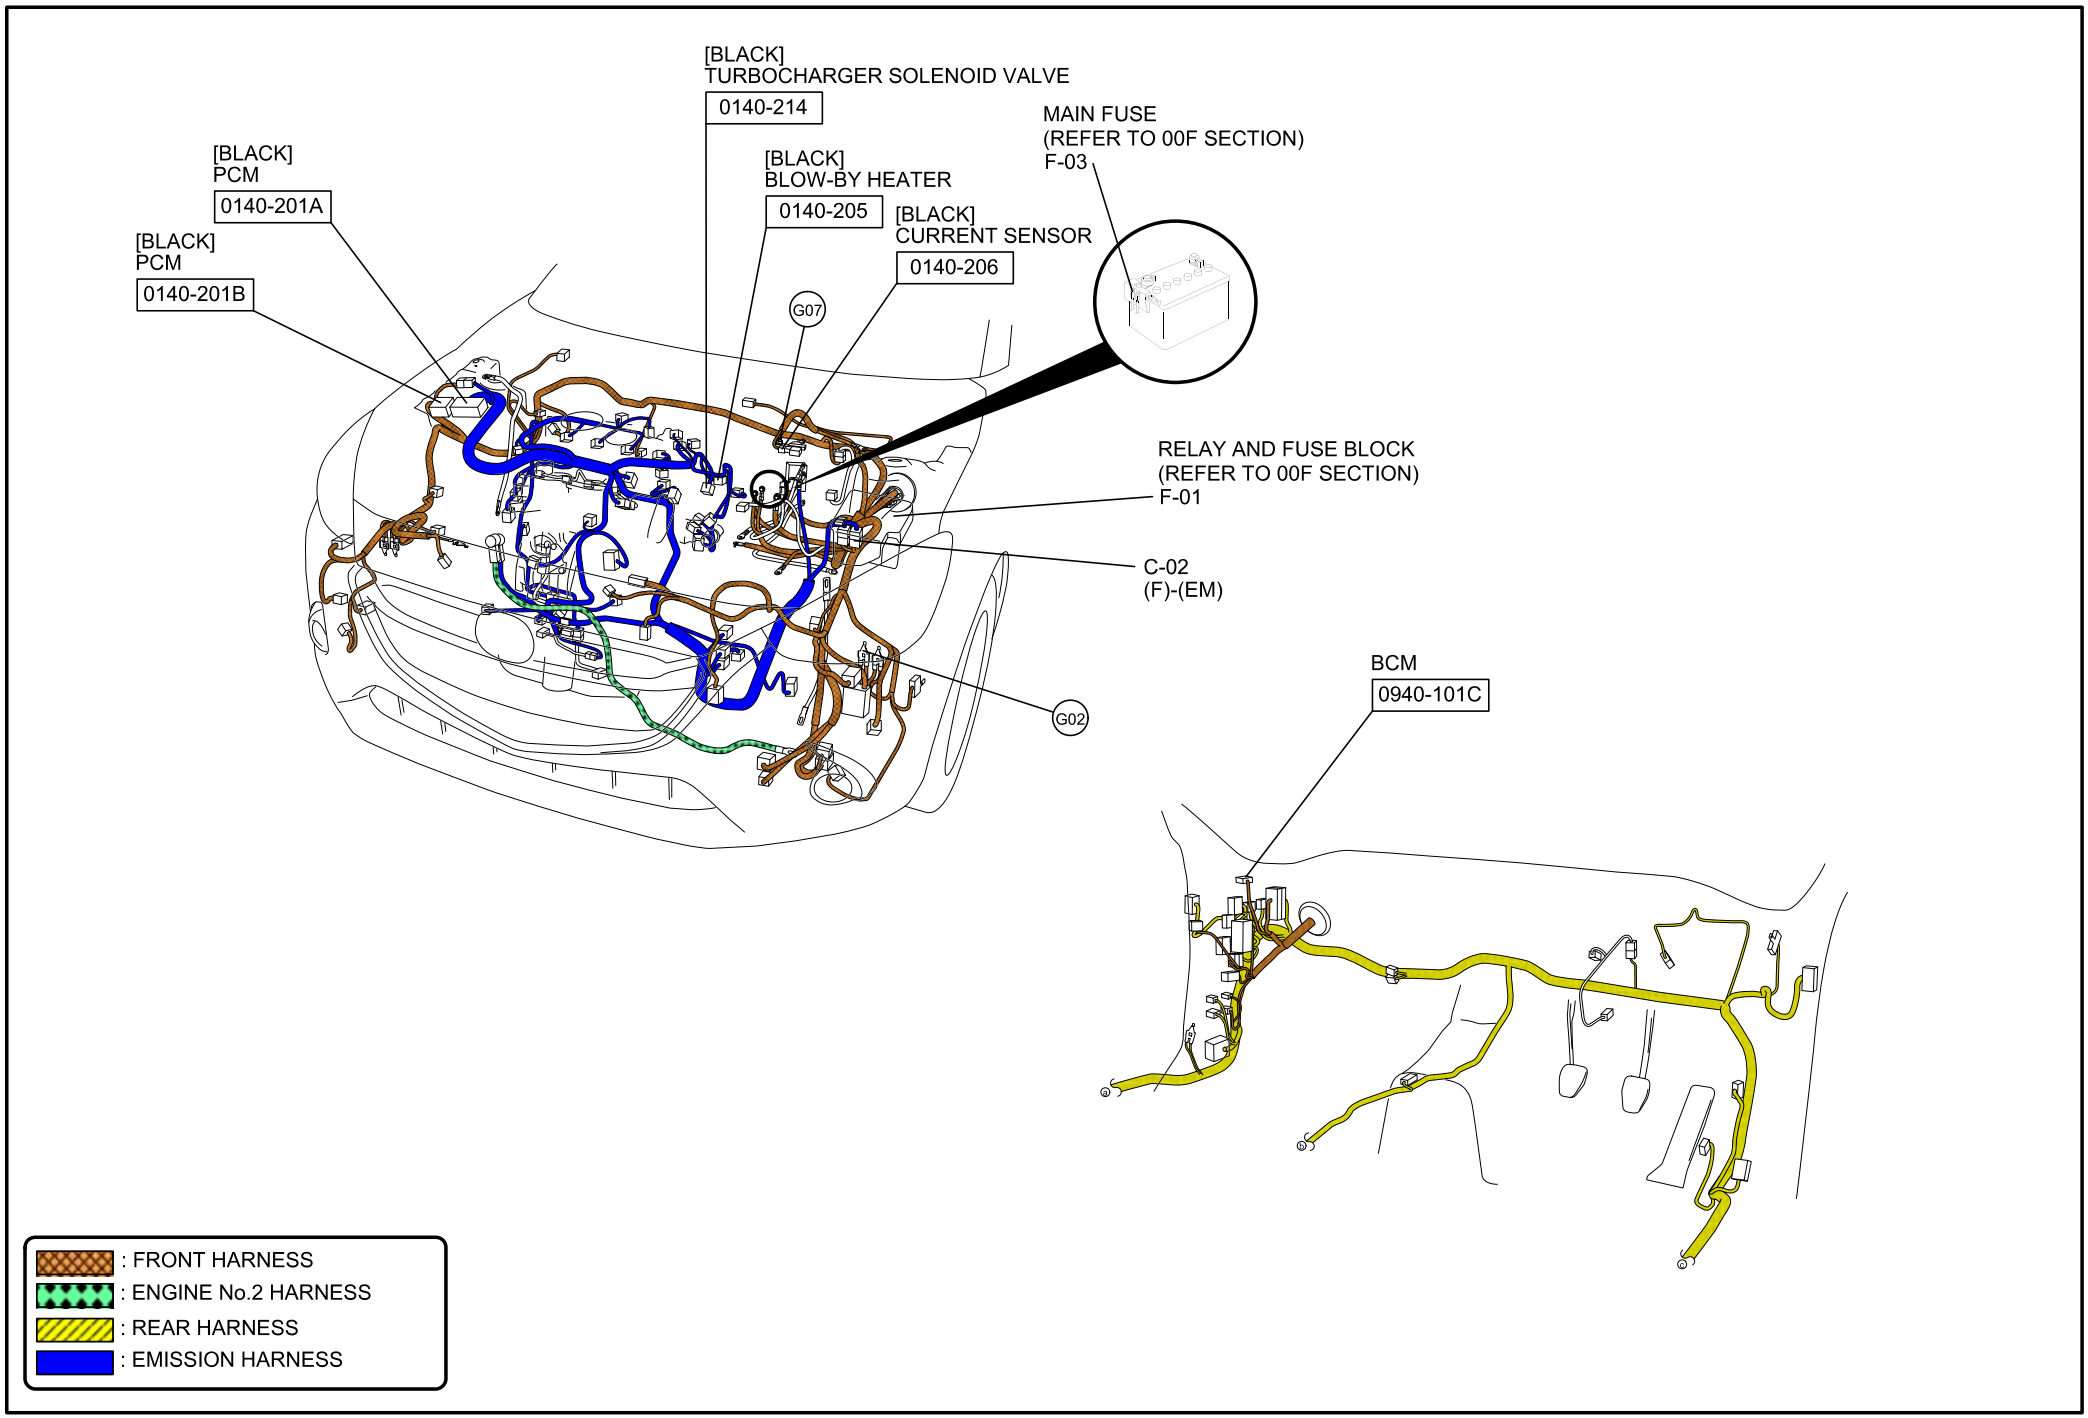
[BLACK]
TURBOCHARGER SOLENOID VALVE
0140-214
MAIN FUSE
(REFER TO 00F SECTION)
F-03
[BLACK]
PCM
0140-201A
[BLACK]
BLOW-BY HEATER
0140-205
[BLACK]
CURRENT SENSOR
0140-206
[BLACK]
PCM
0140-201B
G07
RELAY AND FUSE BLOCK
(REFER TO 00F SECTION)
F-01
C-02
(F)-(EM)
G02
BCM
0940-101C
: FRONT HARNESS
: ENGINE No.2 HARNESS
: REAR HARNESS
: EMISSION HARNESS