

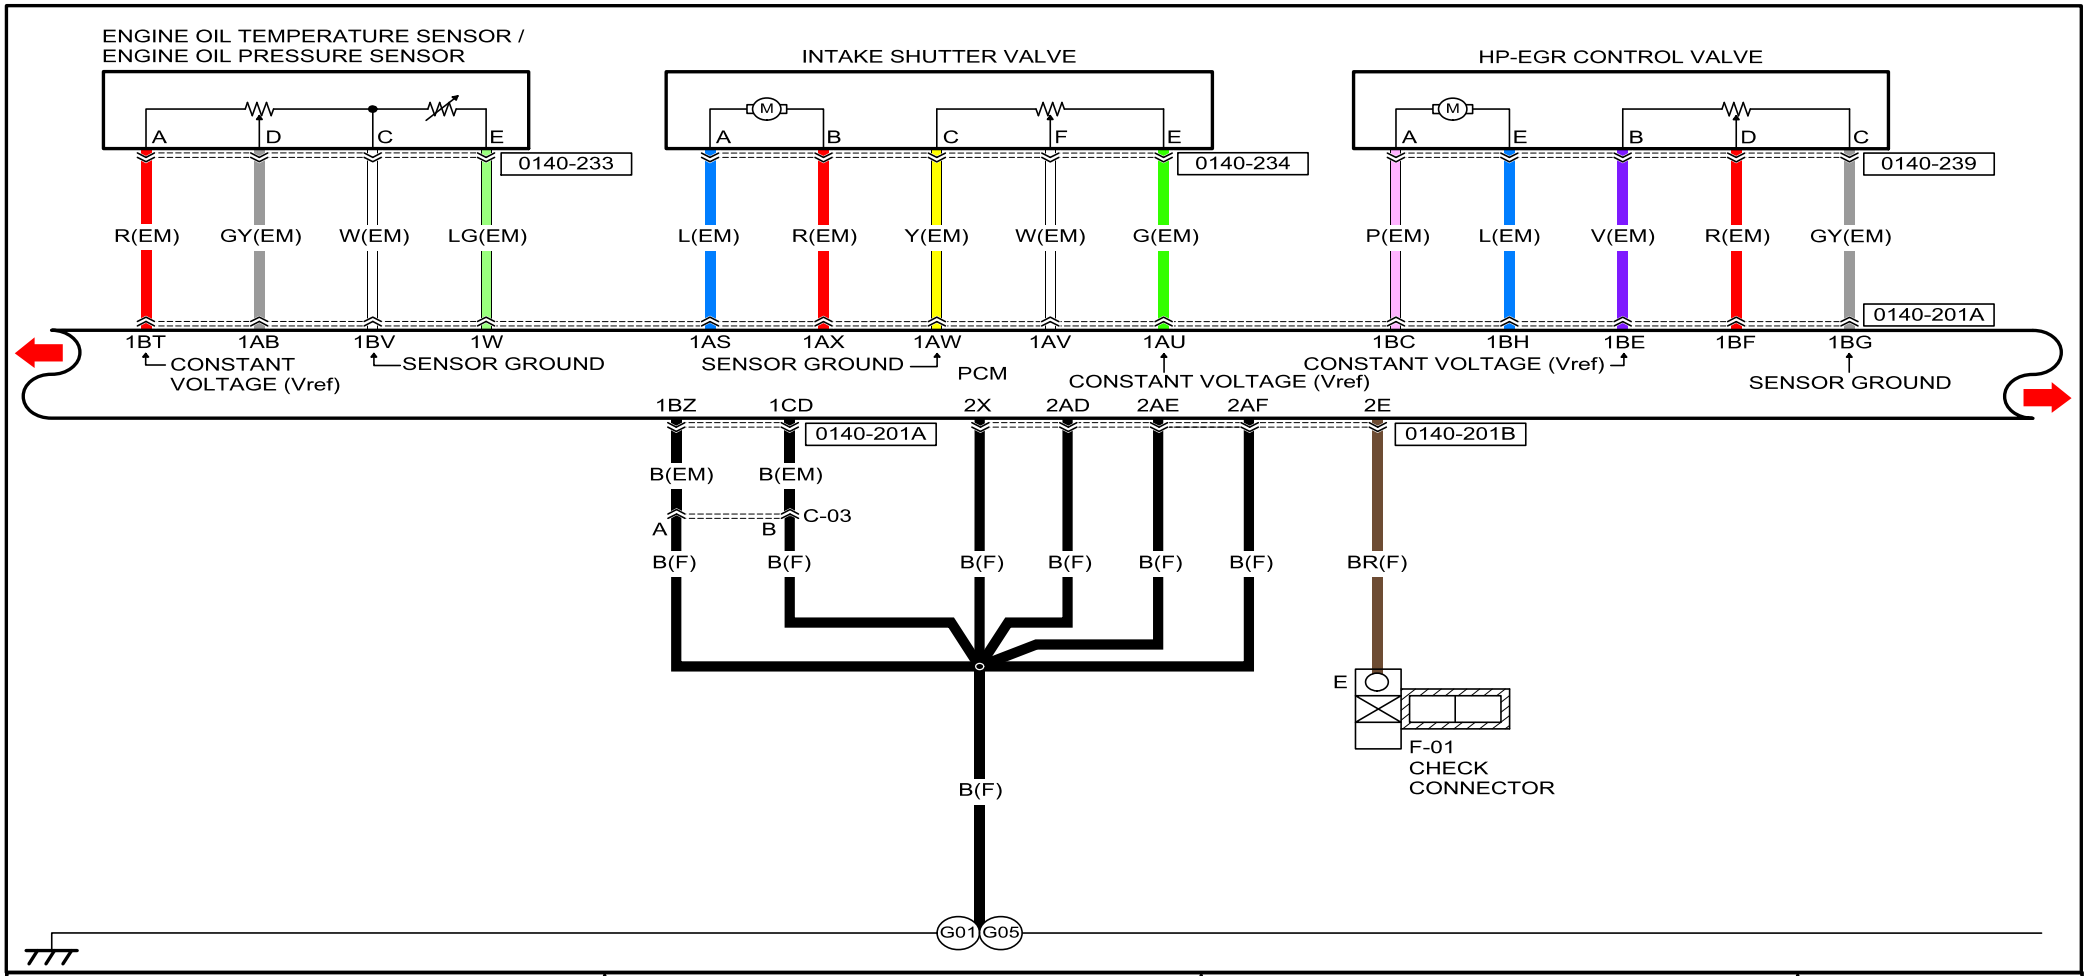



0140-233
ENGINE OIL TEMPERATURE SENSOR / ENGINE OIL PRESSURE SENSOR

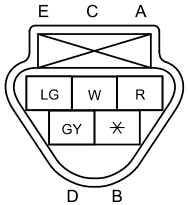


0140-234
INTAKE SHUTTER VALVE

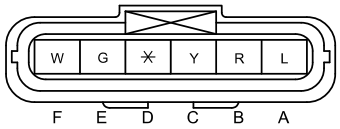

0140-239
HP-EGR CONTROL VALVE

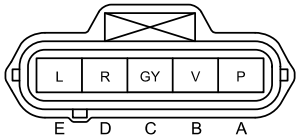

Refer to 00F section for the FUSE BOX, 00C section for the PCM CONNECTOR and COMMON CONNECTOR LIST.

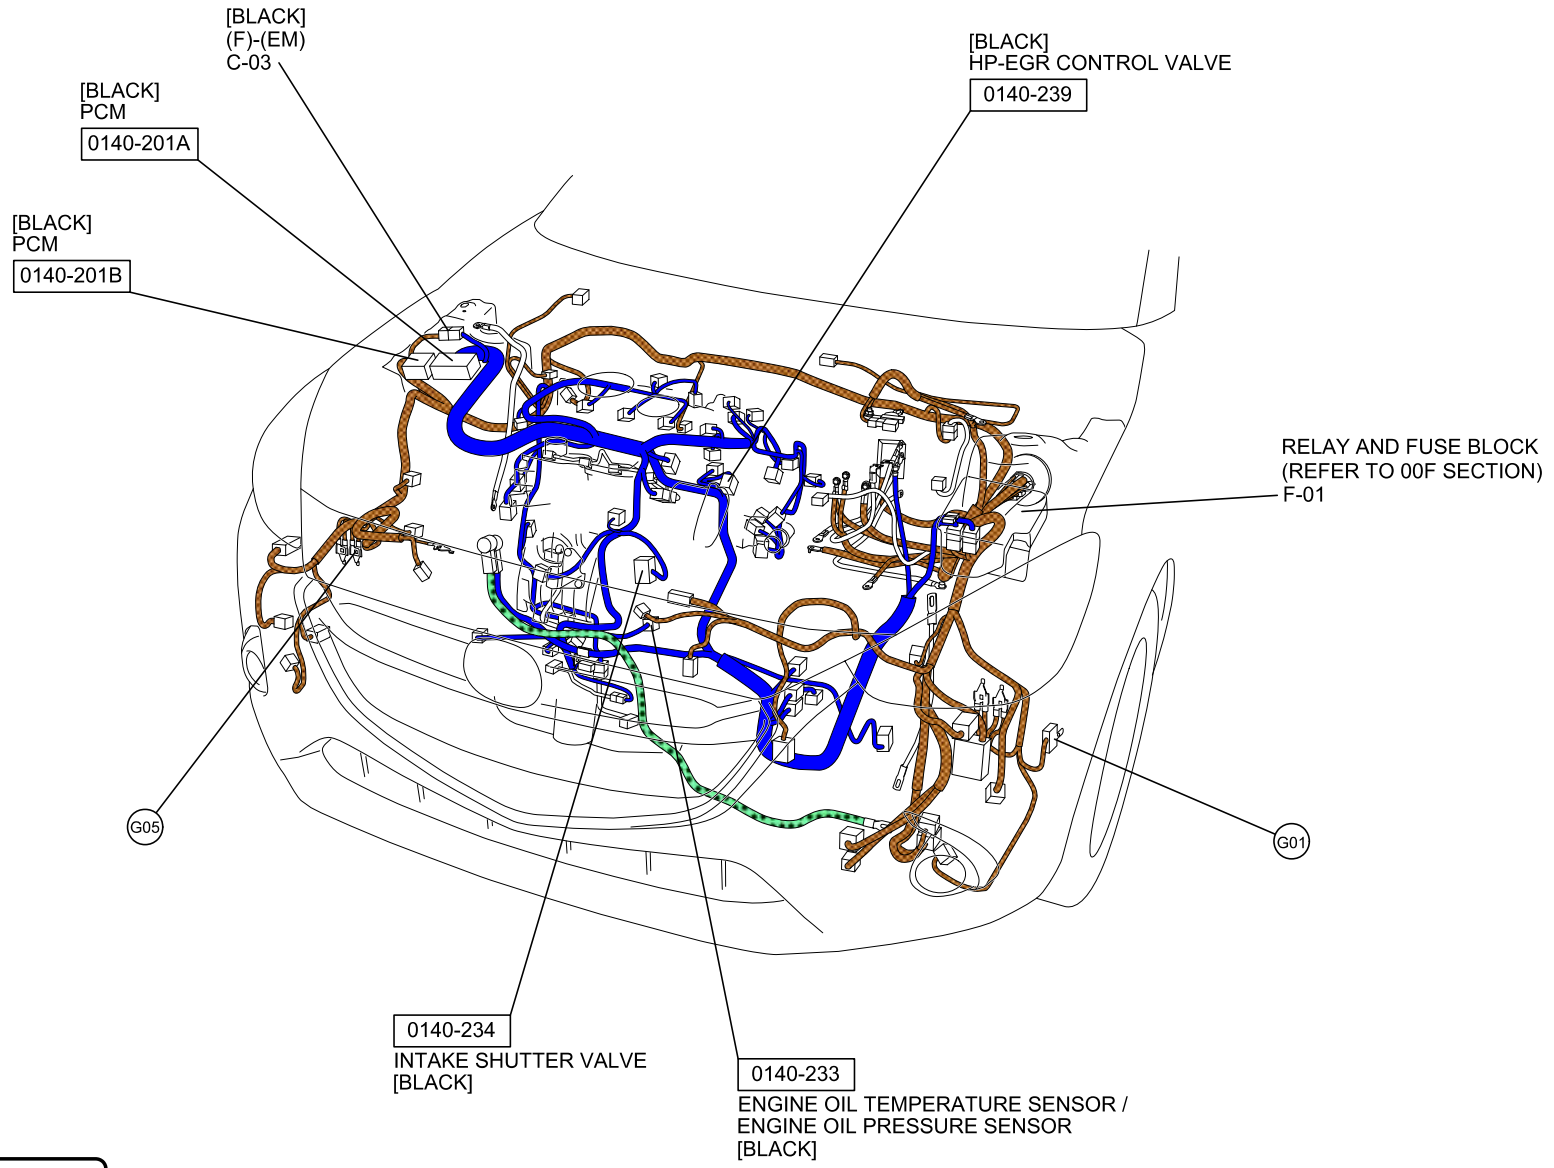
[BLACK]
(F)-(EM)
C-03
[BLACK]
PCM
0140-201A
[BLACK]
PCM
0140-201B
[BLACK]
HP-EGR CONTROL VALVE
0140-239
RELAY AND FUSE BLOCK
(REFER TO 00F SECTION)
F-01
G05
G01
0140-234
INTAKE SHUTTER VALVE
[BLACK]
0140-233
ENGINE OIL TEMPERATURE SENSOR /
ENGINE OIL PRESSURE SENSOR
[BLACK]
: FRONT HARNESS
: ENGINE No.2 HARNESS
: EMISSION HARNESS