

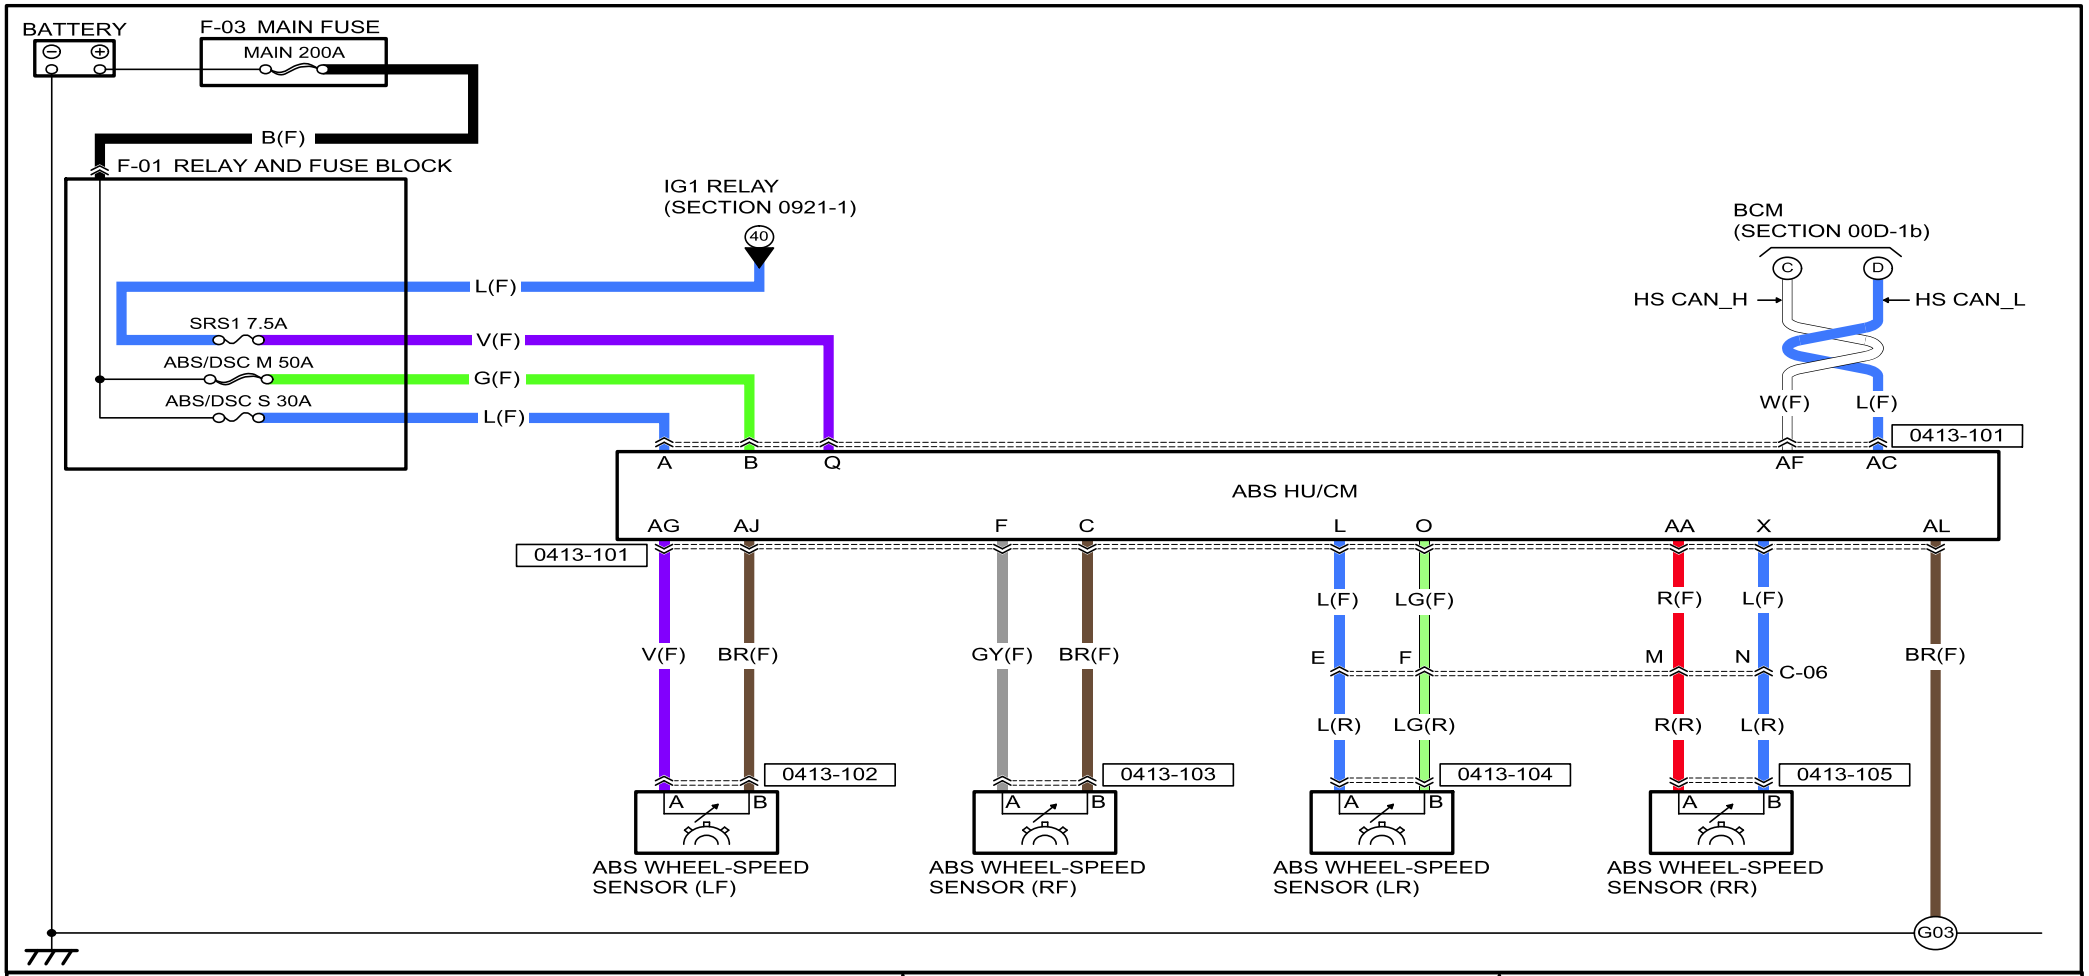



0413-101
ABS HU/CM

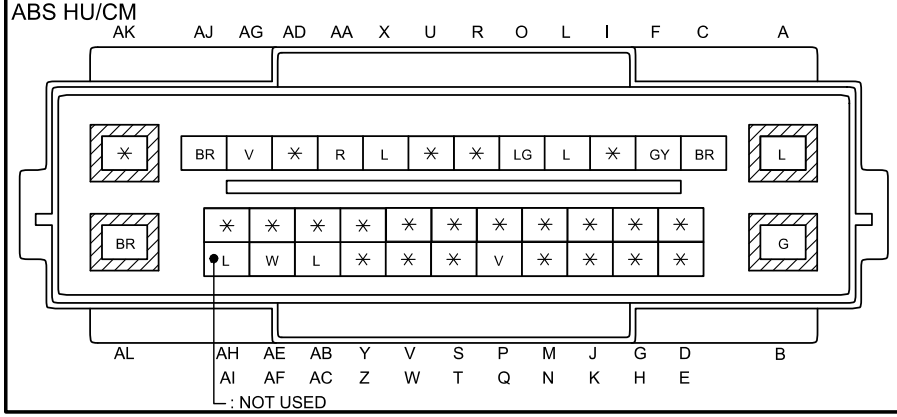


0413-102
ABS WHEEL-SPEED SENSOR (LF)




0413-103
ABS WHEEL-SPEED SENSOR (RF)




0413-104
ABS WHEEL-SPEED SENSOR (LR)

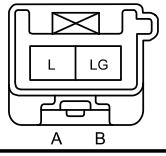


0413-105
ABS WHEEL-SPEED SENSOR (RR)

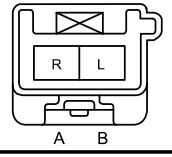


Refer to 00F section for the FUSE BOX, 00C section for the PCM CONNECTOR and COMMON CONNECTOR LIST.

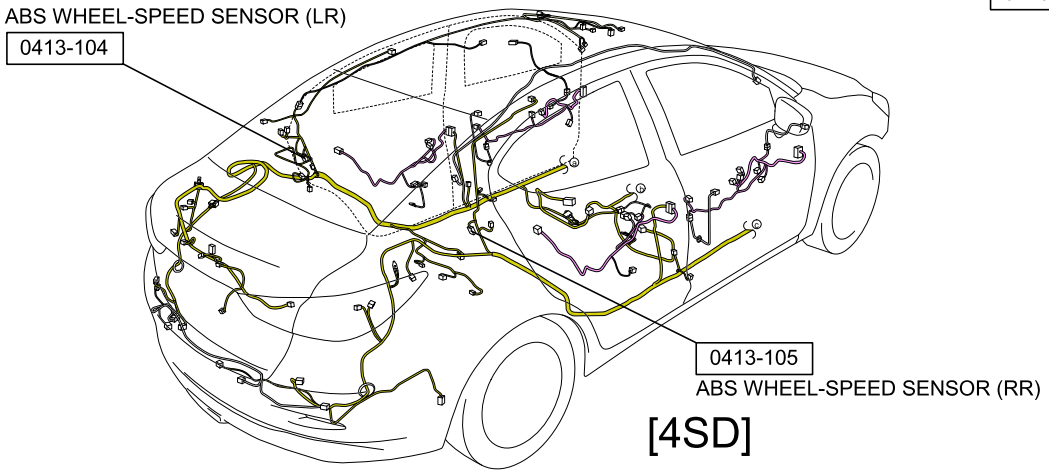


[4SD]

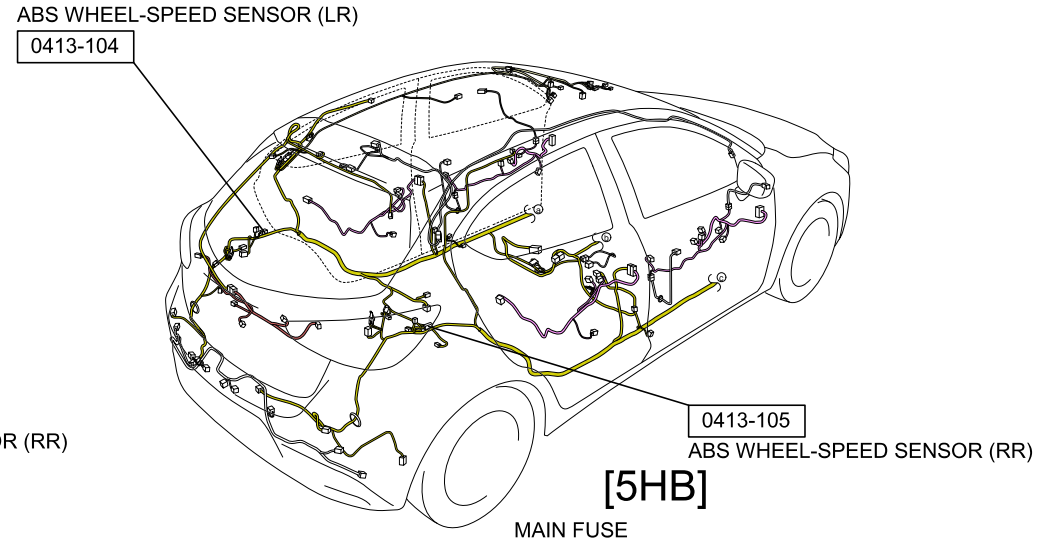

[5HB]

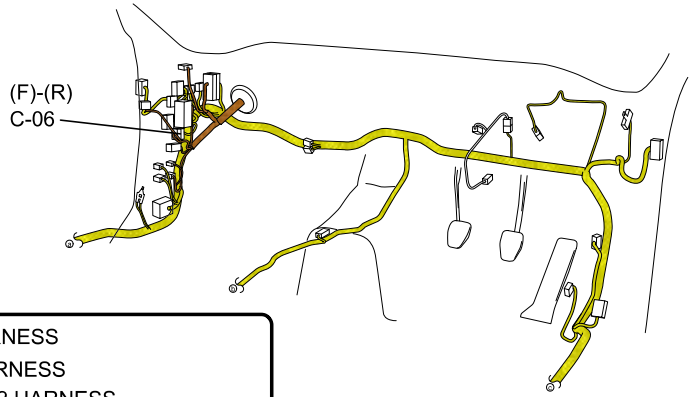

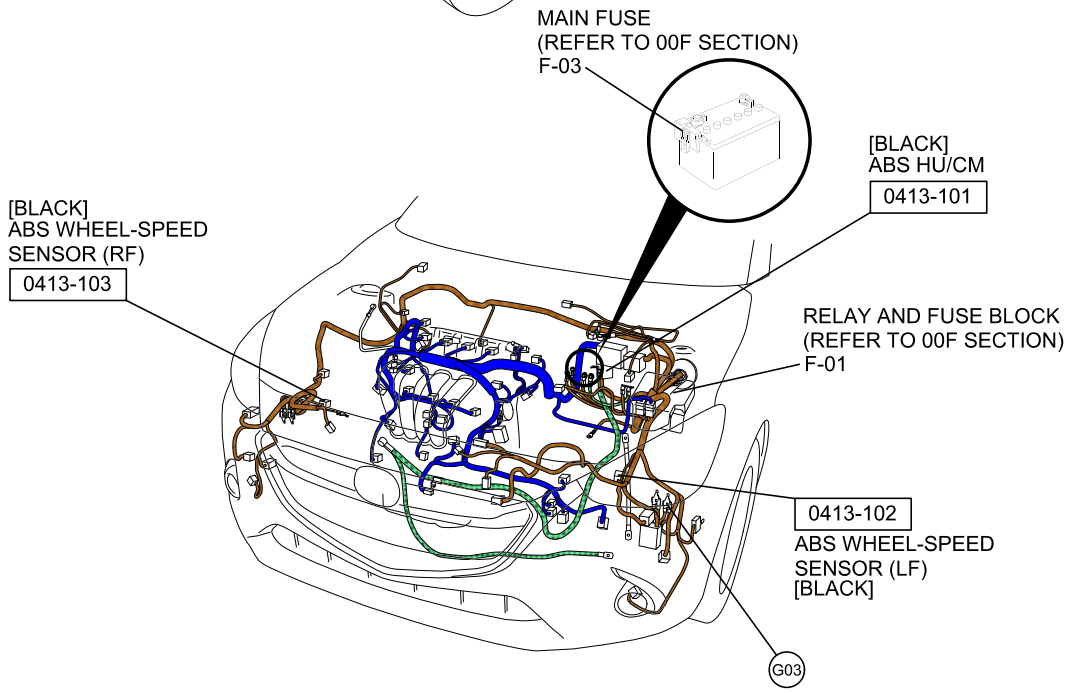

: FRONT HARNESS
: ENGINE HARNESS
ENGINE No.2 HARNESS
: REAR HARNESS
: REAR No.2 HARNESS
: EMISSION HARNESS
: DOOR HARNESS
: INTERIOR LIGHT HARNESS
INTERIOR LIGHT No.2 HARNESS