

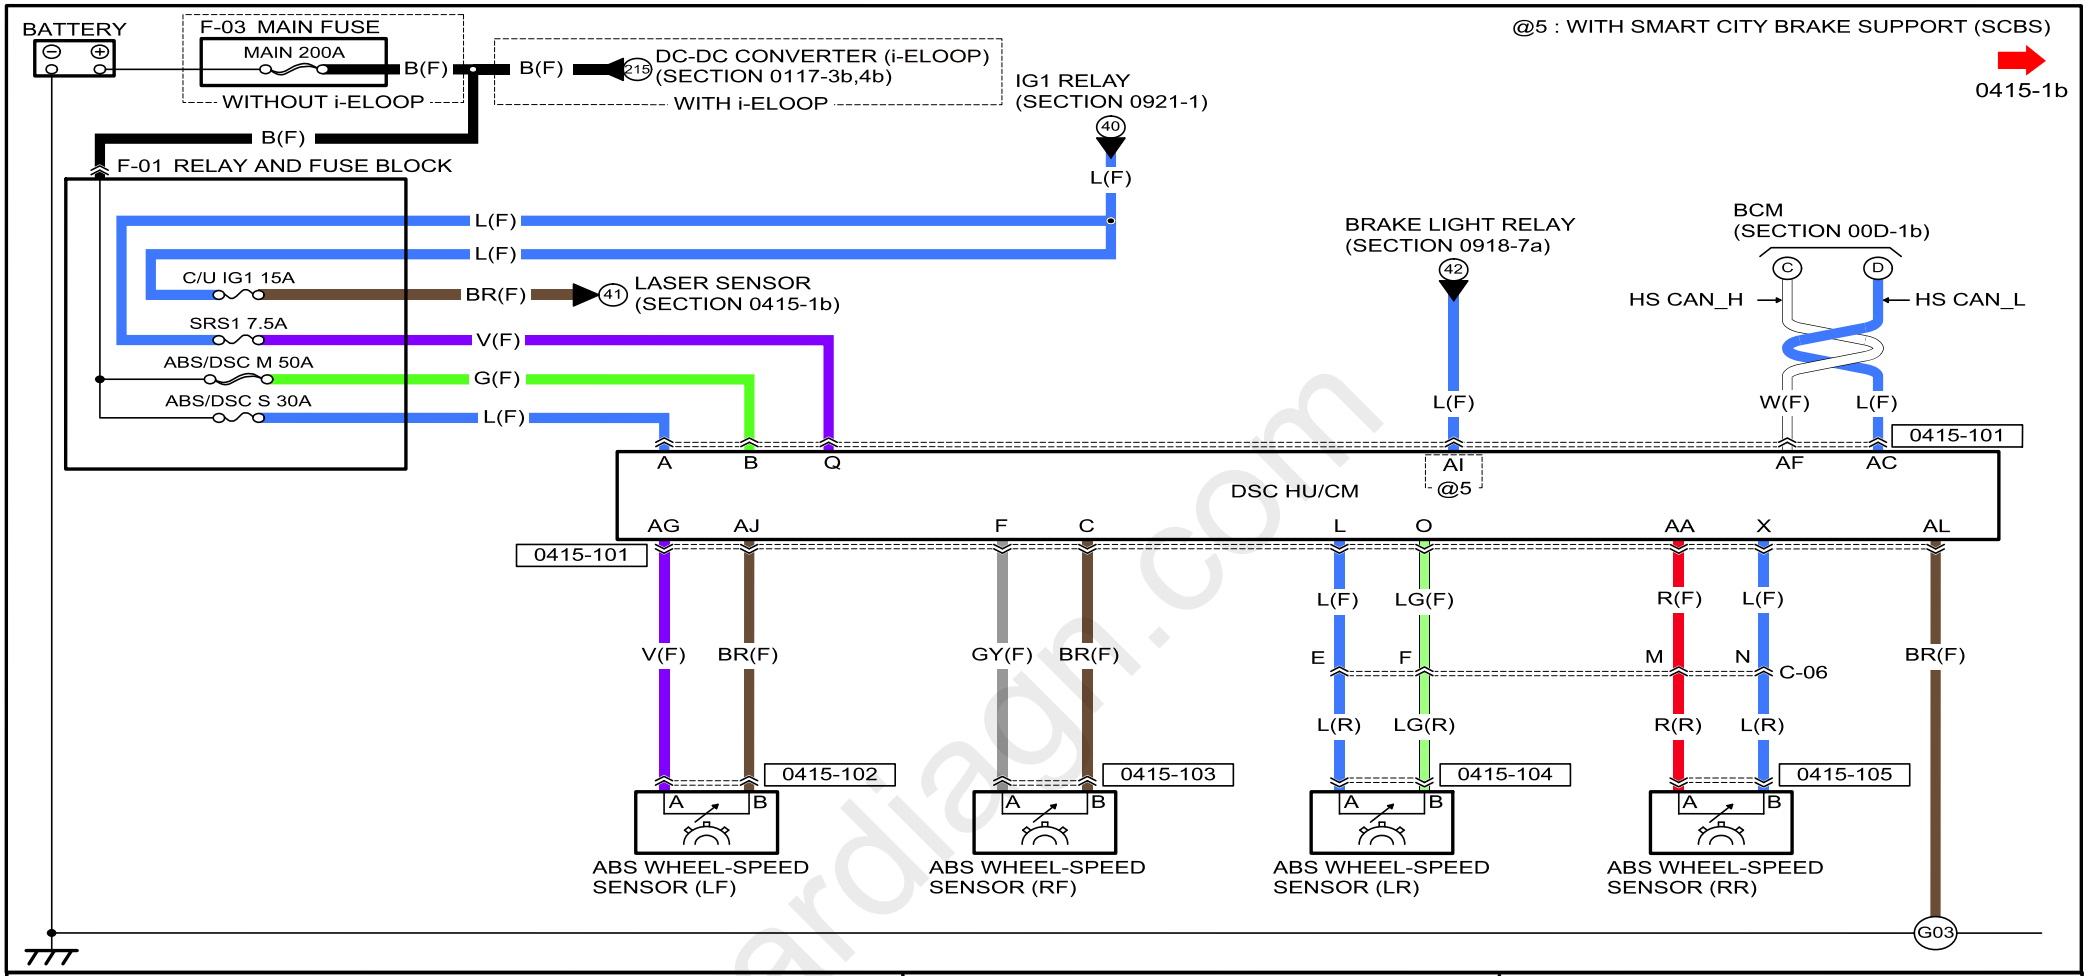



0415-101
DSC HU/CM

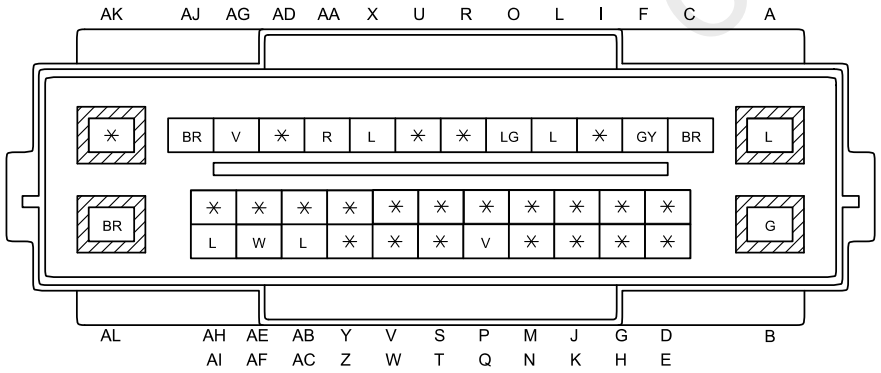


0415-102
ABS WHEEL-SPEED SENSOR (LF)




0415-103
ABS WHEEL-SPEED SENSOR (RF)




0415-104
ABS WHEEL-SPEED SENSOR (LR)

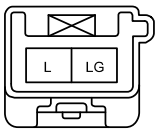



0415-105
ABS WHEEL-SPEED SENSOR (RR)

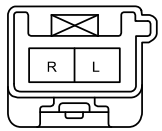



Refer to 00F section for the FUSE BOX, 00C section for the PCM CONNECTOR and COMMON CONNECTOR LIST.

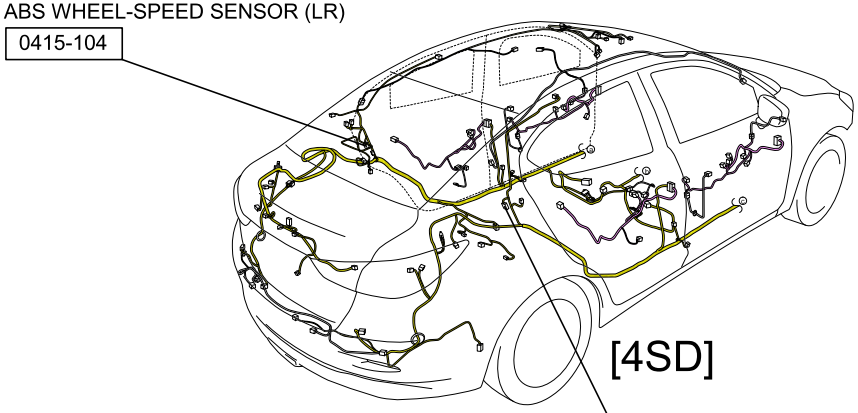

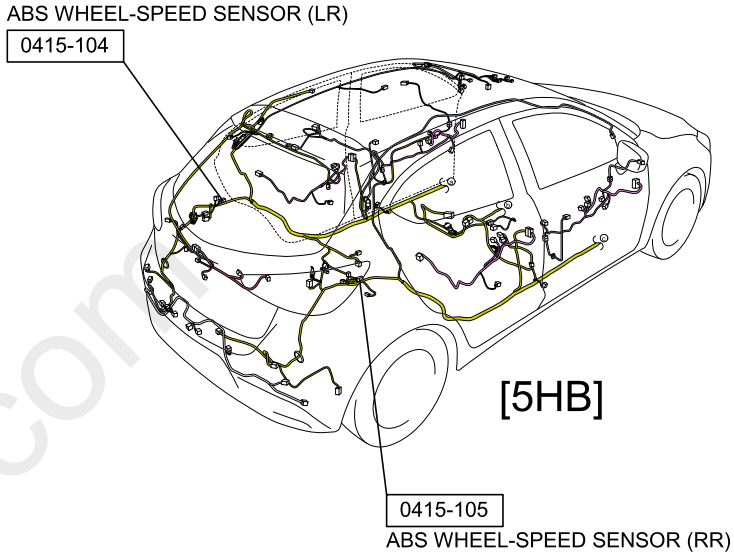

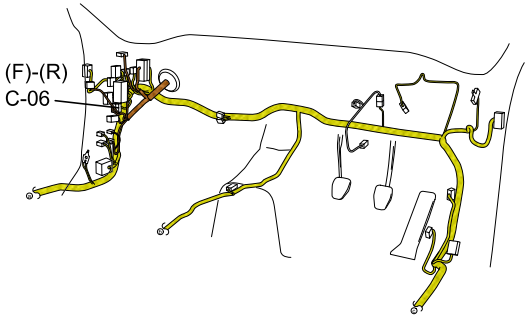

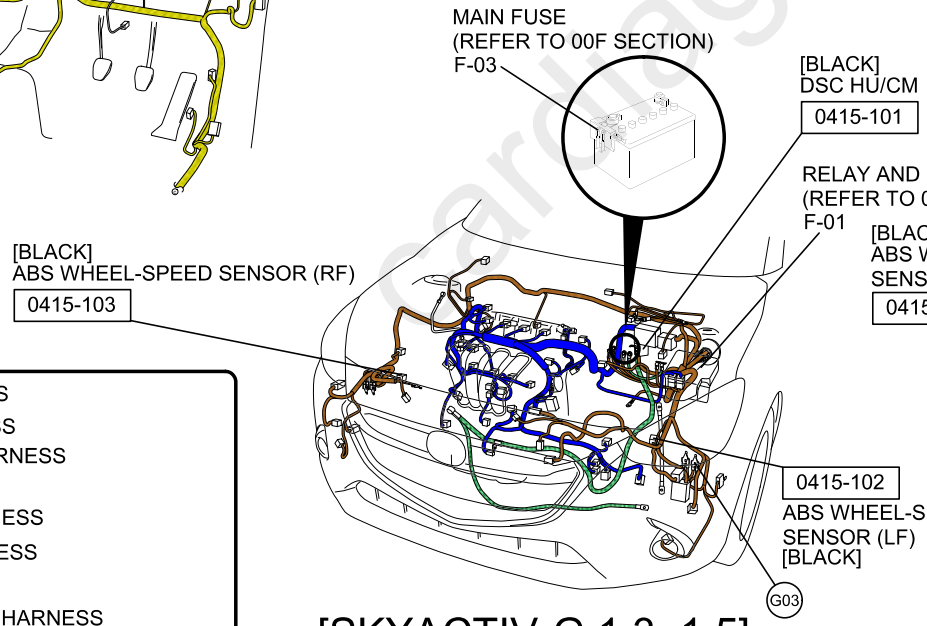

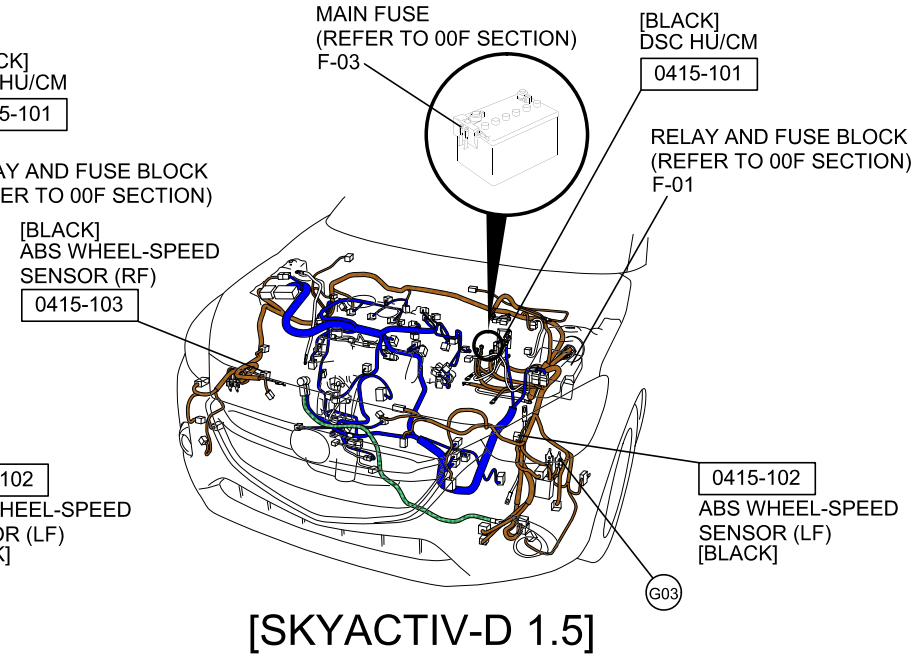

: FRONT HARNESS
: ENGINE HARNESS
ENGINE No.2 HARNESS
: REAR HARNESS
: REAR No.2 HARNESS
: EMISSION HARNESS
: DOOR HARNESS
: INTERIOR LIGHT HARNESS
INTERIOR LIGHT No.2 HARNESS

cardiagn.com