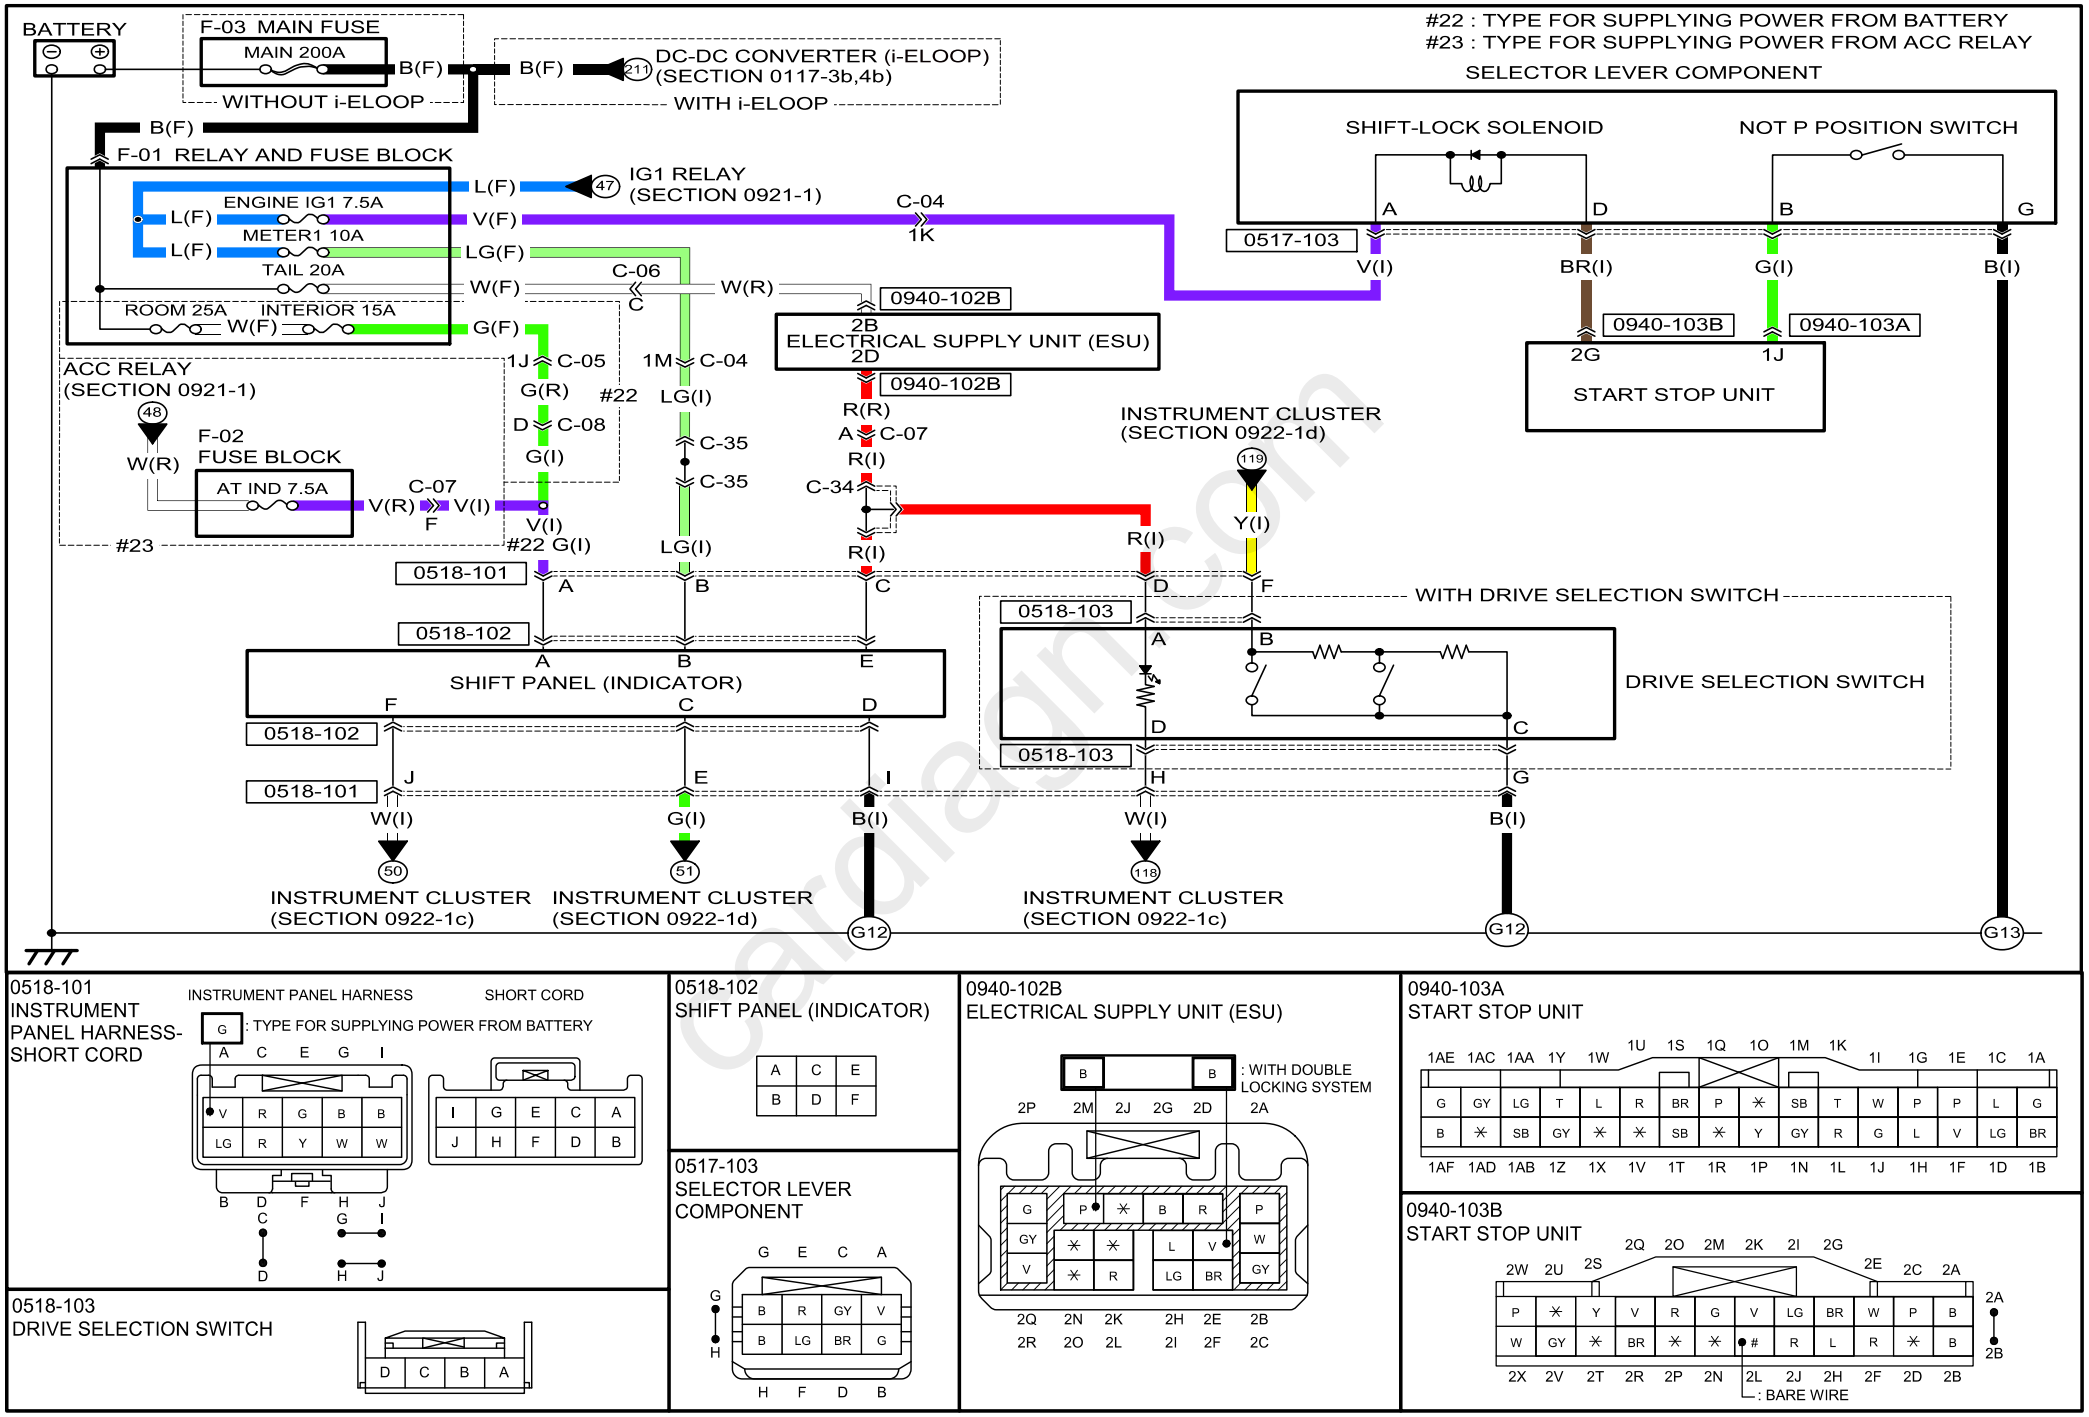


0518-101
INSTRUMENT PANEL HARNESS-SHORT CORD

0518-102
SHIFT PANEL (INDICATOR)

0518-103
DRIVE SELECTION SWITCH


0517-103
SELECTOR LEVER COMPONENT

0940-102B
ELECTRICAL SUPPLY UNIT (ESU)


0940-103A
START STOP UNIT

0940-103B
START STOP UNIT


Refer to 00F section for the FUSE BOX, 00C section for the PCM CONNECTOR and COMMON CONNECTOR LIST.

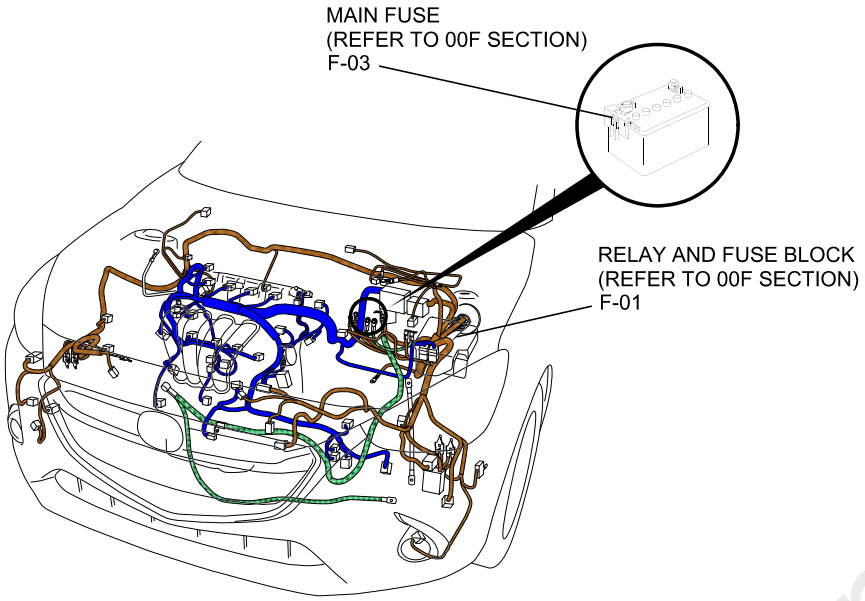


[SKYACTIV-G 1.3, 1.5]

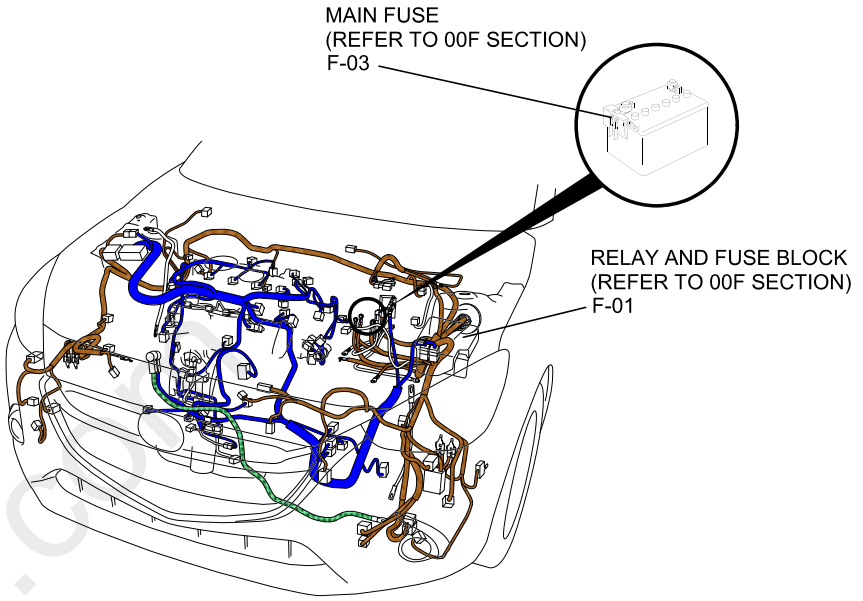

[SKYACTIV-D 1.5]

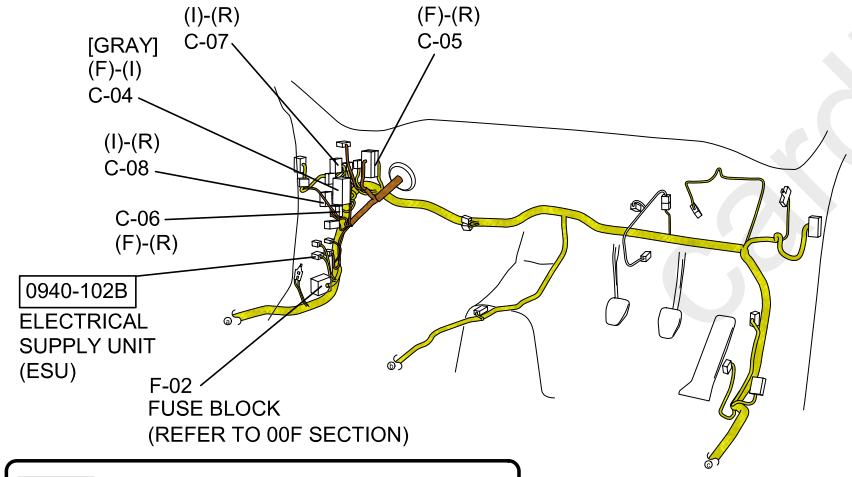

: FRONT HARNESS
: ENGINE HARNESS
ENGINE No.2 HARNESS
: REAR HARNESS
: INSTRUMENT PANEL HARNESS
: EMISSION HARNESS

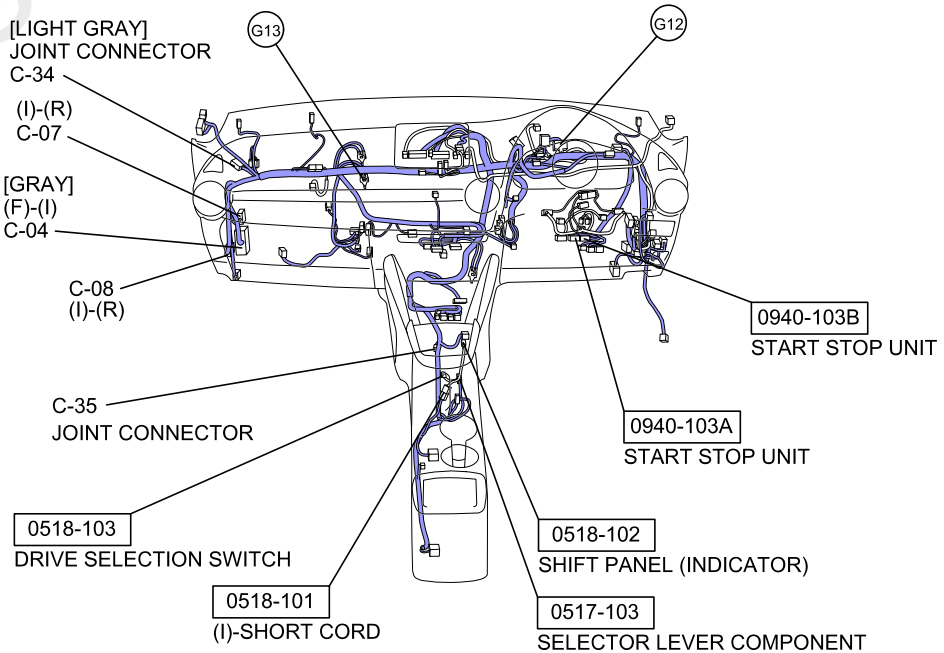

cardiagn.com