
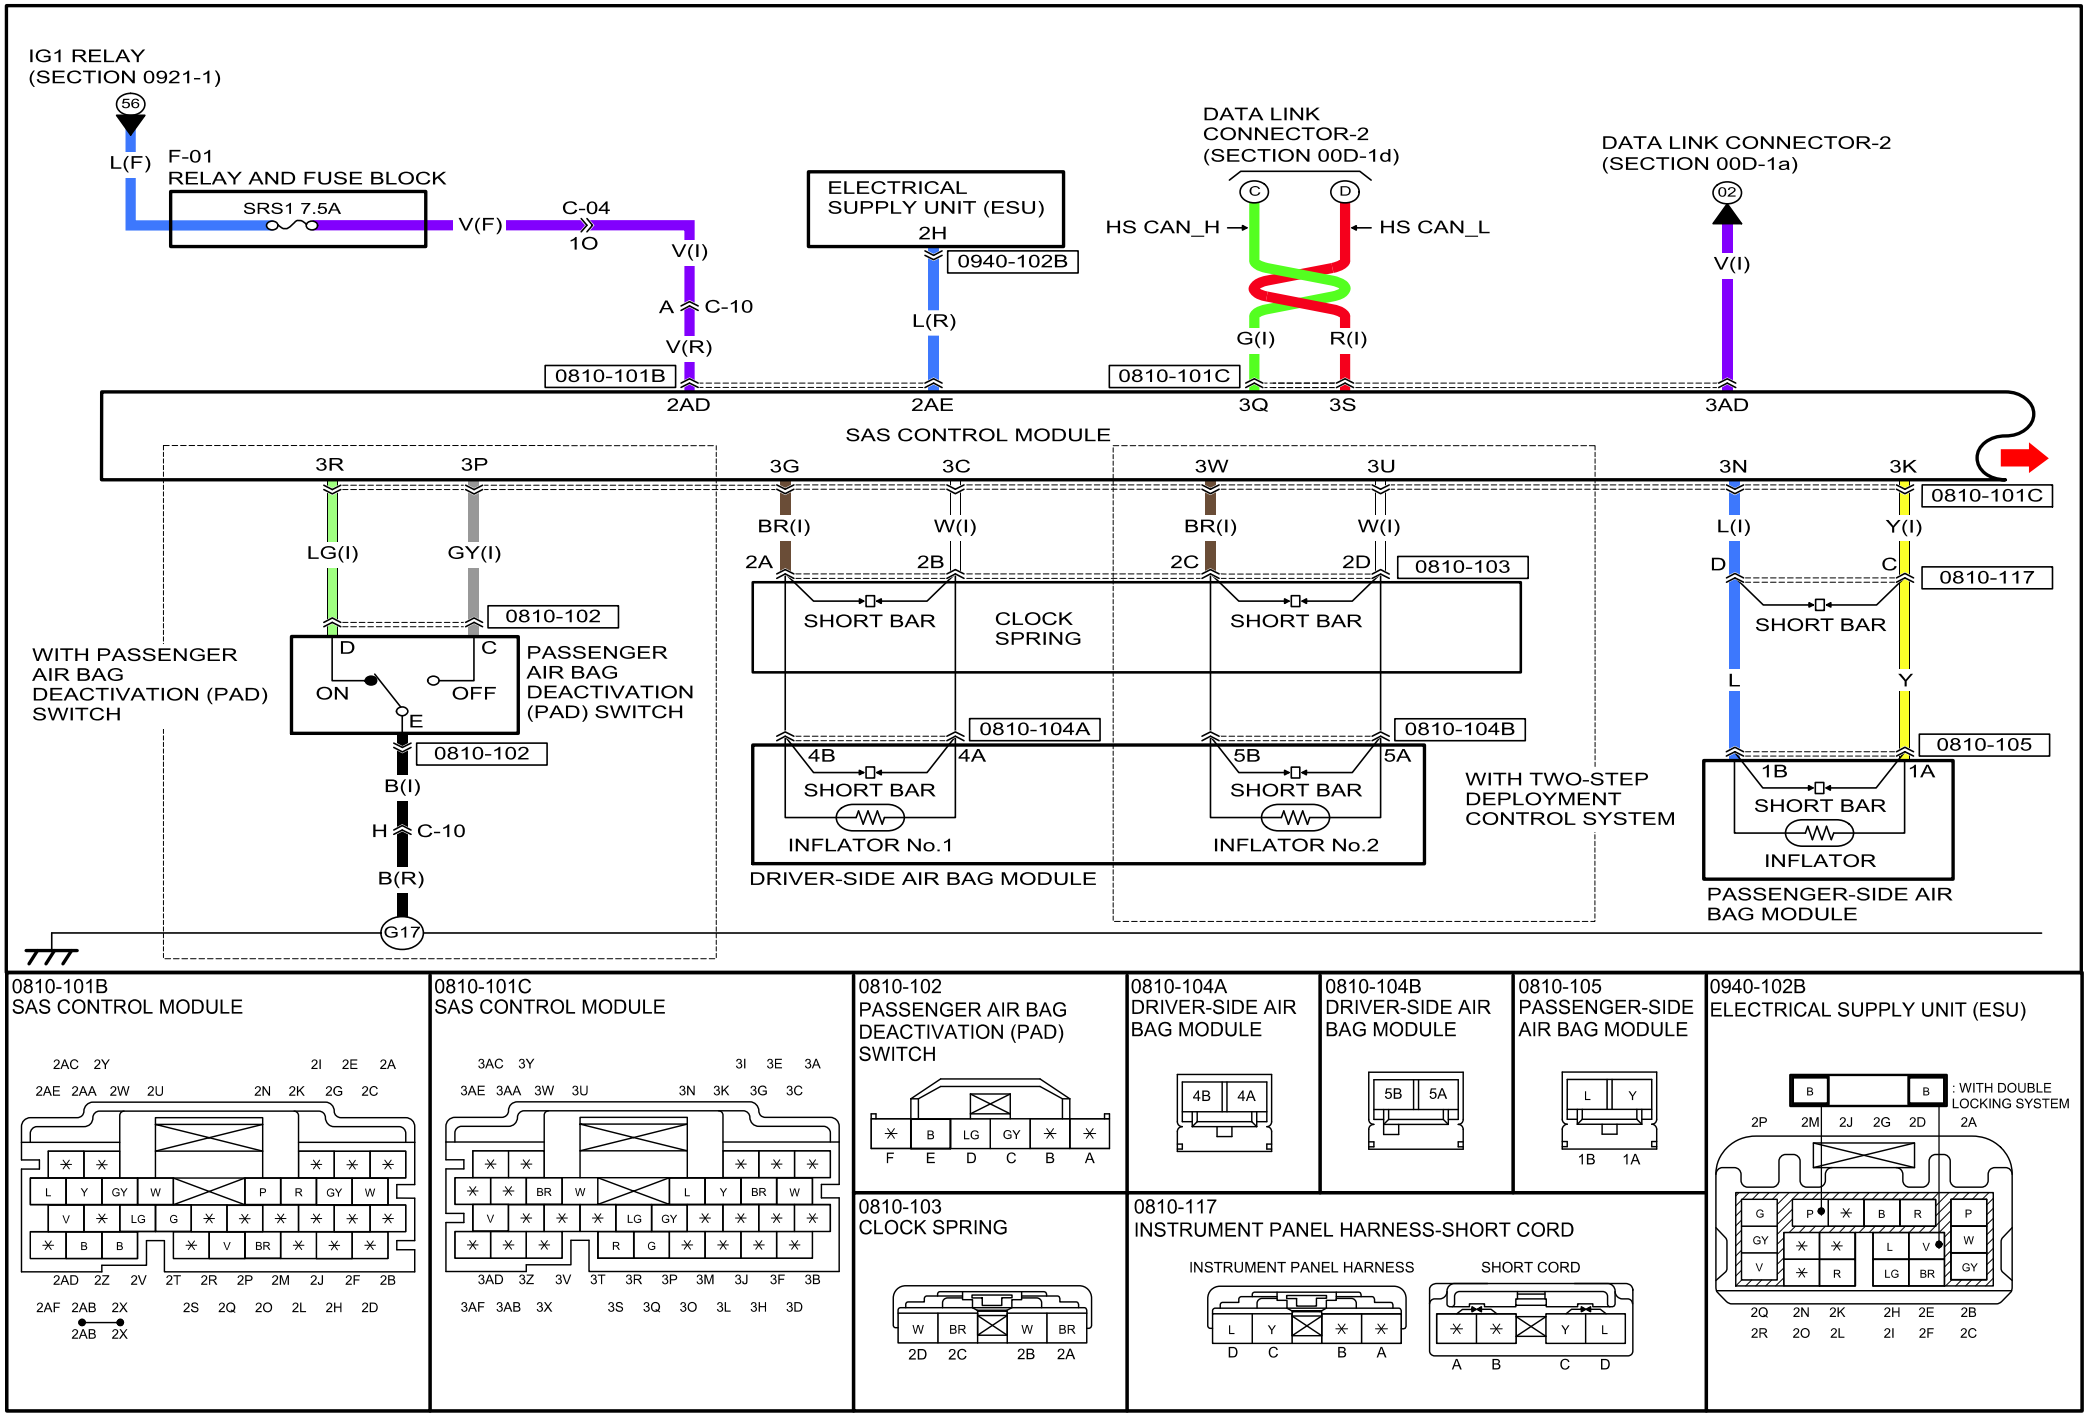


Refer to 00F section for the FUSE BOX, 00C section for the PCM CONNECTOR and COMMON CONNECTOR LIST.

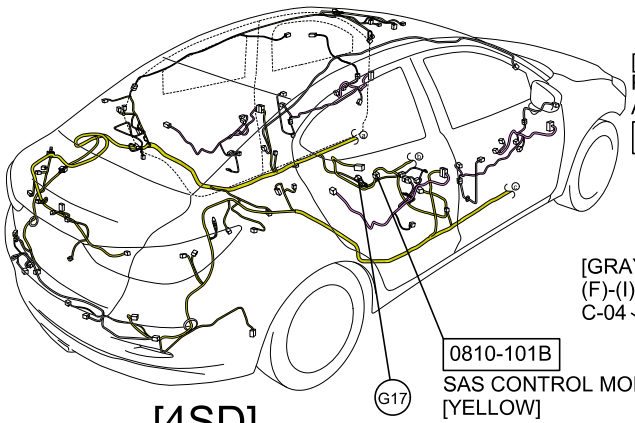


[4SD]

[YELLOW]
PASSENGER-SIDE
AIR BAG MODULE
0810-105

[YELLOW]
(I)-SHORT CORD
0810-117


0810-101B
SAS CONTROL MODULE
[YELLOW]

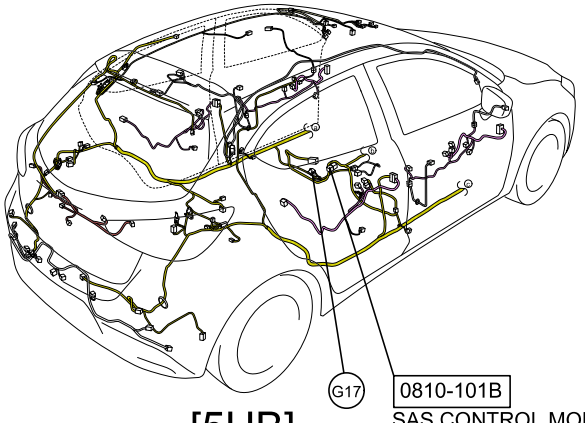

[5HB]

0810-101B
SAS CONTROL MODULE
[YELLOW]

[GRAY]
(F)-(I)
C-04

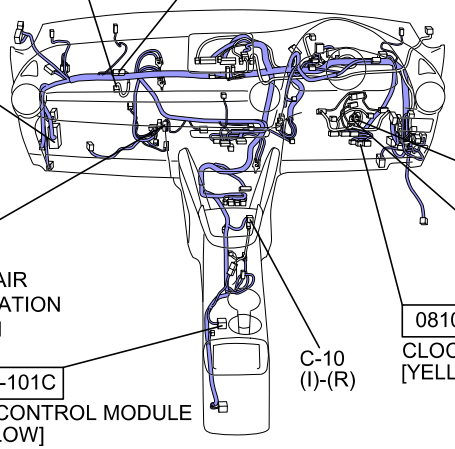

0810-102
PASSENGER AIR
BAG DEACTIVATION
(PAD) SWITCH

0810-104A
DRIVER-SIDE AIR BAG MODULE
[YELLOW]

0810-103
CLOCK SPRING
[YELLOW]


0810-104B
DRIVER-SIDE AIR BAG MODULE
[ORANGE]

0810-101C
SAS CONTROL MODULE
[YELLOW]

C-10
(I)-(R)


(I)-(R)
C-10

[GRAY]
(F)-(I)
C-04

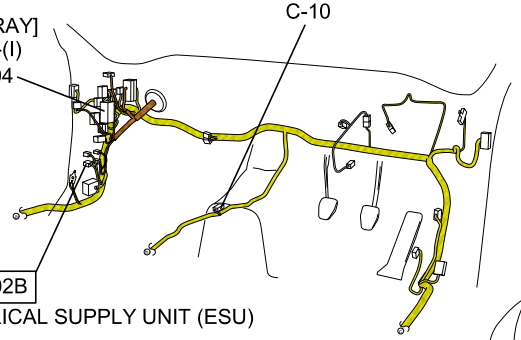


0940-102B
ELECTRICAL SUPPLY UNIT (ESU)

: FRONT HARNESS
: ENGINE HARNESS
ENGINE No.2 HARNESS
: REAR HARNESS
: REAR No.2 HARNESS
: INSTRUMENT PANEL HARNESS
: EMISSION HARNESS
: DOOR HARNESS
: INTERIOR LIGHT HARNESS
INTERIOR LIGHT No.2 HARNESS

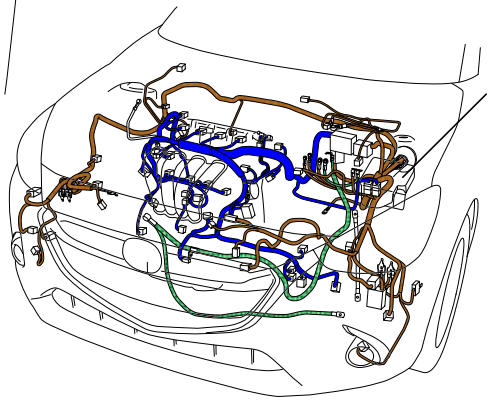

RELAY AND FUSE BLOCK
(REFER TO 00F SECTION)
F-01

[SKYACTIV-G 1.3, 1.5]

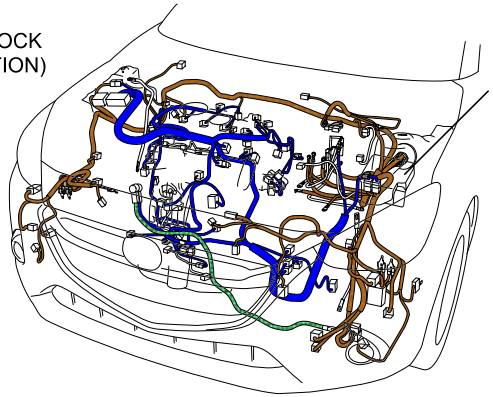

RELAY AND FUSE BLOCK
(REFER TO 00F SECTION)
F-01

[SKYACTIV-D 1.5]