

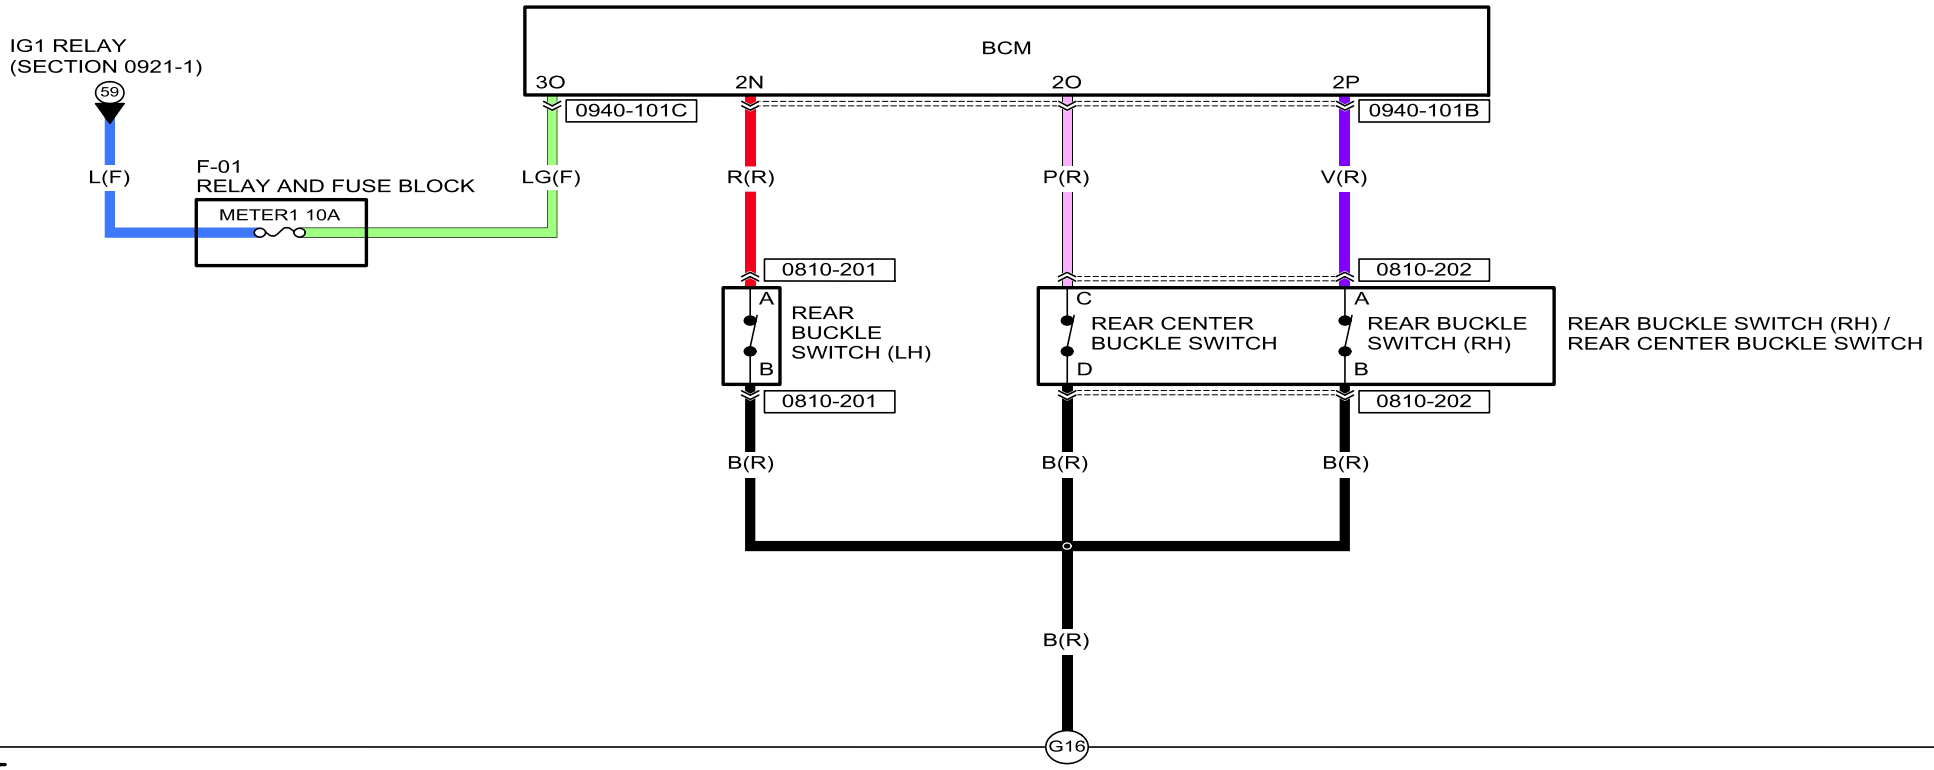



0810-201
REAR BUCKLE SWITCH (LH)




0810-202
REAR BUCKLE SWITCH (RH) / REAR CENTER BUCKLE SWITCH




0940-101B
BCM

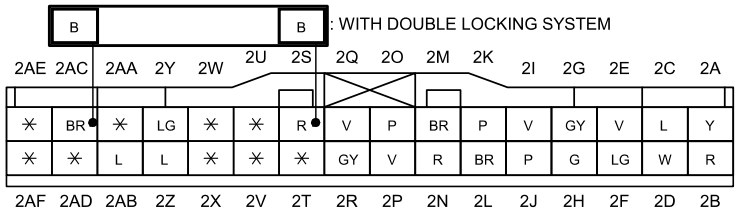


0940-101C
BCM

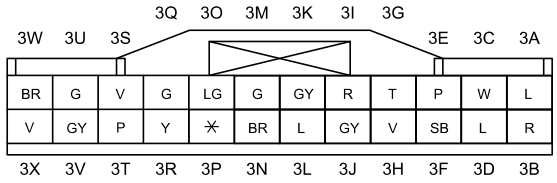



Refer to 00F section for the FUSE BOX, 00C section for the PCM CONNECTOR and COMMON CONNECTOR LIST.

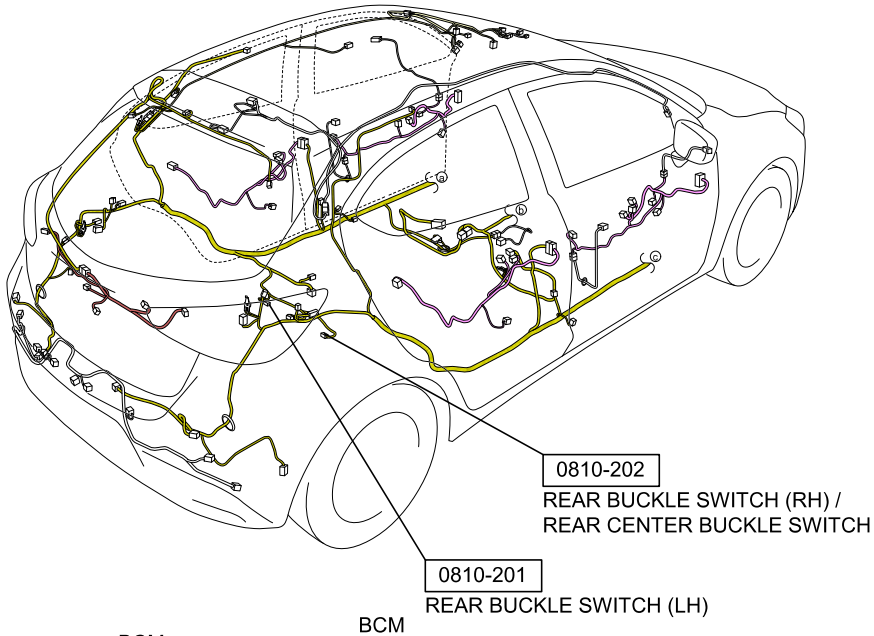

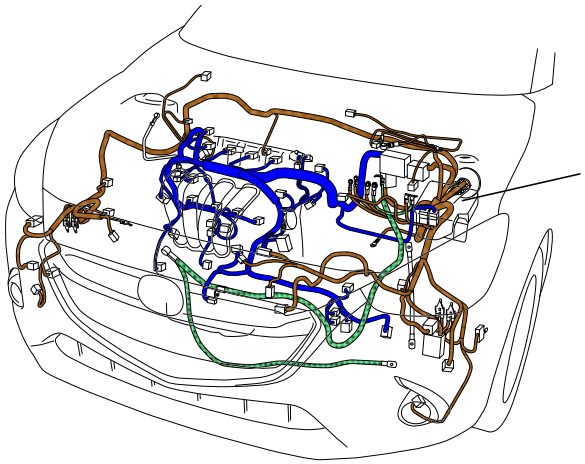

[SKYACTIV-G 1.3, 1.5]

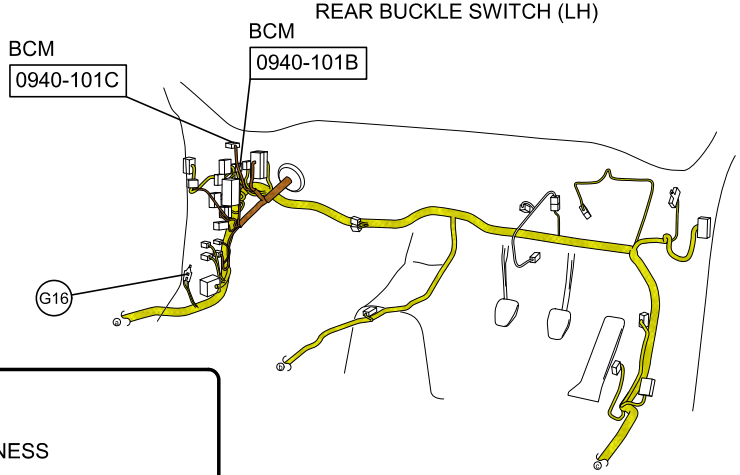

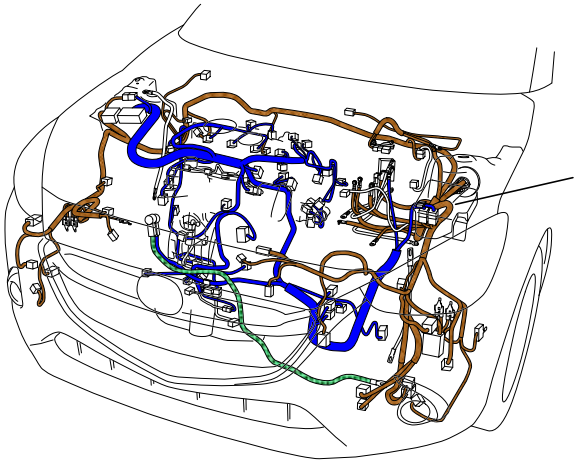

[SKYACTIV-D 1.5]

: FRONT HARNESS
: ENGINE HARNESS
ENGINE No.2 HARNESS
: REAR HARNESS
: REAR No.2 HARNESS
: EMISSION HARNESS
: DOOR HARNESS
: INTERIOR LIGHT HARNESS
INTERIOR LIGHT No.2 HARNESS