

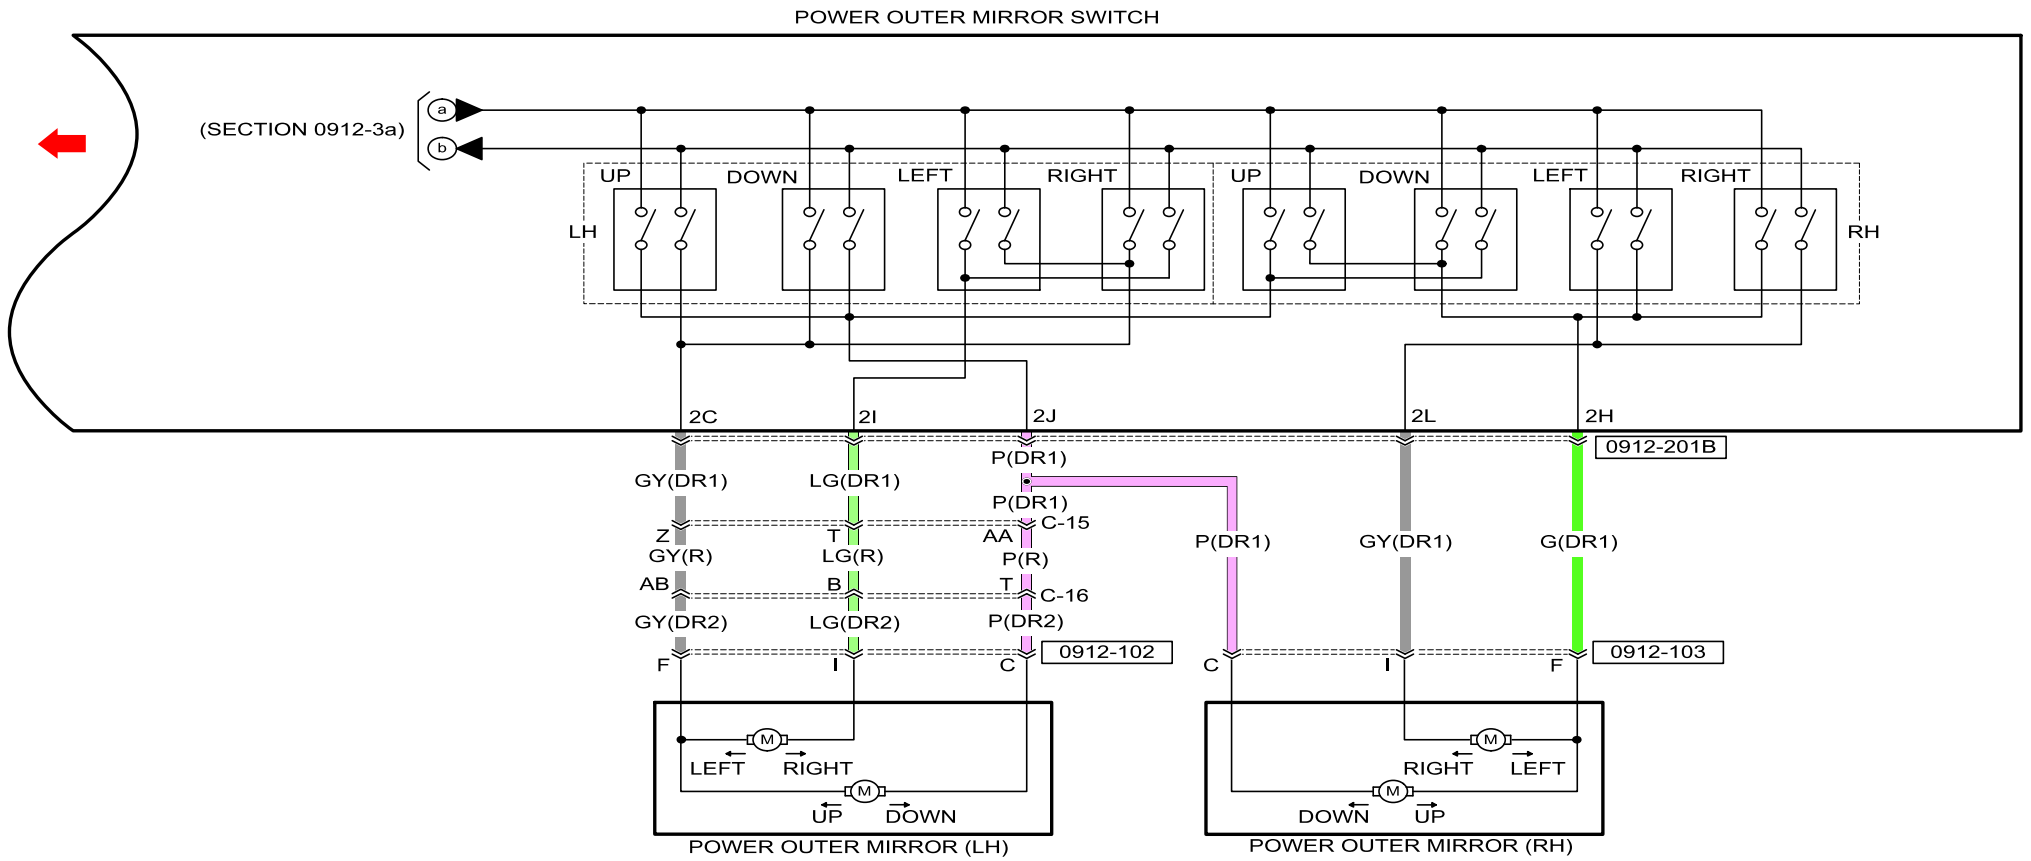



0912-102
HEATED OUTER MIRROR (LH) /
RETRACTABLE OUTER MIRROR (LH) /
POWER OUTER MIRROR (LH) /
DOOR No.2 HARNESS-SHORT CORD /
BLIND SPOT MONITORING (BSM) WARNING LIGHT (LH)

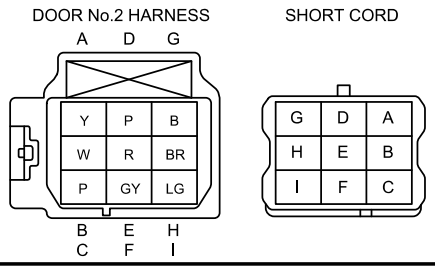


0912-103
HEATED OUTER MIRROR (RH) /
RETRACTABLE OUTER MIRROR (RH) /
POWER OUTER MIRROR (RH) /
DOOR No.1 HARNESS-SHORT CORD /
BLIND SPOT MONITORING (BSM) WARNING LIGHT (RH)

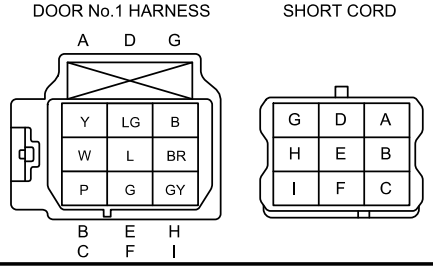

0912-201B
POWER WINDOW MAIN SWITCH /
POWER OUTER MIRROR SWITCH

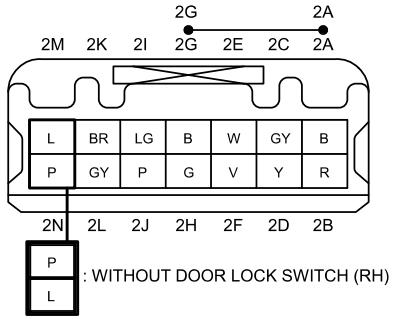

Refer to 00F section for the FUSE BOX, 00C section for the PCM CONNECTOR and COMMON CONNECTOR LIST.

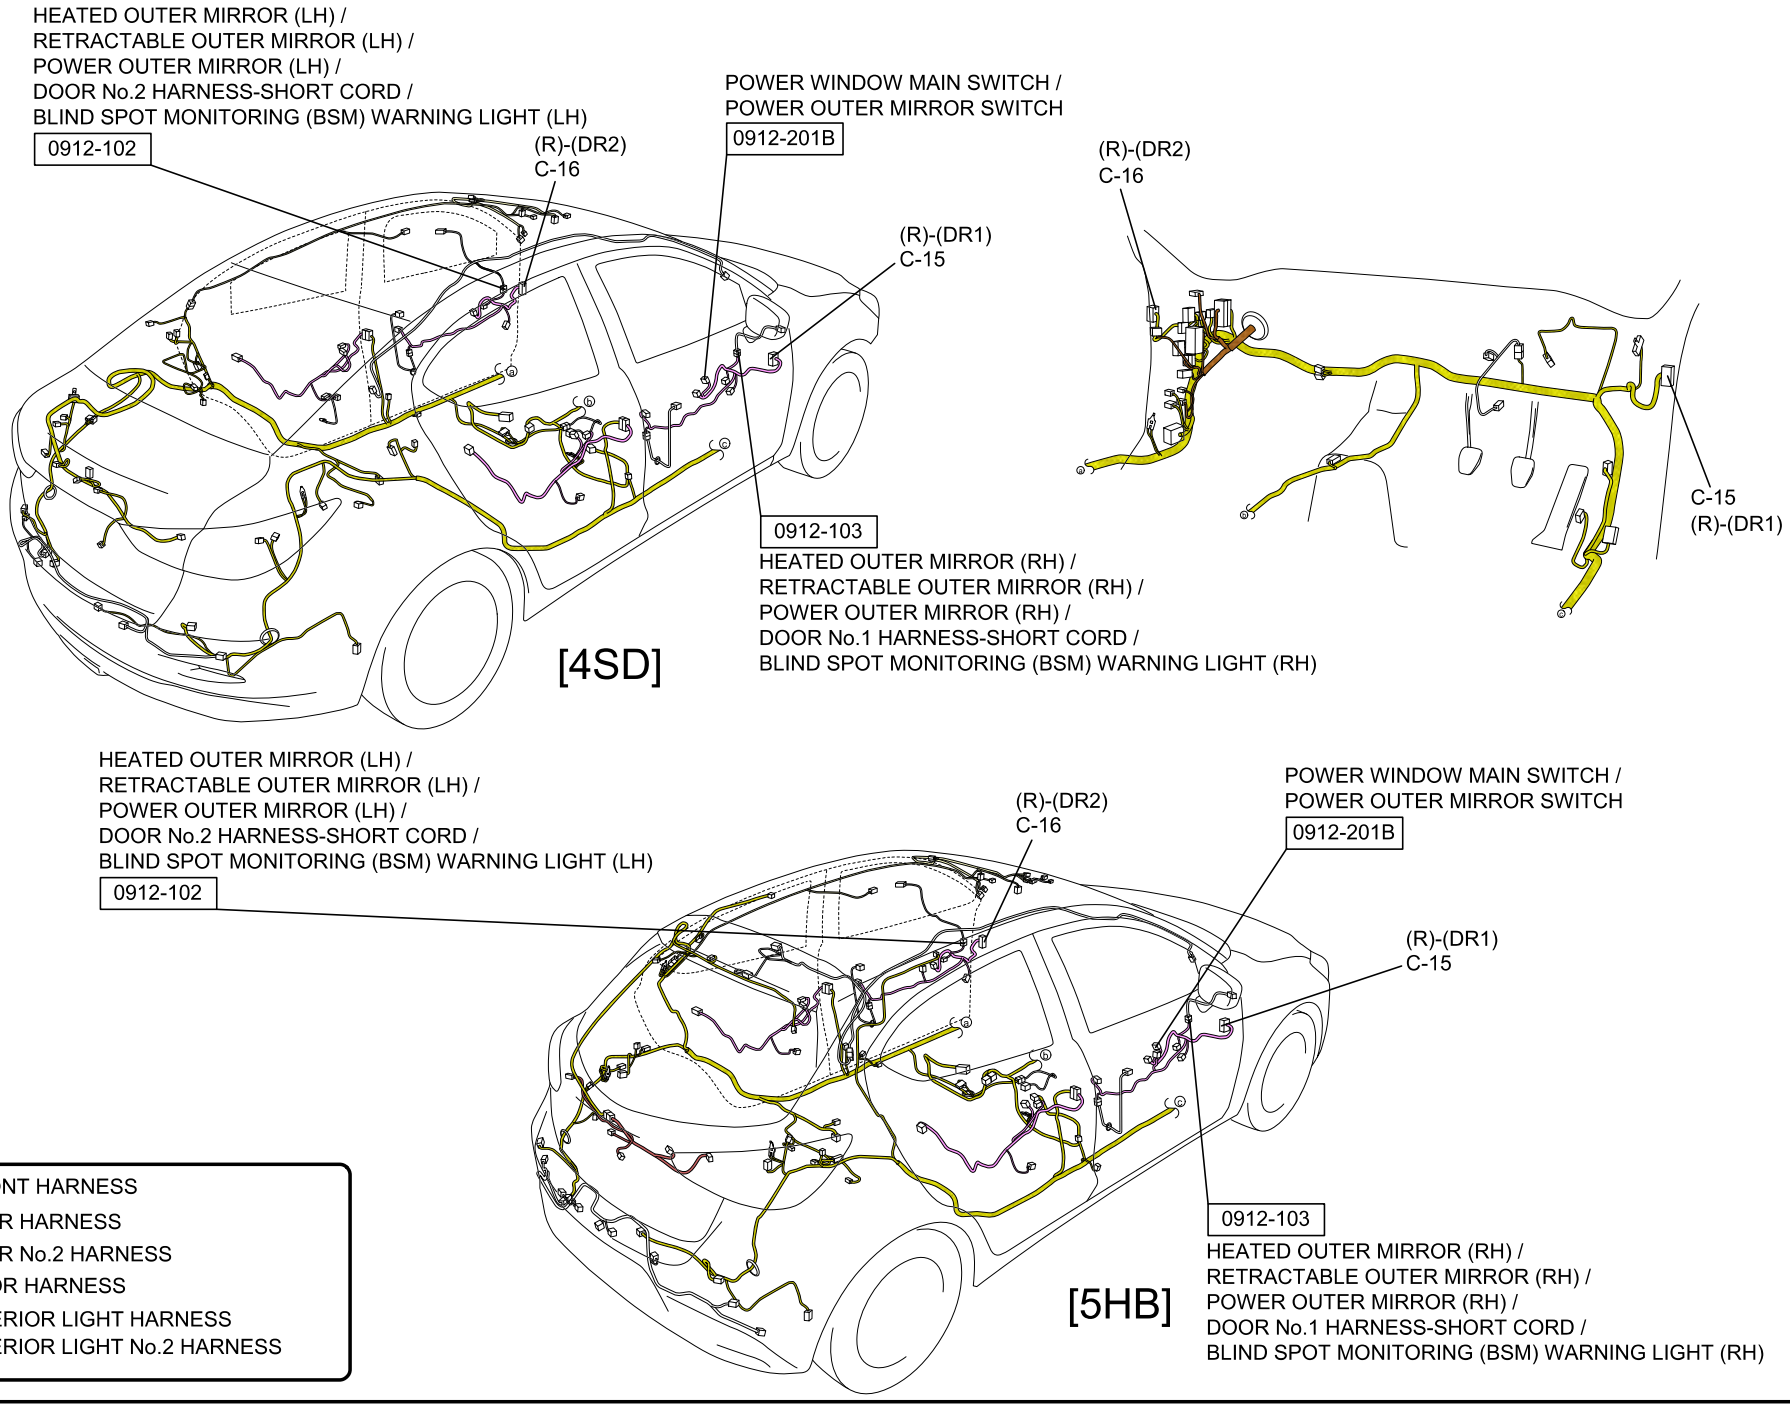
HEATED OUTER MIRROR (LH) /
RETRACTABLE OUTER MIRROR (LH) /
POWER OUTER MIRROR (LH) /
DOOR No.2 HARNESS-SHORT CORD /
BLIND SPOT MONITORING (BSM) WARNING LIGHT (LH)
0912-102
(R)-(DR2)
C-16
POWER WINDOW MAIN SWITCH /
POWER OUTER MIRROR SWITCH
0912-201B
(R)-(DR1)
C-15
0912-103
HEATED OUTER MIRROR (RH) /
RETRACTABLE OUTER MIRROR (RH) /
POWER OUTER MIRROR (RH) /
DOOR No.1 HARNESS-SHORT CORD /
BLIND SPOT MONITORING (BSM) WARNING LIGHT (RH)
[4SD]
(R)-(DR2)
C-16
C-15
(R)-(DR1)
HEATED OUTER MIRROR (LH) /
RETRACTABLE OUTER MIRROR (LH) /
POWER OUTER MIRROR (LH) /
DOOR No.2 HARNESS-SHORT CORD /
BLIND SPOT MONITORING (BSM) WARNING LIGHT (LH)
0912-102
(R)-(DR2)
C-16
POWER WINDOW MAIN SWITCH /
POWER OUTER MIRROR SWITCH
0912-201B
(R)-(DR1)
C-15
0912-103
HEATED OUTER MIRROR (RH) /
RETRACTABLE OUTER MIRROR (RH) /
POWER OUTER MIRROR (RH) /
DOOR No.1 HARNESS-SHORT CORD /
BLIND SPOT MONITORING (BSM) WARNING LIGHT (RH)
[5HB]
: FRONT HARNESS
: REAR HARNESS
: REAR No.2 HARNESS
: DOOR HARNESS
: INTERIOR LIGHT HARNESS
INTERIOR LIGHT No.2 HARNESS