

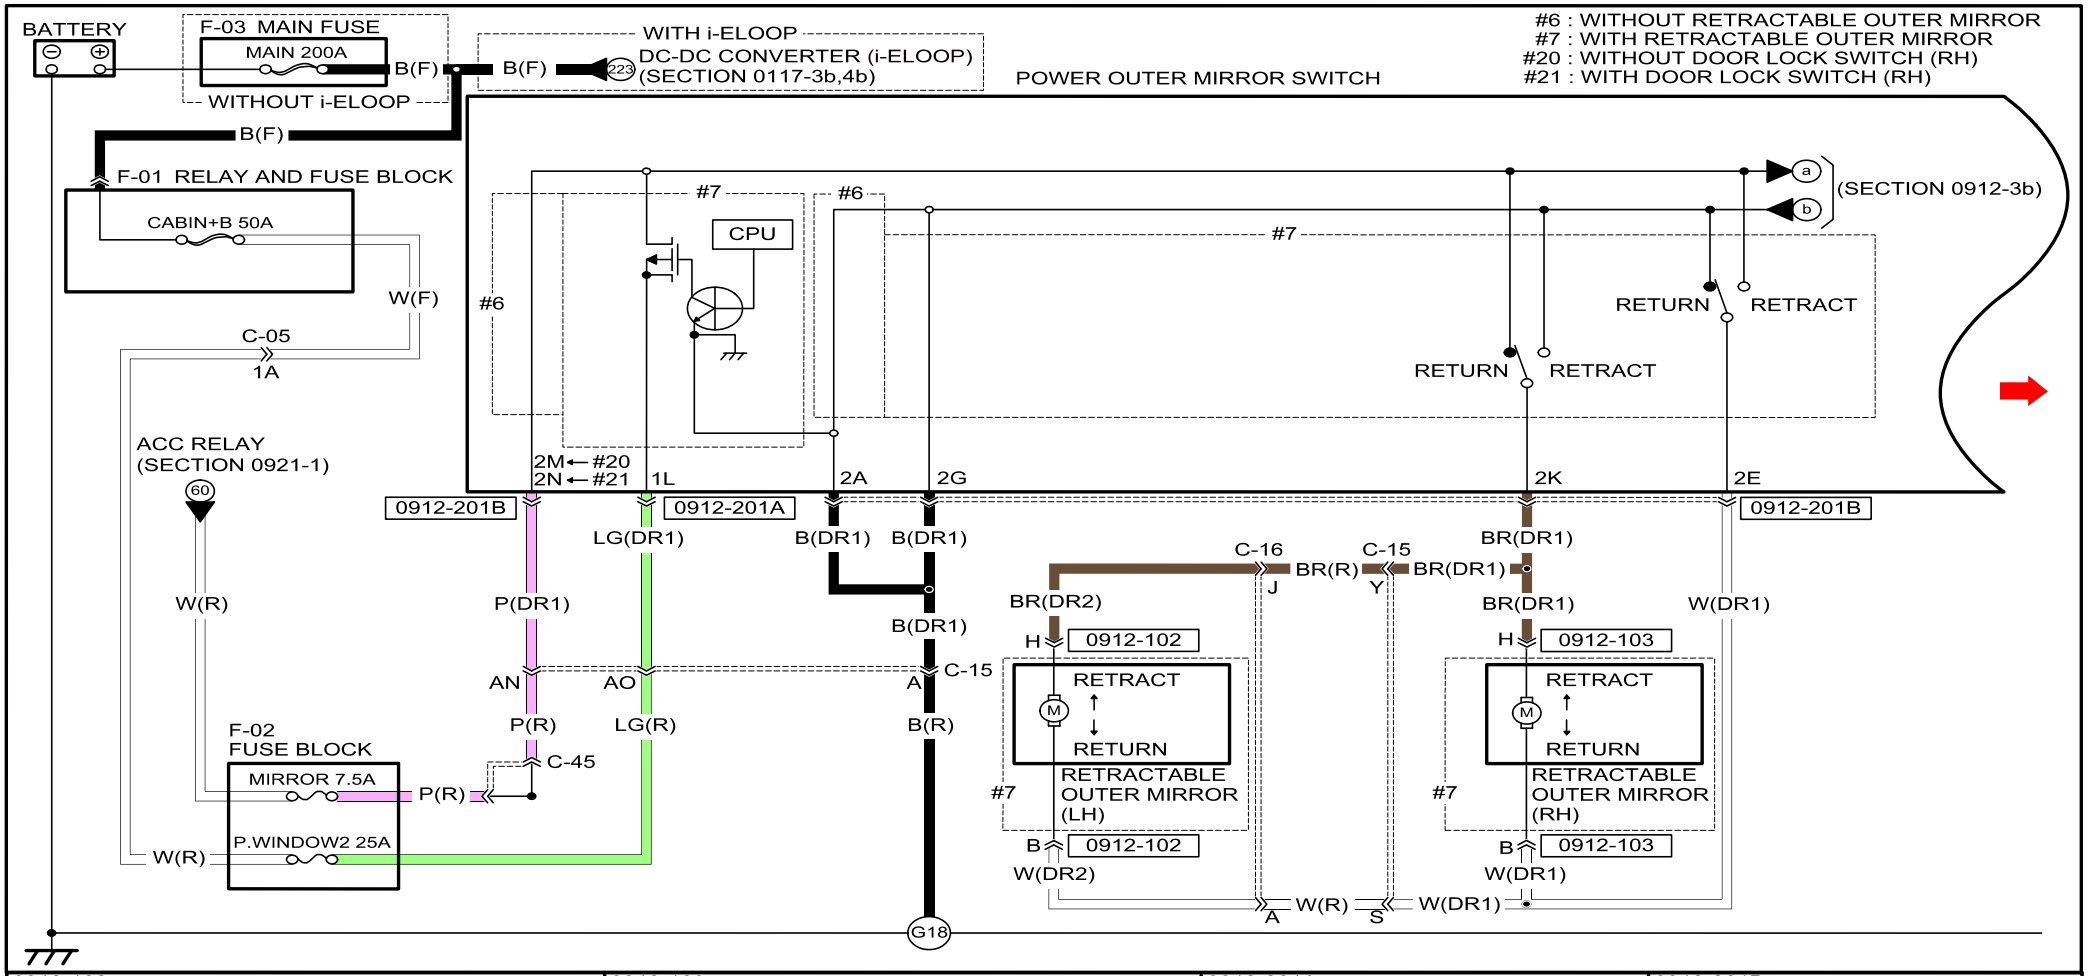



0912-102
HEATED OUTER MIRROR (LH) /
RETRACTABLE OUTER MIRROR (LH) /
POWER OUTER MIRROR (LH) /
DOOR No.2 HARNESS-SHORT CORD /
BLIND SPOT MONITORING (BSM) WARNING LIGHT (LH)

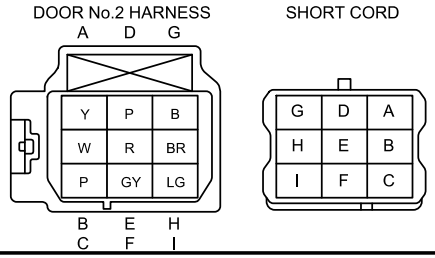


0912-103
HEATED OUTER MIRROR (RH) /
RETRACTABLE OUTER MIRROR (RH) /
POWER OUTER MIRROR (RH) /
DOOR No.1 HARNESS-SHORT CORD /
BLIND SPOT MONITORING (BSM) WARNING LIGHT (RH)

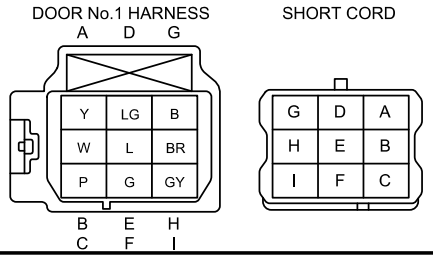

0912-201A
POWER WINDOW MAIN SWITCH /
POWER OUTER MIRROR SWITCH /
DOOR LOCK SWITCH (RH)

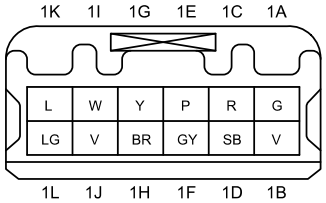

0912-201B
POWER WINDOW MAIN SWITCH /
POWER OUTER MIRROR SWITCH

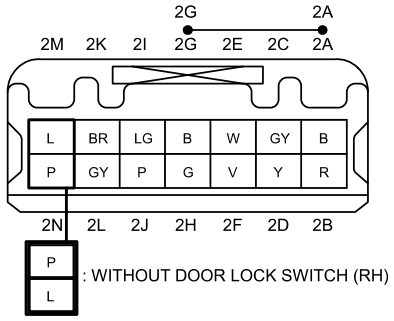

Refer to 00F section for the FUSE BOX, 00C section for the PCM CONNECTOR and COMMON CONNECTOR LIST.


HEATED OUTER MIRROR (LH) /
RETRACTABLE OUTER MIRROR (LH) /
POWER OUTER MIRROR (LH) /
DOOR No.2 HARNESS-SHORT CORD /
BLIND SPOT MONITORING (BSM) WARNING LIGHT (LH)

0912-102

(R)-(DR2)
C-16

POWER WINDOW MAIN SWITCH /
POWER OUTER MIRROR SWITCH

0912-201B

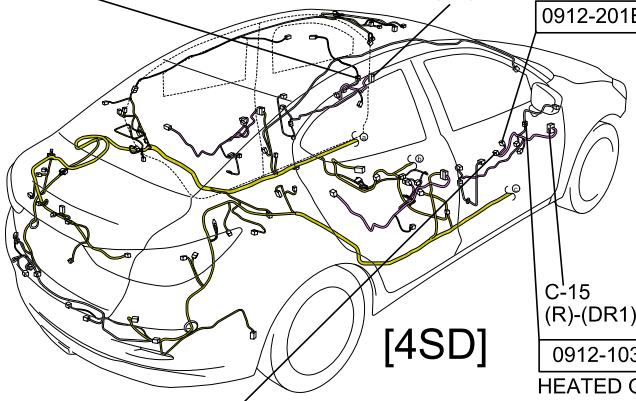

C-15
(R)-(DR1)

[4SD]

0912-103

HEATED OUTER MIRROR (RH) /
RETRACTABLE OUTER MIRROR (RH) /
POWER OUTER MIRROR (RH) /
DOOR No.1 HARNESS-SHORT CORD /
BLIND SPOT MONITORING (BSM) WARNING LIGHT (RH)

0912-201A

POWER WINDOW MAIN SWITCH /
POWER OUTER MIRROR SWITCH /
DOOR LOCK SWITCH (RH)


HEATED OUTER MIRROR (LH) /
RETRACTABLE OUTER MIRROR (LH) /
POWER OUTER MIRROR (LH) /
DOOR No.2 HARNESS-SHORT CORD /
BLIND SPOT MONITORING (BSM) WARNING LIGHT (LH)

0912-102

(R)-(DR2)
C-16

POWER WINDOW MAIN SWITCH /
POWER OUTER MIRROR SWITCH

0912-201B

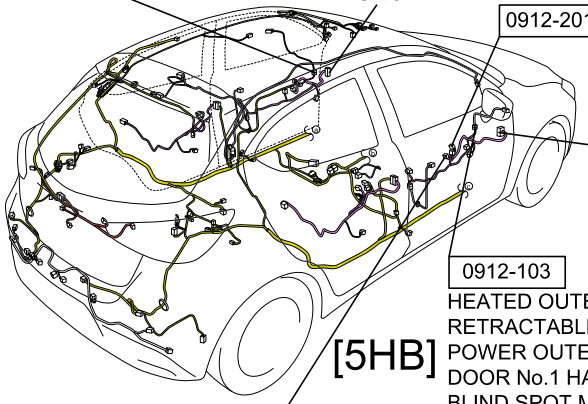

C-15
(R)-(DR1)

[5HB]

0912-103

HEATED OUTER MIRROR (RH) /
RETRACTABLE OUTER MIRROR (RH) /
POWER OUTER MIRROR (RH) /
DOOR No.1 HARNESS-SHORT CORD /
BLIND SPOT MONITORING (BSM)
WARNING LIGHT (RH)


0912-201A

POWER WINDOW MAIN SWITCH /
POWER OUTER MIRROR SWITCH /
DOOR LOCK SWITCH (RH)

[BLUE]
JOINT CONNECTOR
C-45

(R)-(DR2)
C-16

(F)-(R)
C-05

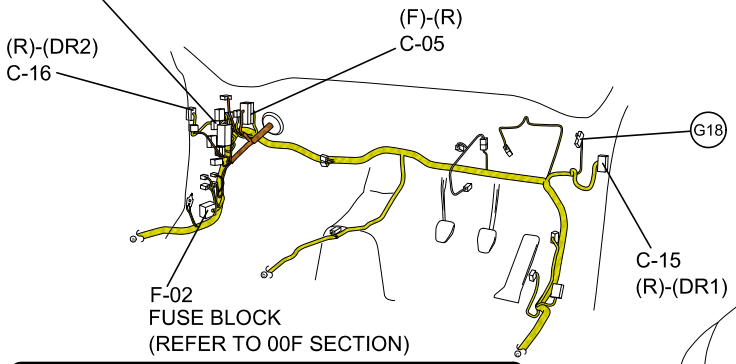


C-15
(R)-(DR1)

F-02
FUSE BLOCK
(REFER TO 00F SECTION)

: FRONT HARNESS
: ENGINE HARNESS
ENGINE No.2 HARNESS
: REAR HARNESS
: REAR No.2 HARNESS
: EMISSION HARNESS
: DOOR HARNESS
: INTERIOR LIGHT HARNESS
INTERIOR LIGHT No.2 HARNESS

MAIN FUSE
(REFER TO 00F SECTION)
F-03


RELAY AND FUSE BLOCK
(REFER TO 00F SECTION)
F-01

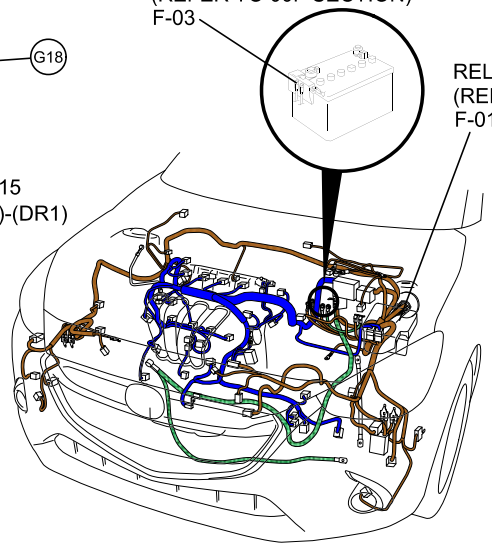

[SKYACTIV-G 1.3, 1.5]

MAIN FUSE
(REFER TO 00F SECTION)
F-03

RELAY AND FUSE BLOCK
(REFER TO 00F SECTION)
F-01

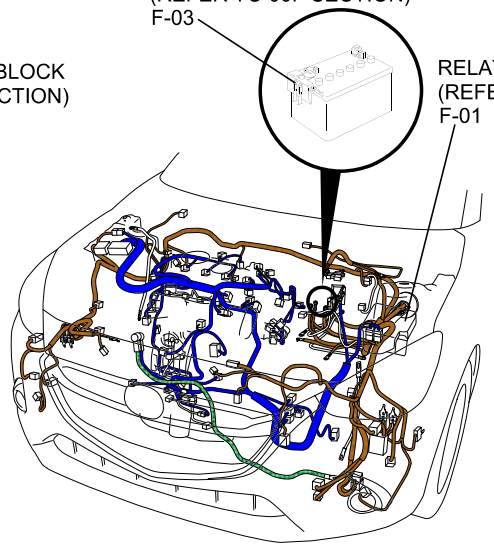

[SKYACTIV-D 1.5]