


DOOR LOCK SYSTEM (WITH KEYLESS ENTRY SYSTEM)

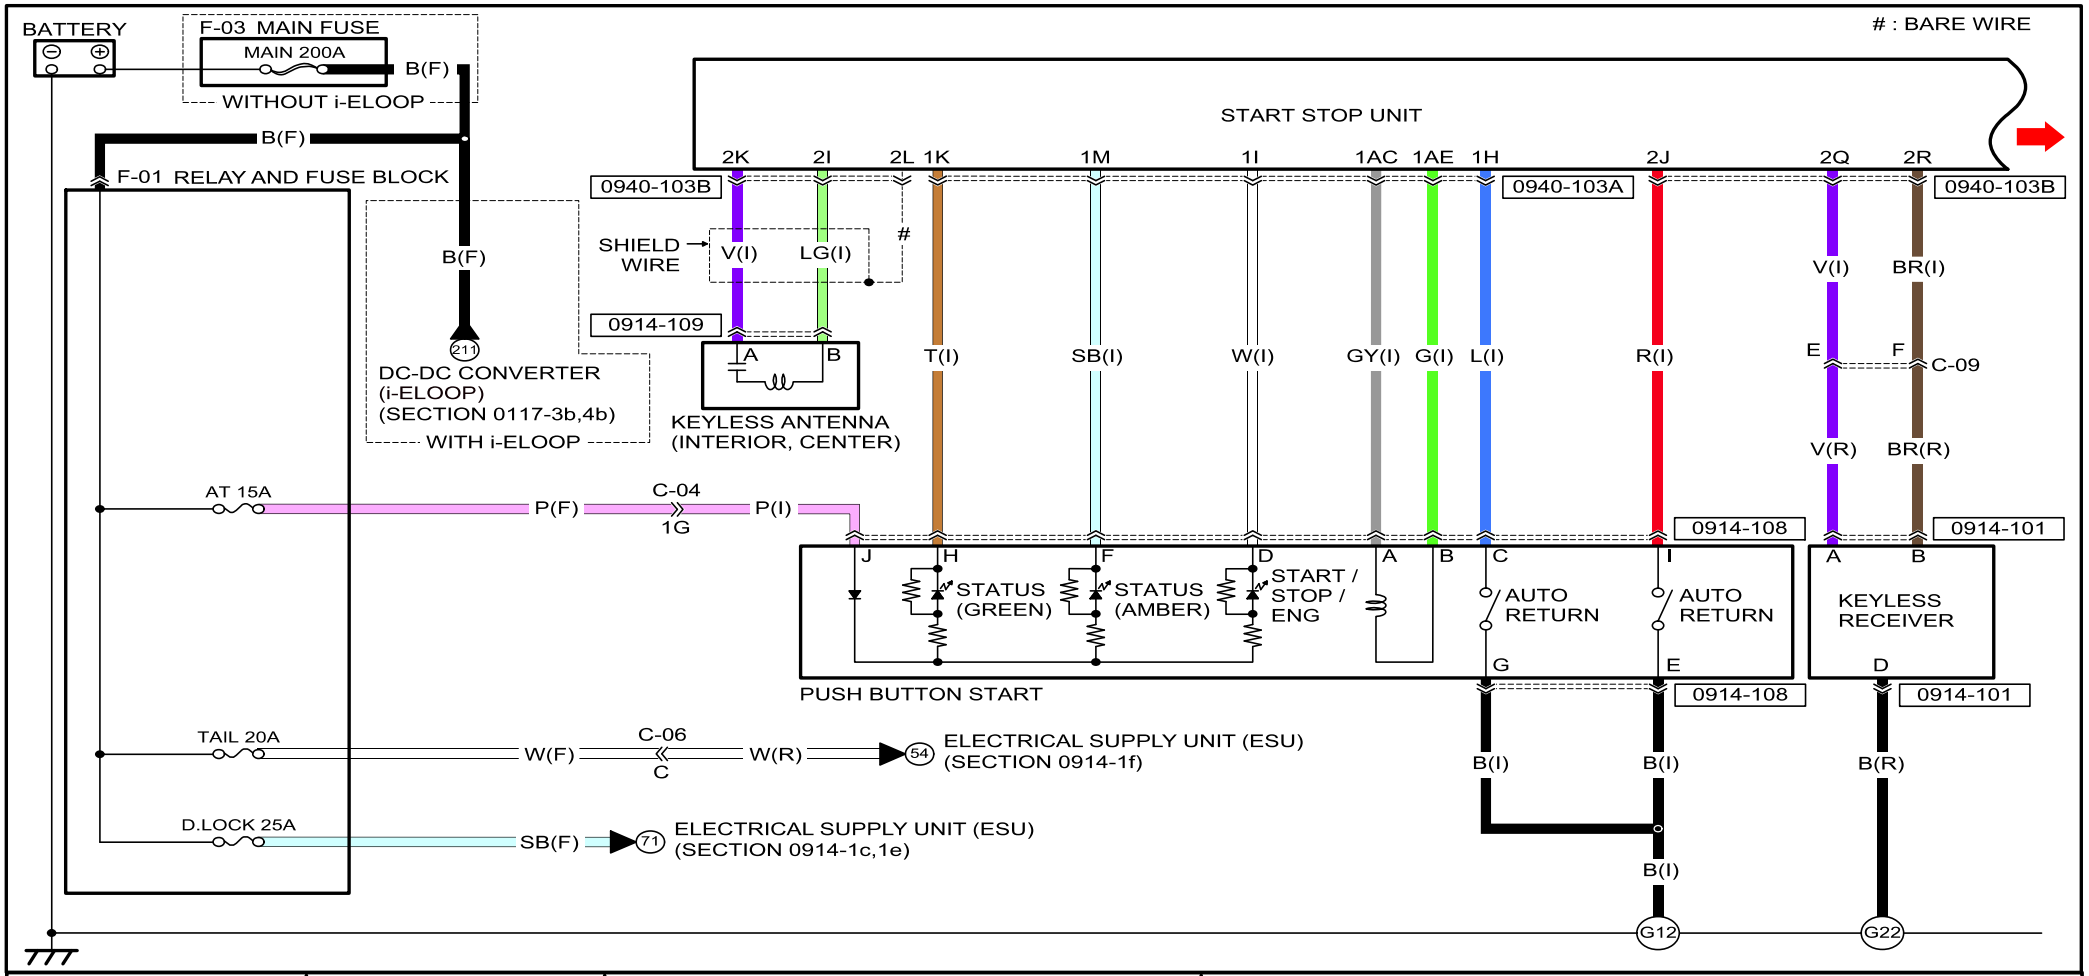


0914-101
KEYLESS RECEIVER




0914-108
PUSH BUTTON START

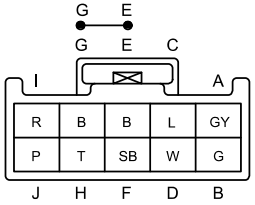


0914-109
KEYLESS ANTENNA (INTERIOR, CENTER)




0940-103A
START STOP UNIT

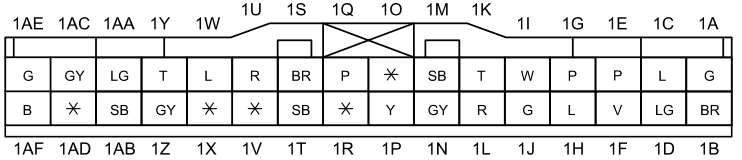



0940-103B
START STOP UNIT

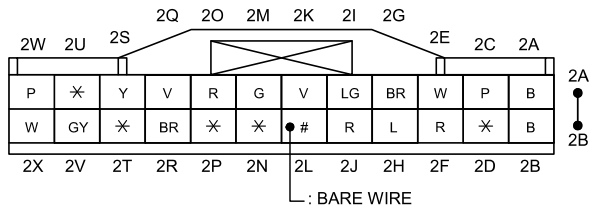


Refer to 00F section for the FUSE BOX, 00C section for the PCM CONNECTOR and COMMON CONNECTOR LIST.

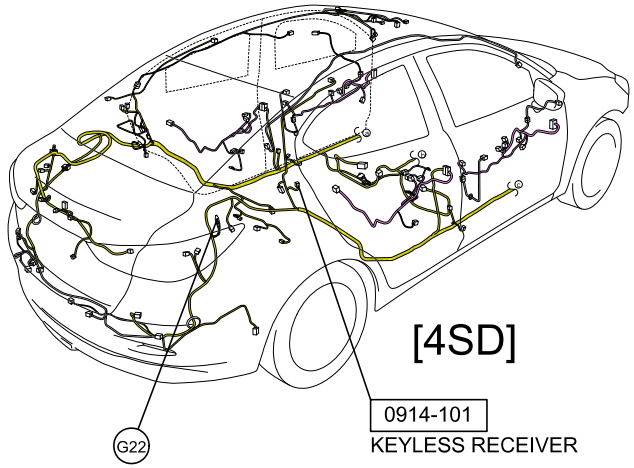


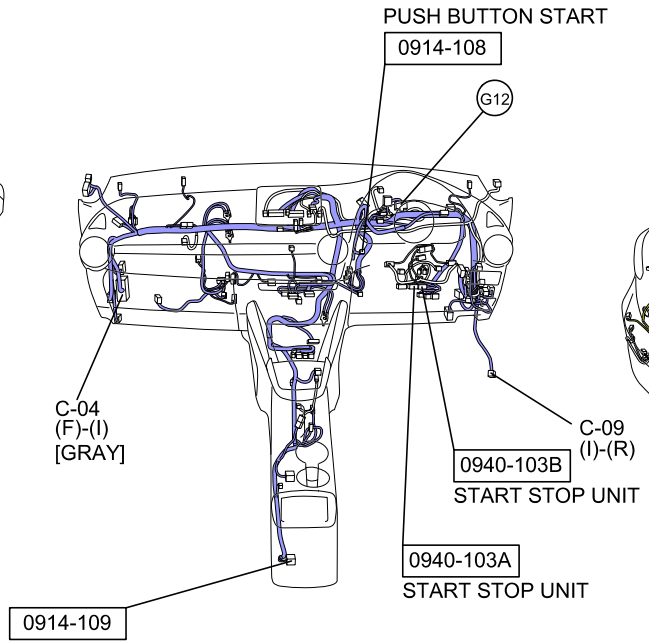

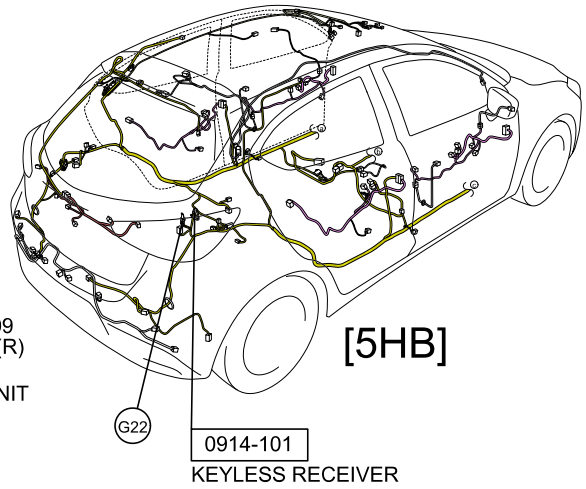


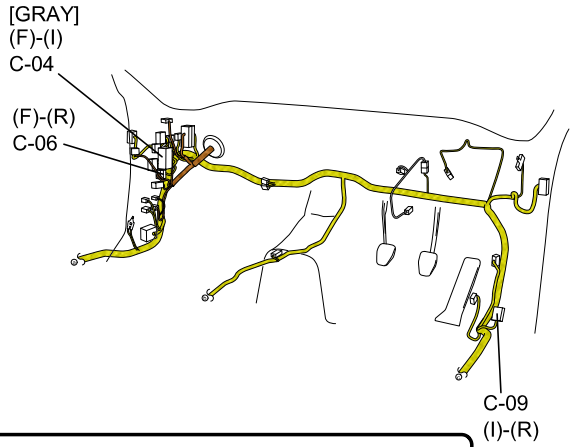

: FRONT HARNESS
: ENGINE HARNESS
ENGINE No.2 HARNESS
: REAR HARNESS
: REAR No.2 HARNESS
: INSTRUMENT PANEL HARNESS
: EMISSION HARNESS
: DOOR HARNESS
: INTERIOR LIGHT HARNESS
INTERIOR LIGHT No.2 HARNESS

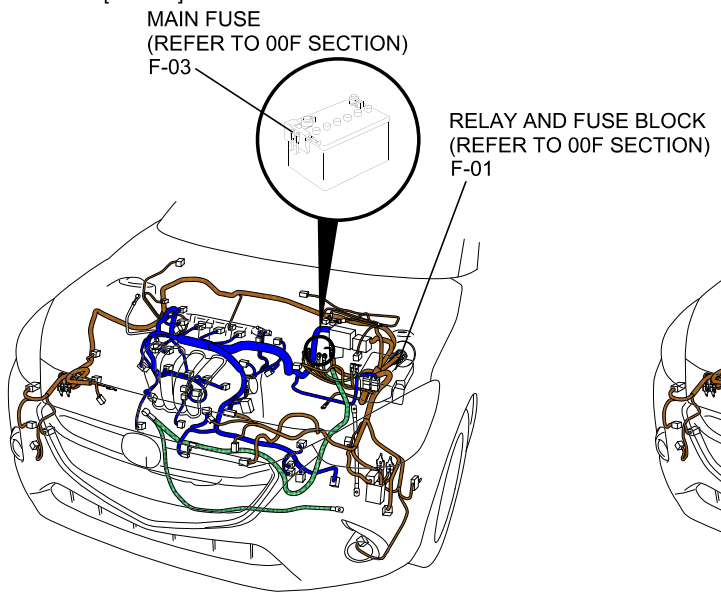

[SKYACTIV-G 1.3, 1.5]

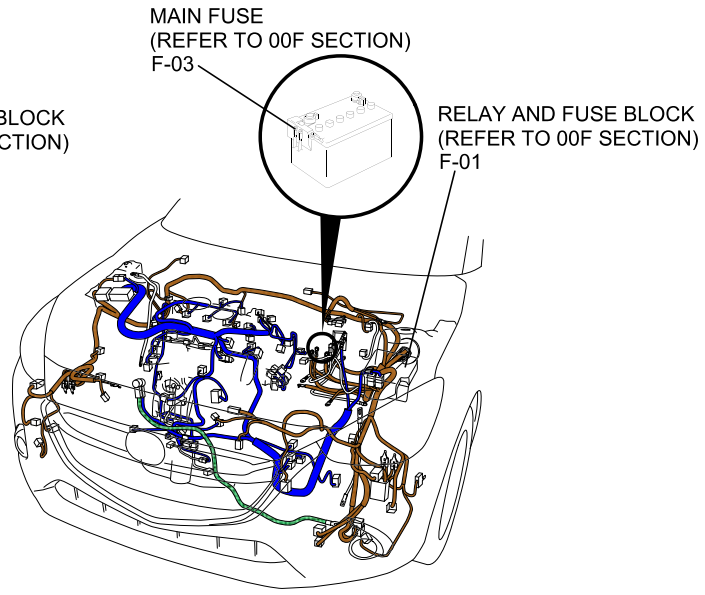

[SKYACTIV-D 1.5]