


#5 : WITH DOOR LOCK-LINK SWITCH

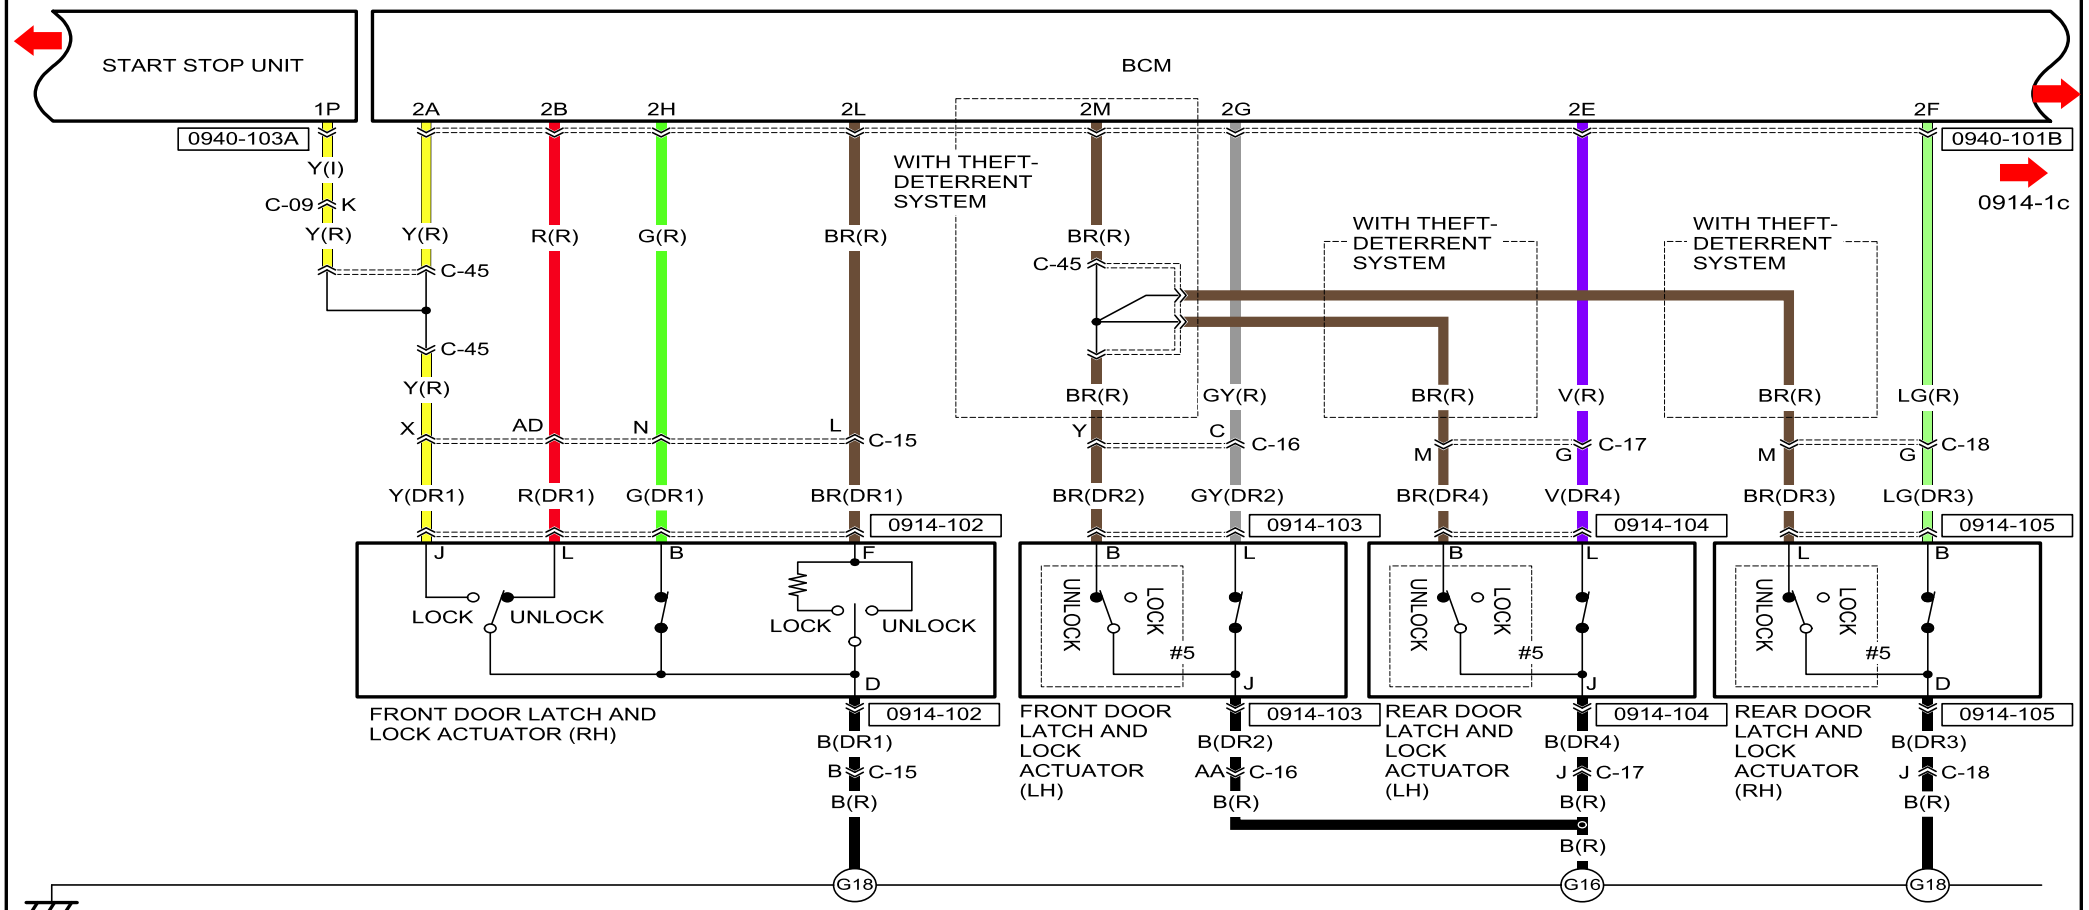


0914-102
FRONT DOOR LATCH AND LOCK ACTUATOR (RH)

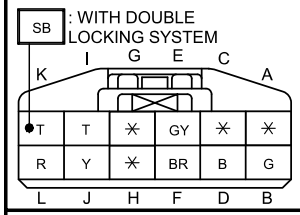


0914-103
FRONT DOOR LATCH AND LOCK ACTUATOR (LH)

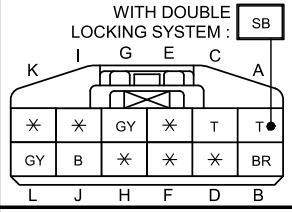


0914-104
REAR DOOR LATCH AND LOCK ACTUATOR (LH)

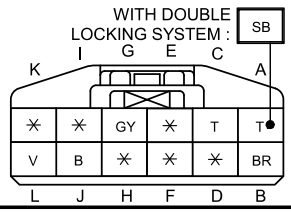


0914-105
REAR DOOR LATCH AND LOCK ACTUATOR (RH)

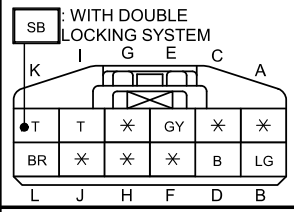


0940-101B
BCM

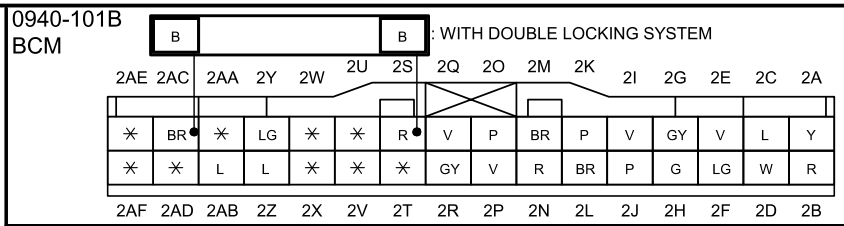

0940-103A
START STOP UNIT

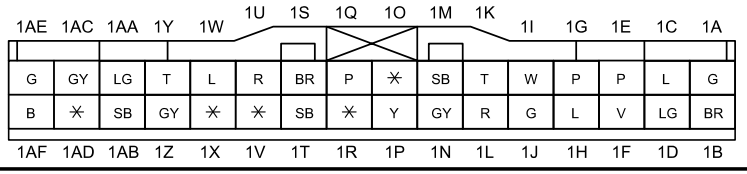

Refer to 00F section for the FUSE BOX, 00C section for the PCM CONNECTOR and COMMON CONNECTOR LIST.

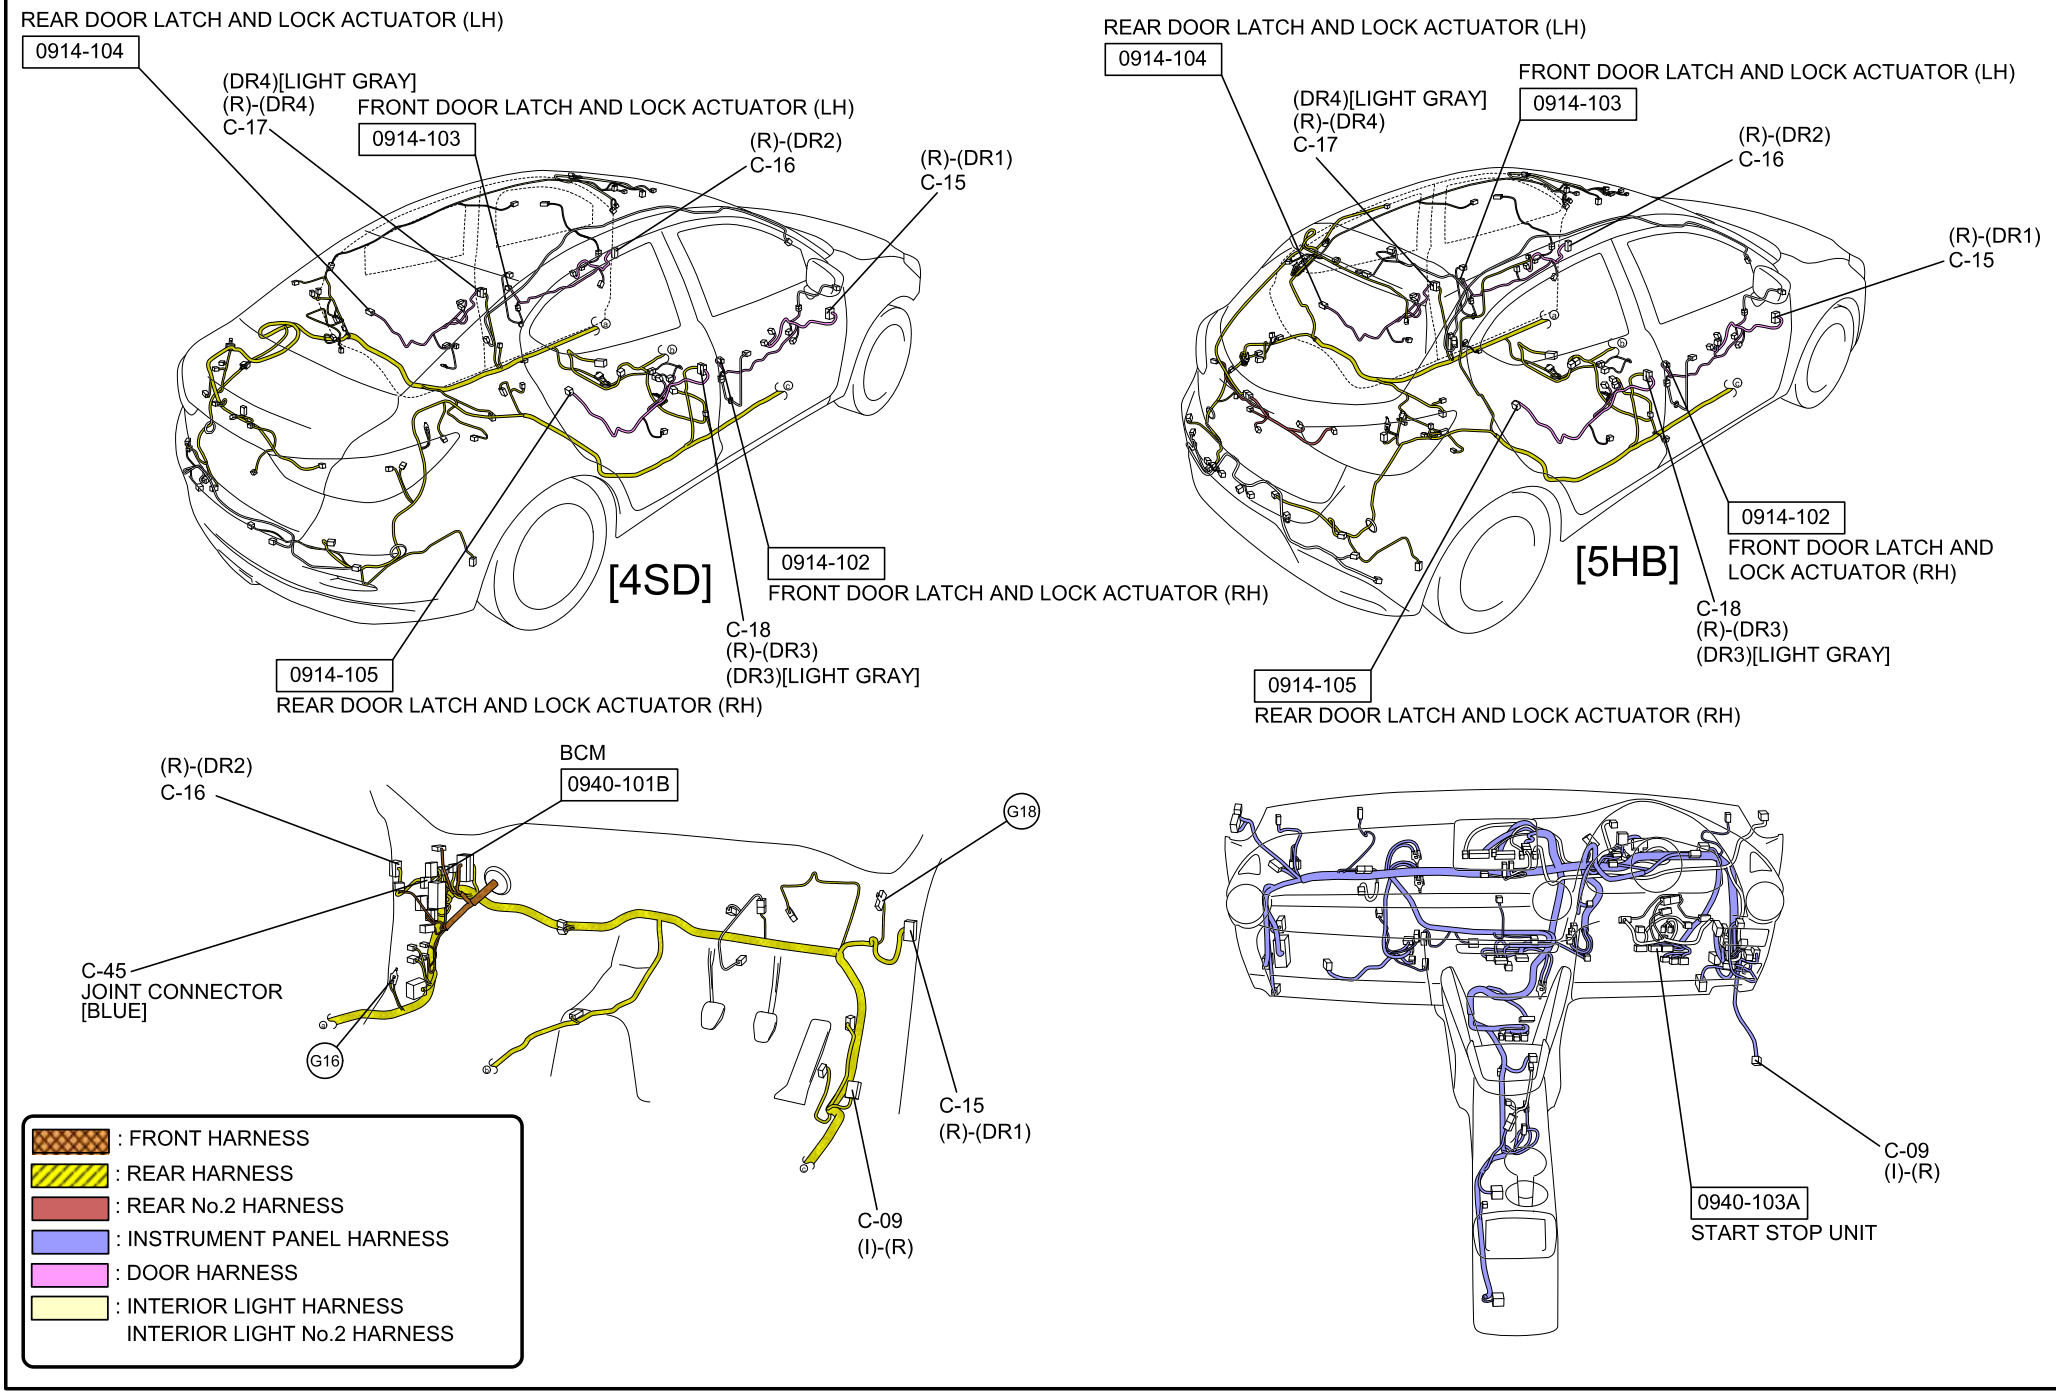
REAR DOOR LATCH AND LOCK ACTUATOR (LH)
0914-104
(DR4)[LIGHT GRAY]
(R)-(DR4)
C-17
FRONT DOOR LATCH AND LOCK ACTUATOR (LH)
0914-103
(R)-(DR2)
C-16
(R)-(DR1)
C-15
[4SD]
0914-102
FRONT DOOR LATCH AND LOCK ACTUATOR (RH)
C-18
(R)-(DR3)
(DR3)[LIGHT GRAY]
0914-105
REAR DOOR LATCH AND LOCK ACTUATOR (RH)
REAR DOOR LATCH AND LOCK ACTUATOR (LH)
0914-104
FRONT DOOR LATCH AND LOCK ACTUATOR (LH)
(DR4)[LIGHT GRAY]
(R)-(DR4)
C-17
0914-103
(R)-(DR2)
C-16
(R)-(DR1)
C-15
[5HB]
0914-102
FRONT DOOR LATCH AND
LOCK ACTUATOR (RH)
C-18
(R)-(DR3)
(DR3)[LIGHT GRAY]
0914-105
REAR DOOR LATCH AND LOCK ACTUATOR (RH)
(R)-(DR2)
C-16
BCM
0940-101B
G18
C-45
JOINT CONNECTOR
[BLUE]
G16
C-15
(R)-(DR1)
C-09
(I)-(R)
C-09
(I)-(R)
0940-103A
START STOP UNIT
: FRONT HARNESS
: REAR HARNESS
: REAR No.2 HARNESS
: INSTRUMENT PANEL HARNESS
: DOOR HARNESS
: INTERIOR LIGHT HARNESS
INTERIOR LIGHT No.2 HARNESS