

0914-1b


0914-1d

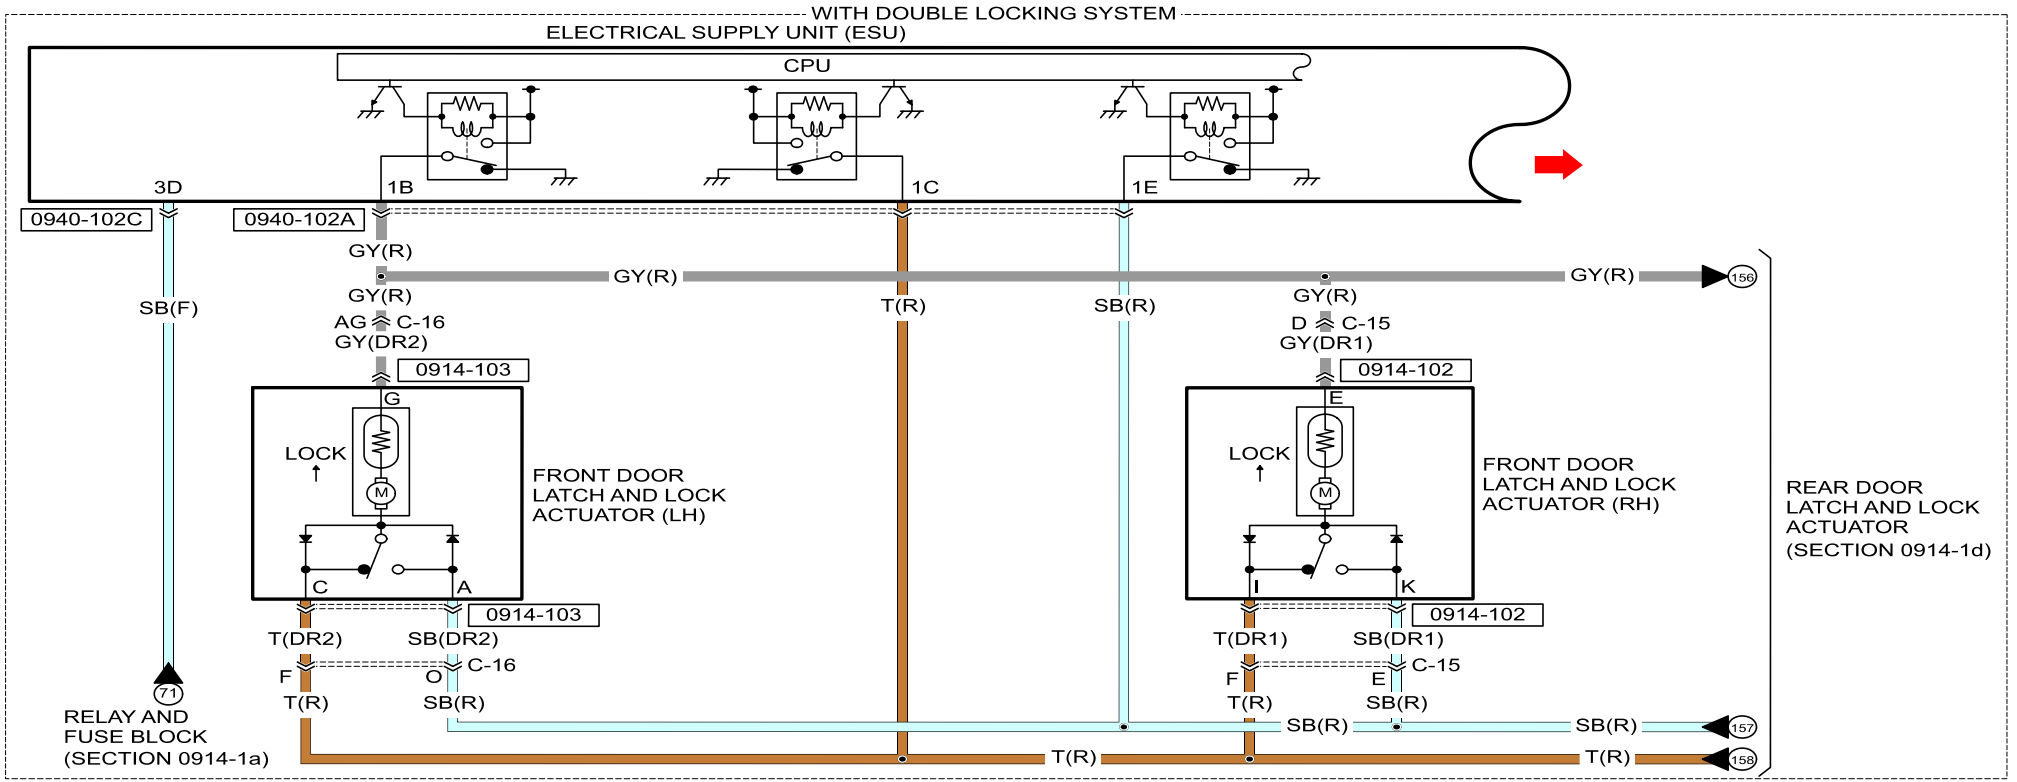


0914-102
FRONT DOOR LATCH AND LOCK ACTUATOR (RH)

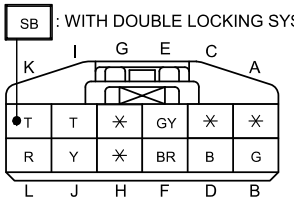


0914-103
FRONT DOOR LATCH AND LOCK ACTUATOR (LH)

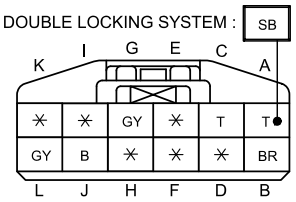


0940-102A
ELECTRICAL SUPPLY UNIT (ESU)

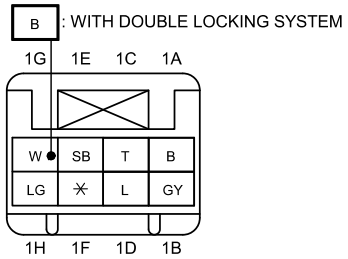


0940-102C
ELECTRICAL SUPPLY UNIT (ESU)

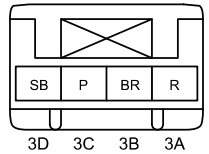

Refer to 00F section for the FUSE BOX, 00C section for the PCM CONNECTOR and COMMON CONNECTOR LIST.

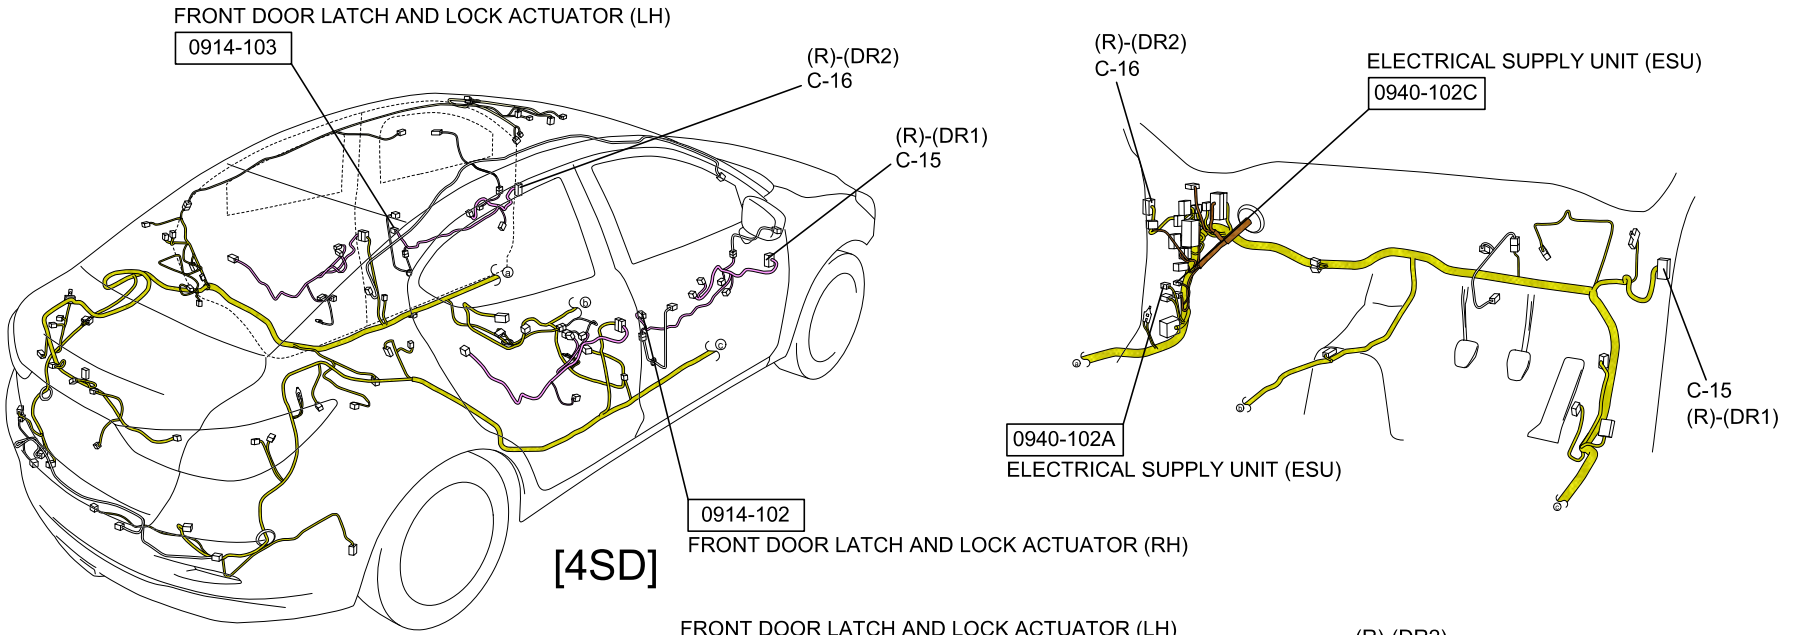

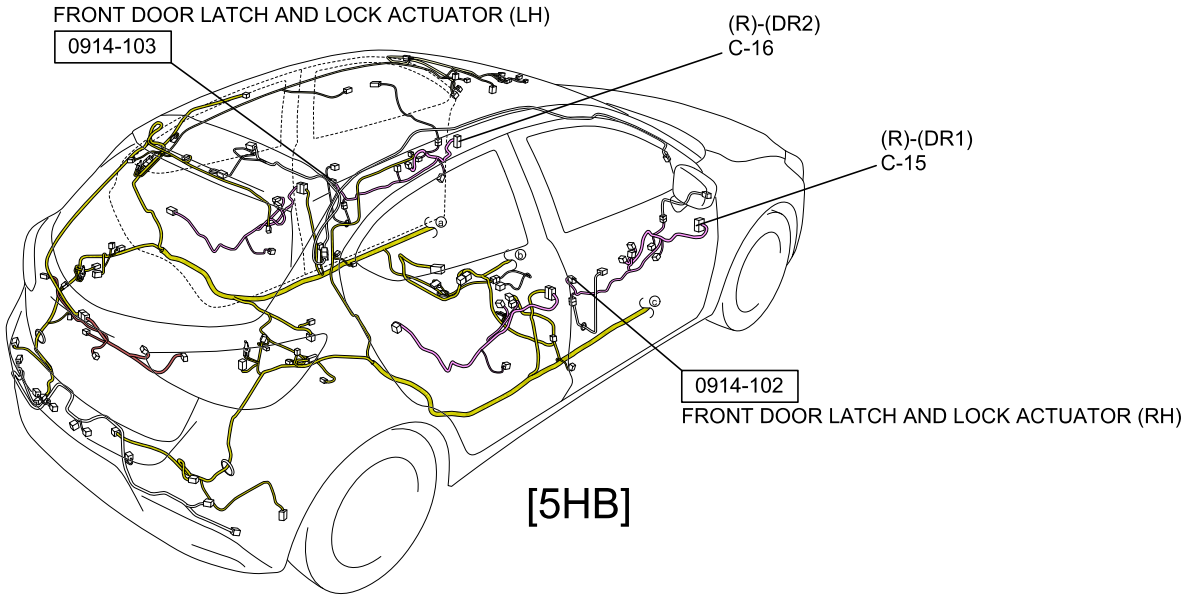

: FRONT HARNESS
: REAR HARNESS
: REAR No.2 HARNESS
: DOOR HARNESS
: INTERIOR LIGHT HARNESS
INTERIOR LIGHT No.2 HARNESS