


0914-1d

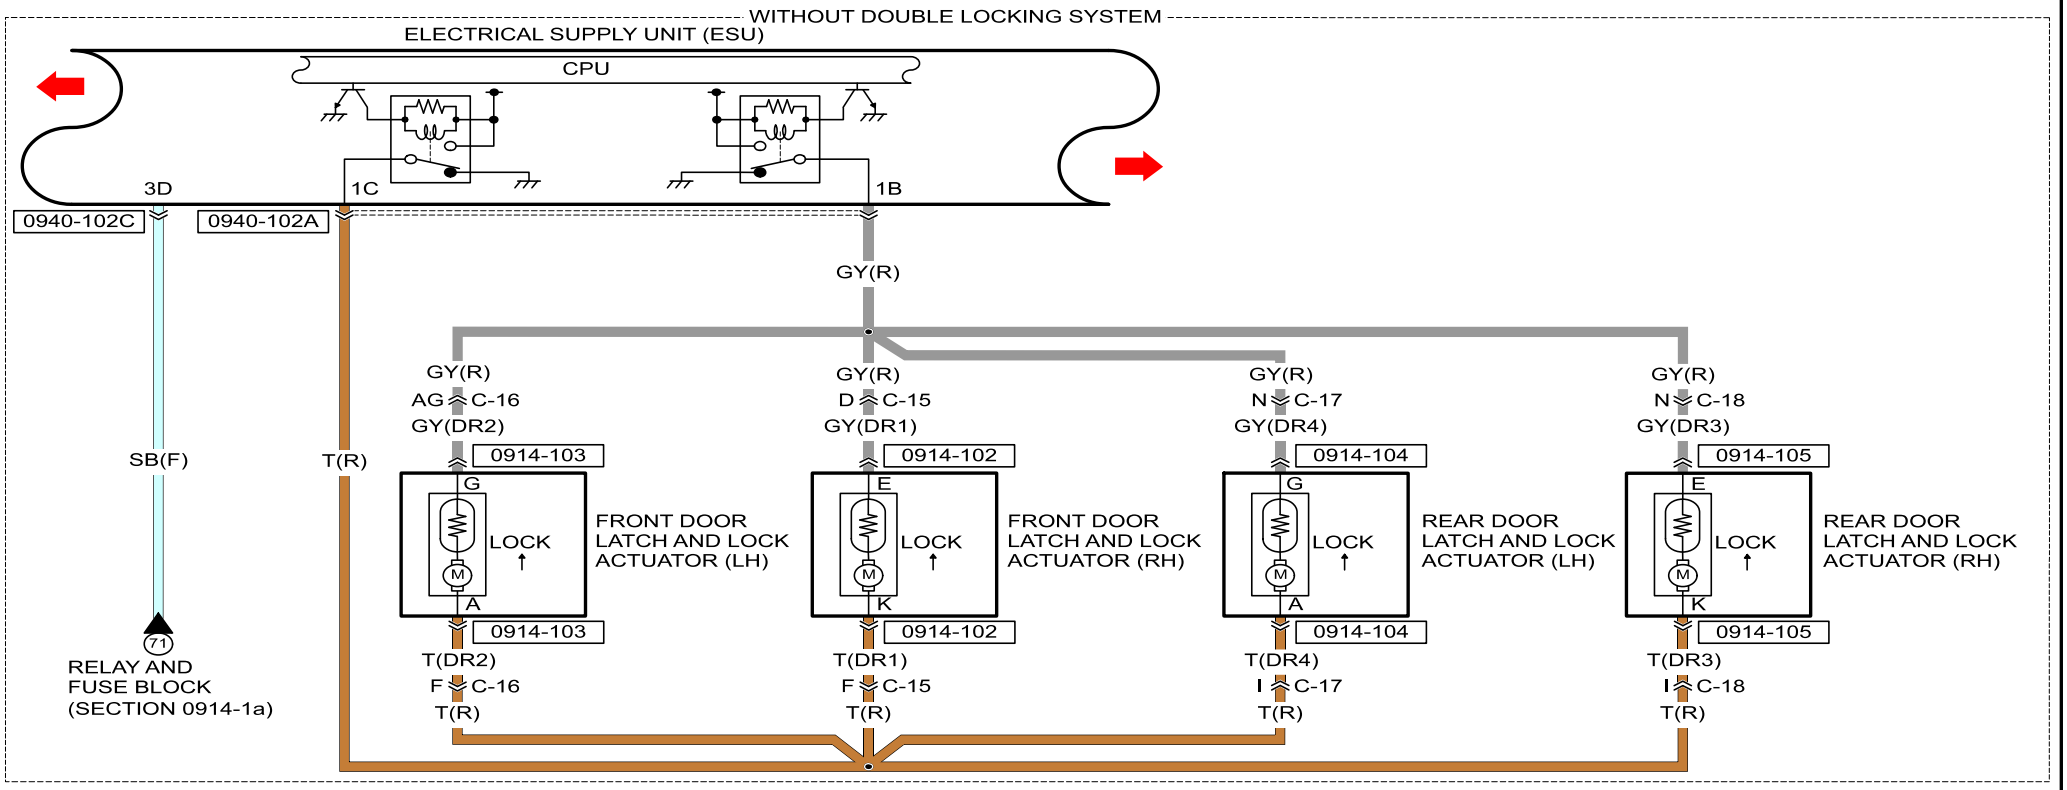


0914-102
FRONT DOOR LATCH AND LOCK ACTUATOR (RH)

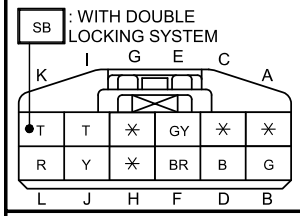


0914-103
FRONT DOOR LATCH AND LOCK ACTUATOR (LH)

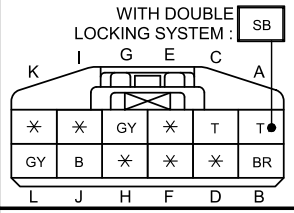


0914-104
REAR DOOR LATCH AND LOCK ACTUATOR (LH)

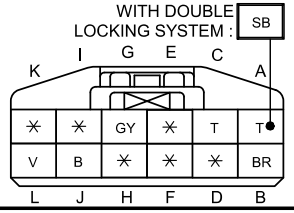


0914-105
REAR DOOR LATCH AND LOCK ACTUATOR (RH)

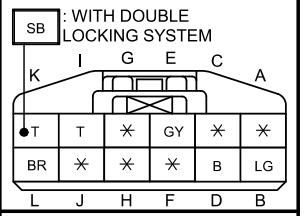


0940-102A
ELECTRICAL SUPPLY UNIT (ESU)

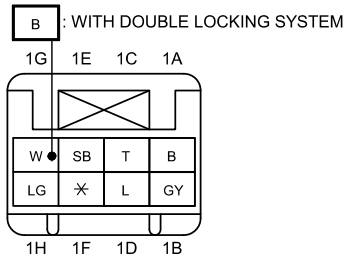

0940-102C
ELECTRICAL SUPPLY UNIT (ESU)

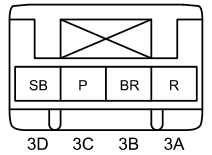

Refer to 00F section for the FUSE BOX, 00C section for the PCM CONNECTOR and COMMON CONNECTOR LIST.

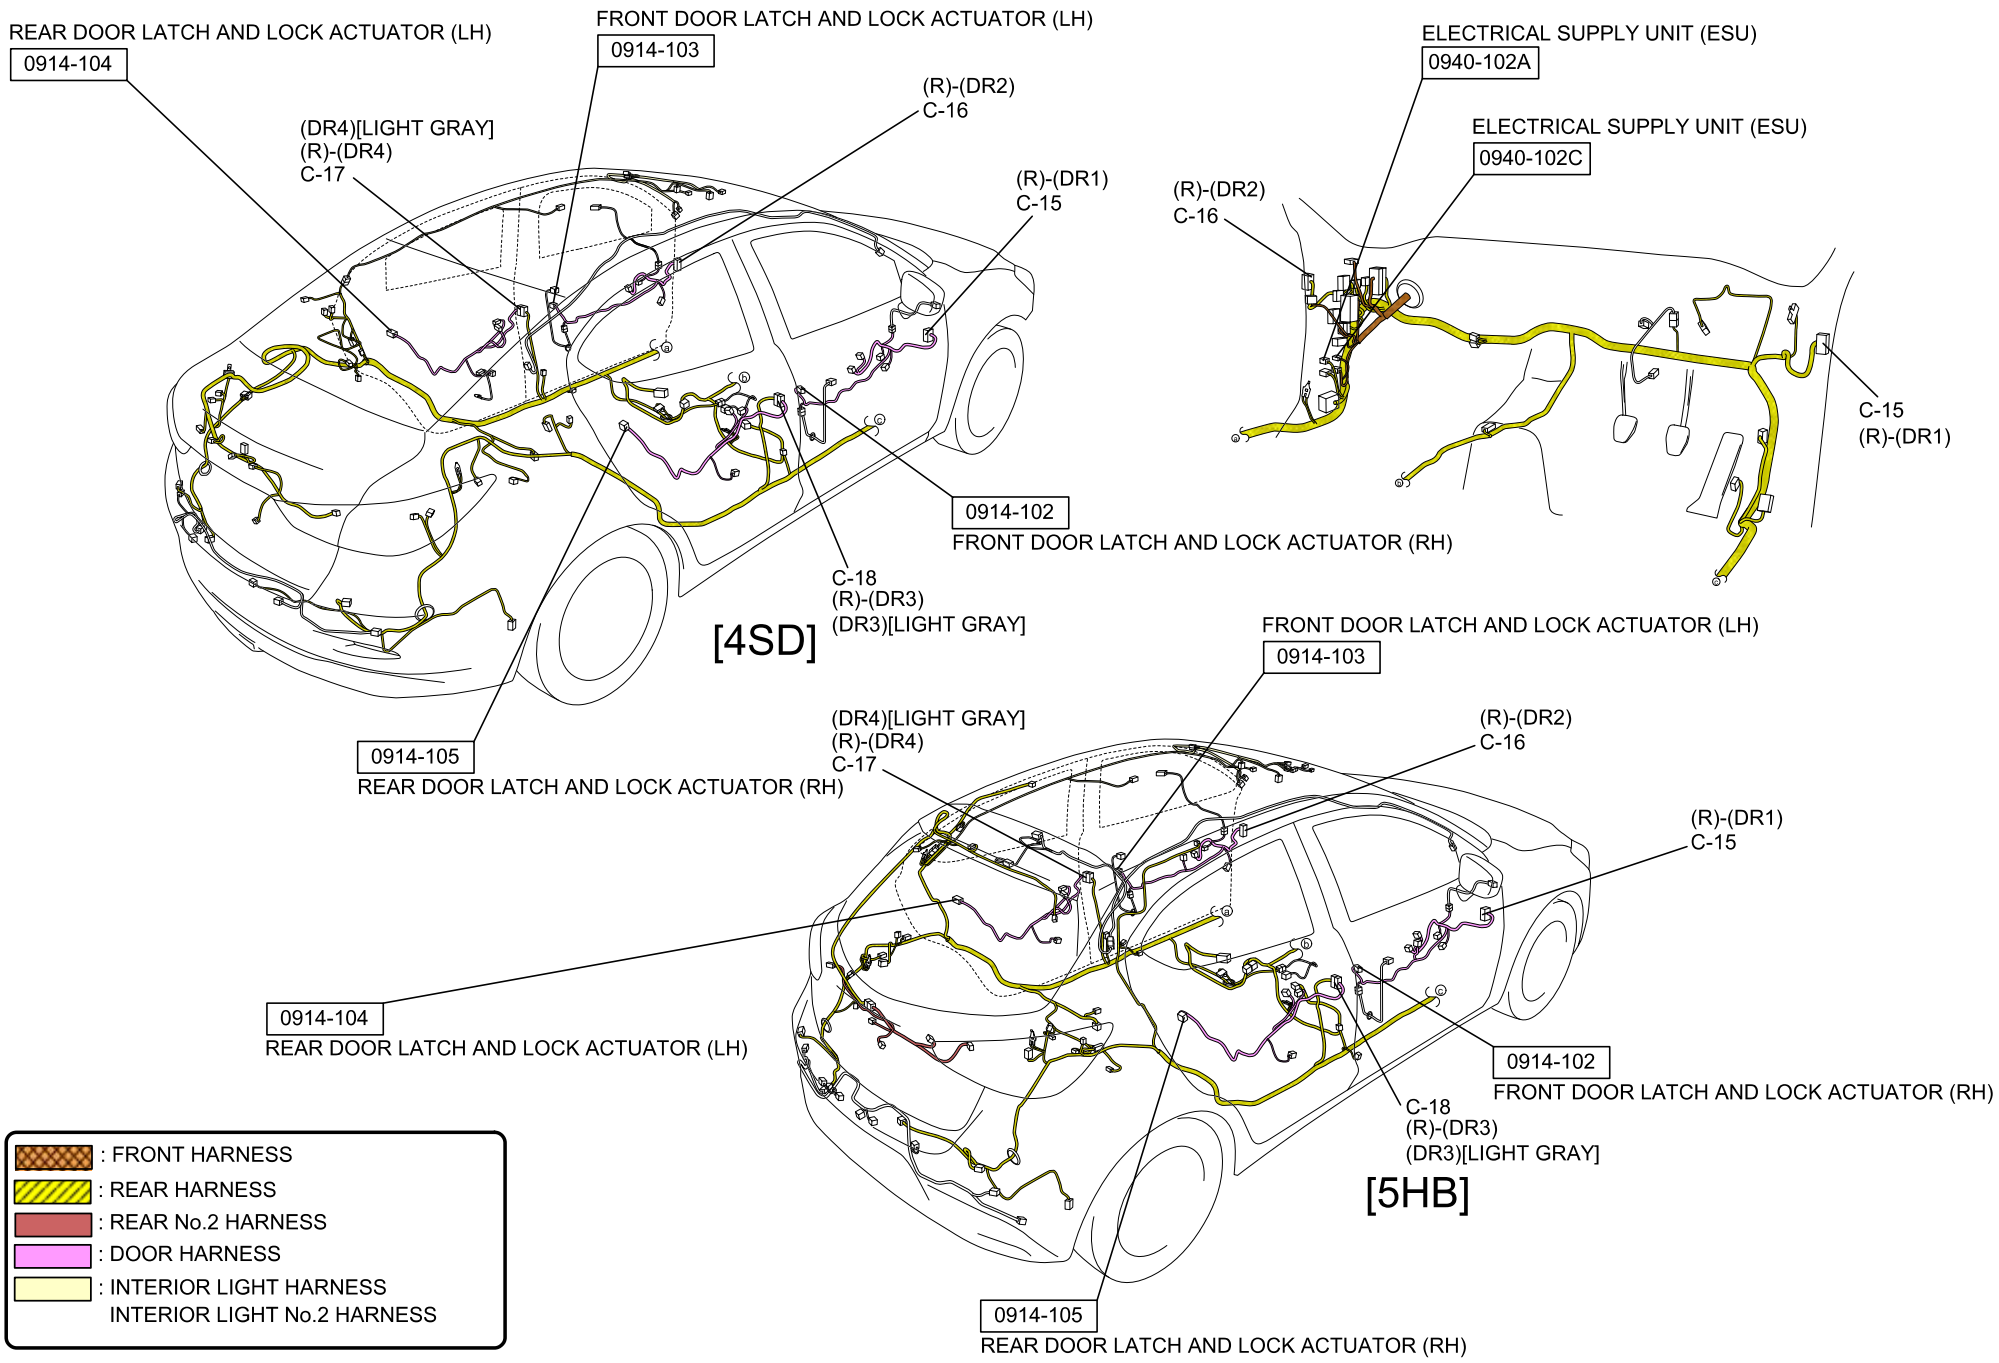
REAR DOOR LATCH AND LOCK ACTUATOR (LH)
0914-104
FRONT DOOR LATCH AND LOCK ACTUATOR (LH)
0914-103
(R)-(DR2)
C-16
(DR4)[LIGHT GRAY]
(R)-(DR4)
C-17
(R)-(DR1)
C-15
ELECTRICAL SUPPLY UNIT (ESU)
0940-102A
ELECTRICAL SUPPLY UNIT (ESU)
0940-102C
(R)-(DR2)
C-16
C-15
(R)-(DR1)
0914-102
FRONT DOOR LATCH AND LOCK ACTUATOR (RH)
C-18
(R)-(DR3)
(DR3)[LIGHT GRAY]
[4SD]
0914-105
REAR DOOR LATCH AND LOCK ACTUATOR (RH)
FRONT DOOR LATCH AND LOCK ACTUATOR (LH)
0914-103
(DR4)[LIGHT GRAY]
(R)-(DR4)
C-17
(R)-(DR2)
C-16
(R)-(DR1)
C-15
0914-104
REAR DOOR LATCH AND LOCK ACTUATOR (LH)
0914-102
FRONT DOOR LATCH AND LOCK ACTUATOR (RH)
C-18
(R)-(DR3)
(DR3)[LIGHT GRAY]
[5HB]
0914-105
REAR DOOR LATCH AND LOCK ACTUATOR (RH)
: FRONT HARNESS
: REAR HARNESS
: REAR No.2 HARNESS
: DOOR HARNESS
: INTERIOR LIGHT HARNESS
INTERIOR LIGHT No.2 HARNESS