


#17 : WITH DOUBLE LOCKING SYSTEM

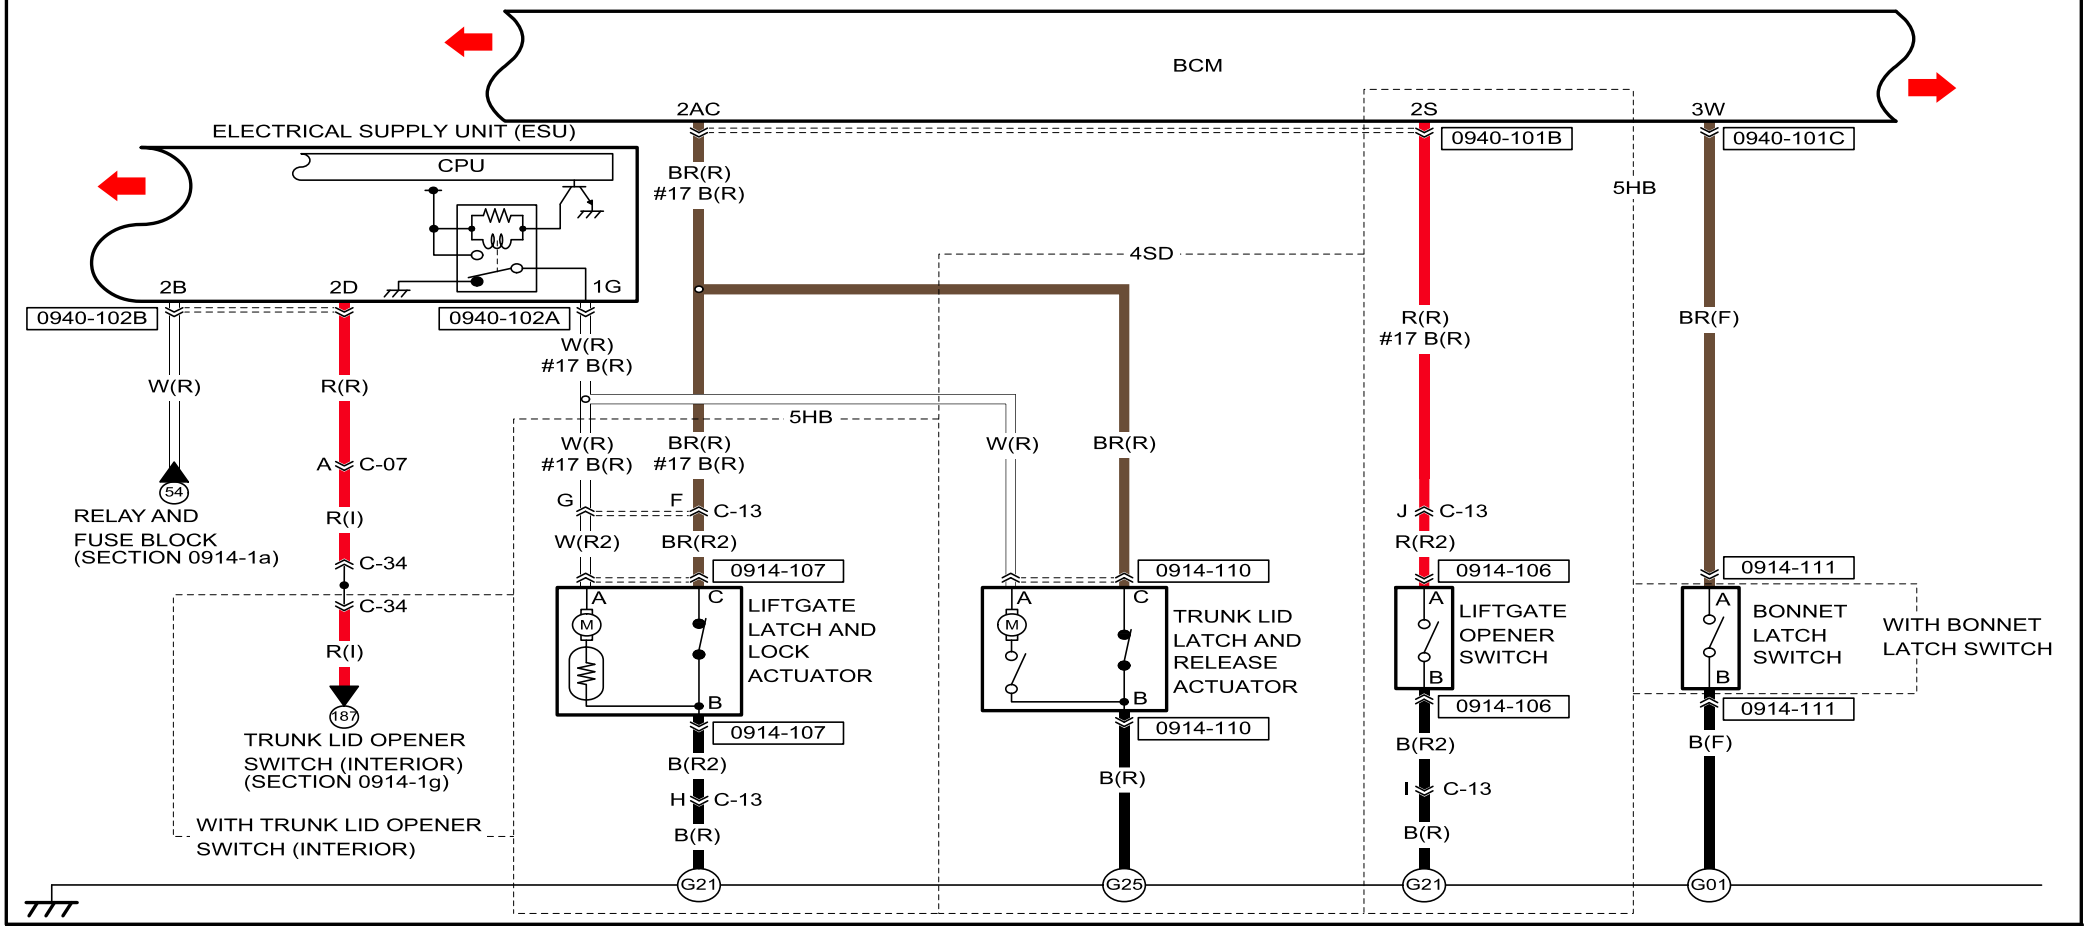


0914-106
LIFTGATE OPENER SWITCH

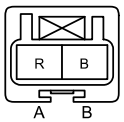


0914-110
TRUNK LID LATCH AND RELEASE ACTUATOR




0940-101B
BCM

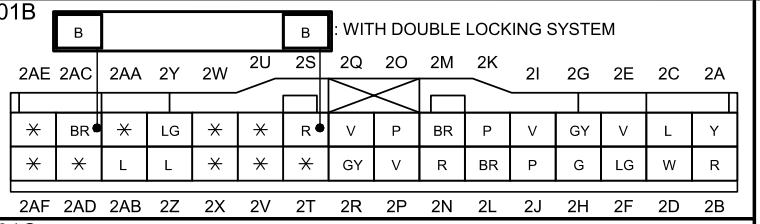


0940-102A
ELECTRICAL SUPPLY UNIT (ESU)

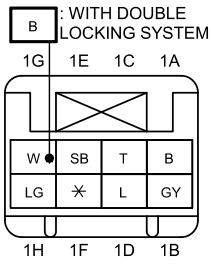


0940-102B
ELECTRICAL SUPPLY UNIT (ESU)

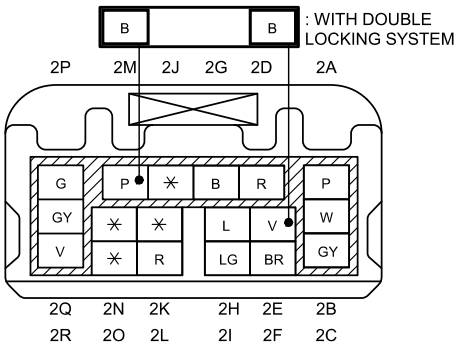


0914-107
LIFTGATE LATCH AND LOCK ACTUATOR




0914-111
BONNET LATCH SWITCH



0940-101C
BCM

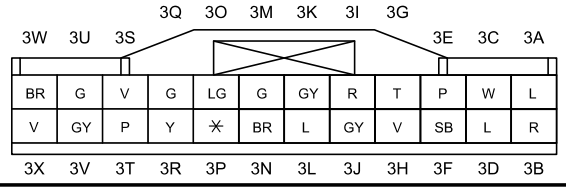


Refer to 00F section for the FUSE BOX, 00C section for the PCM CONNECTOR and COMMON CONNECTOR LIST.

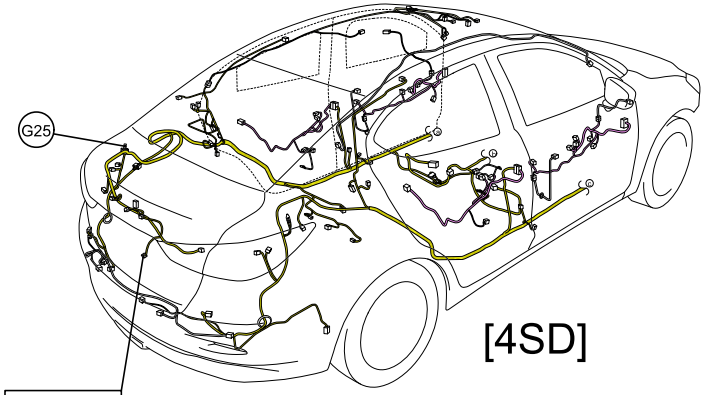


0914-110
TRUNK LID LATCH AND RELEASE ACTUATOR

[LIGHT GRAY]
JOINT CONNECTOR
C-34

(I)-(R)
C-07

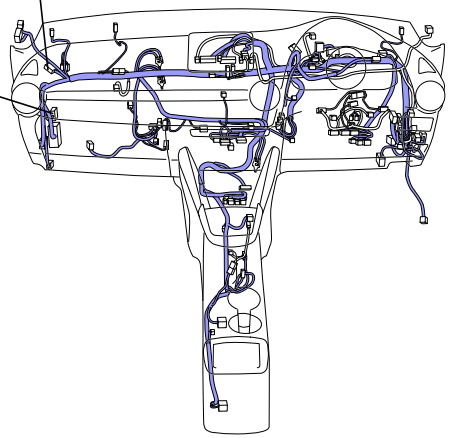

C-13
(R)-(R2)

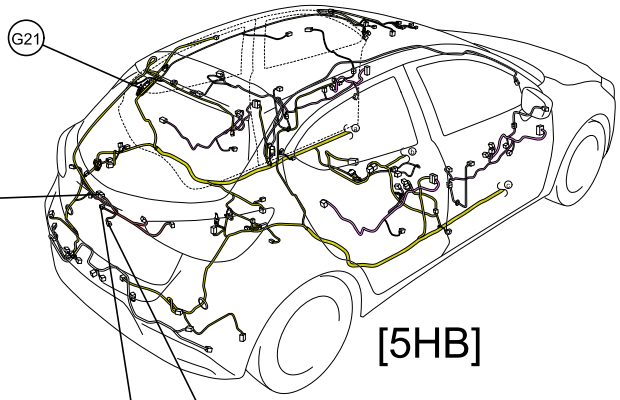


0914-107
LIFTGATE LATCH AND LOCK ACTUATOR

0914-106
LIFTGATE OPENER SWITCH

BCM
0940-101C


BCM
0940-101B

(I)-(R)
C-07

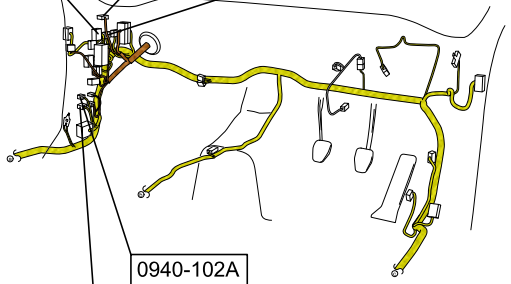


0940-102A
ELECTRICAL SUPPLY UNIT (ESU)

0940-102B
ELECTRICAL SUPPLY UNIT (ESU)

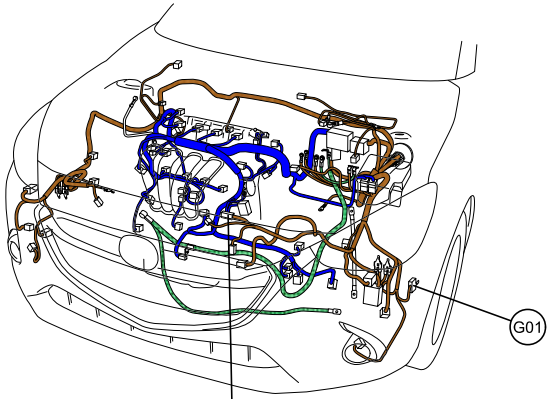

0914-111
BONNET LATCH SWITCH
[GRAY]

[SKYACTIV-G 1.3, 1.5]

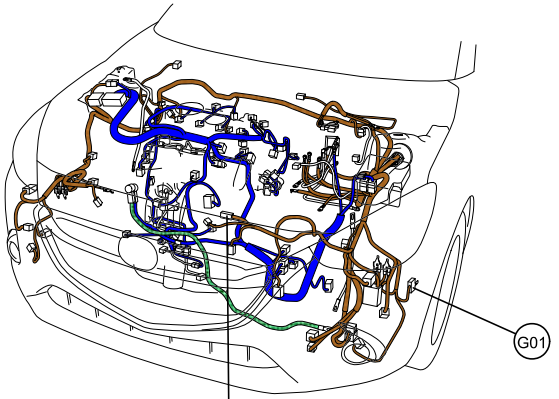

0914-111
BONNET LATCH SWITCH
[GRAY]

[SKYACTIV-D 1.5]

: FRONT HARNESS
: ENGINE HARNESS
ENGINE No.2 HARNESS
: REAR HARNESS
: REAR No.2 HARNESS
: INSTRUMENT PANEL HARNESS
: EMISSION HARNESS
: DOOR HARNESS
: INTERIOR LIGHT HARNESS
INTERIOR LIGHT No.2 HARNESS