
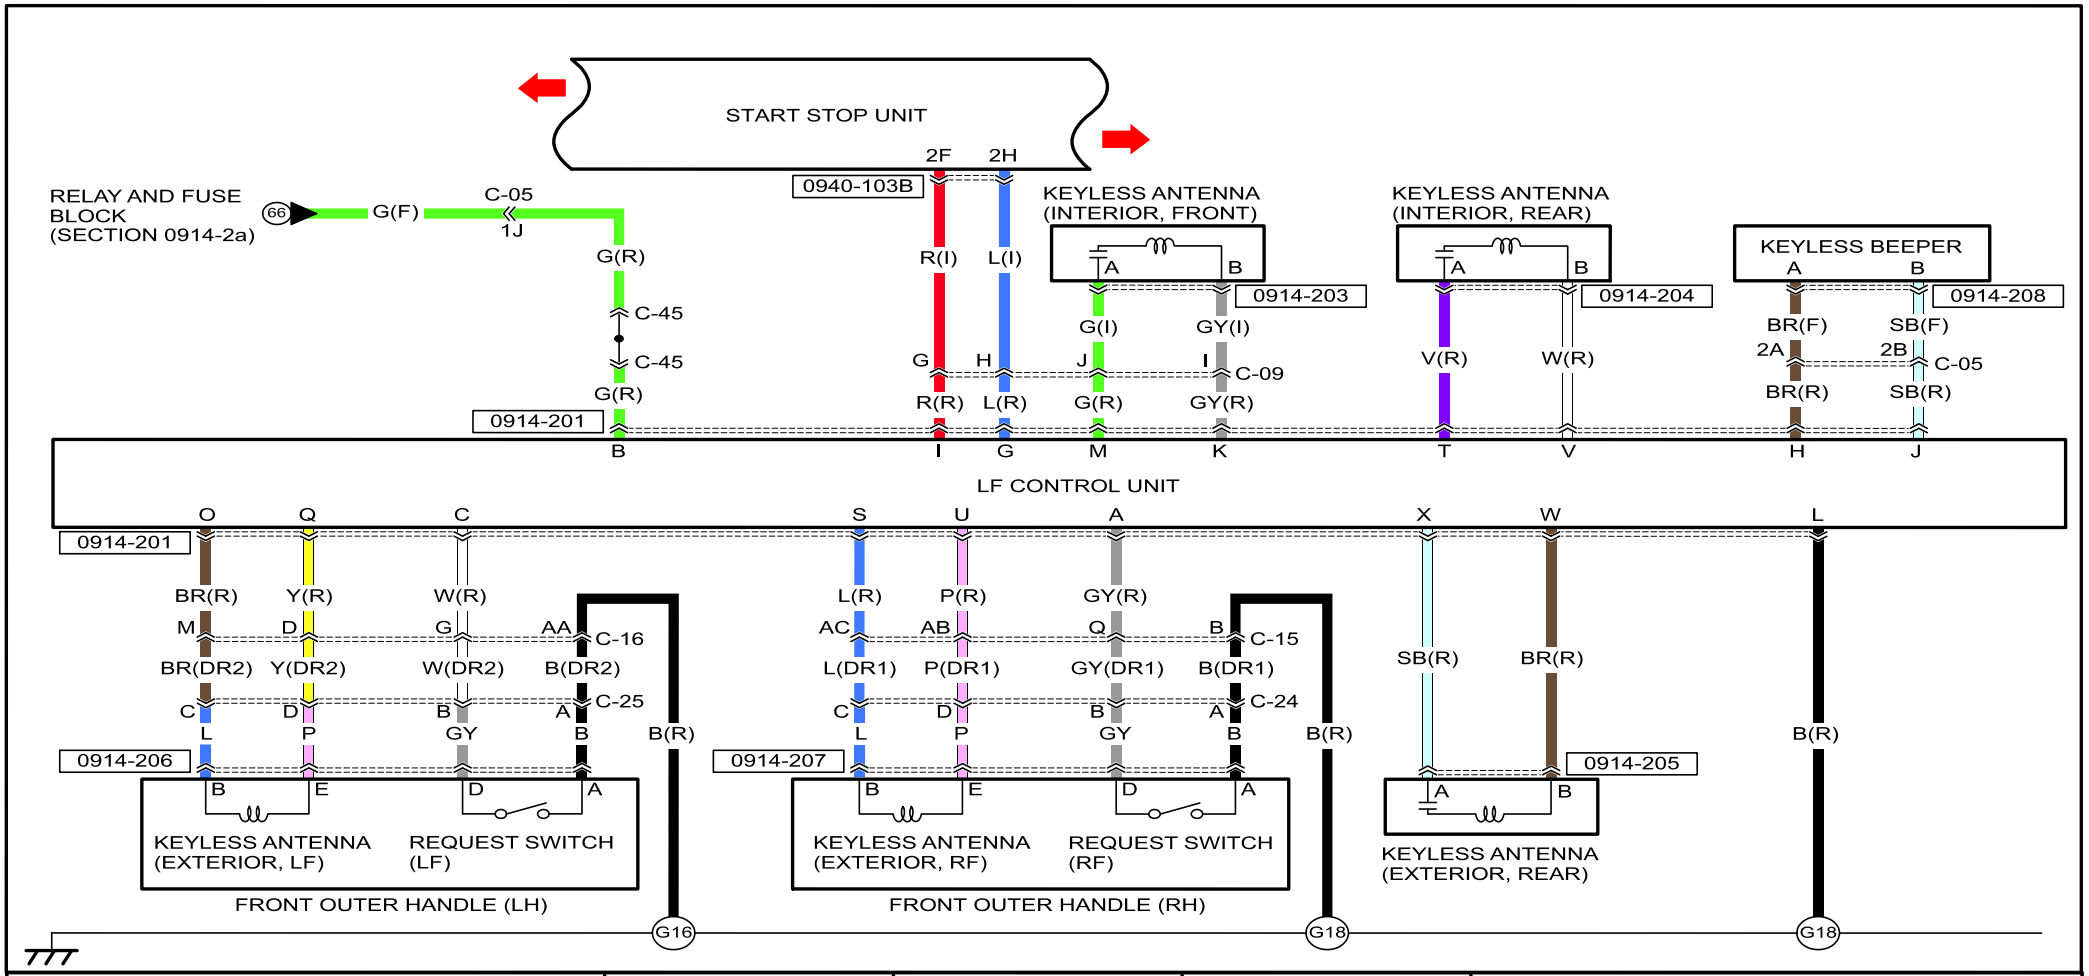
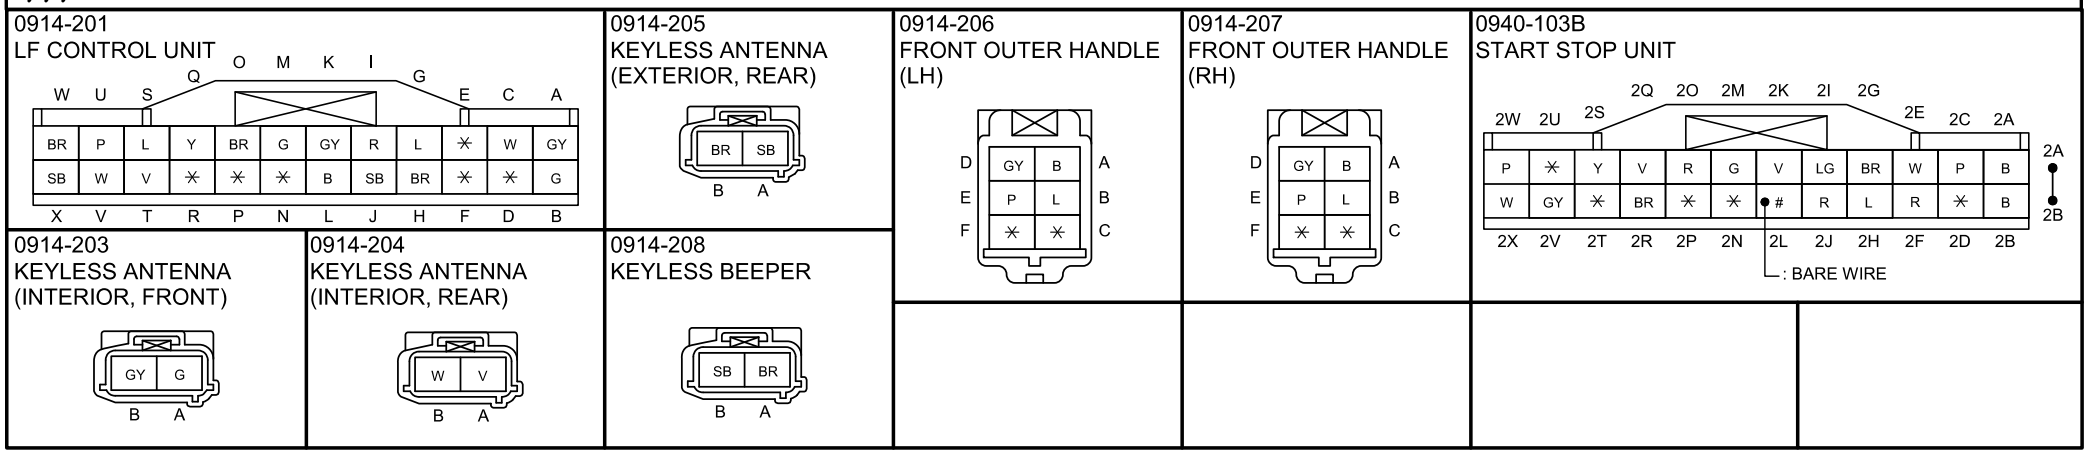


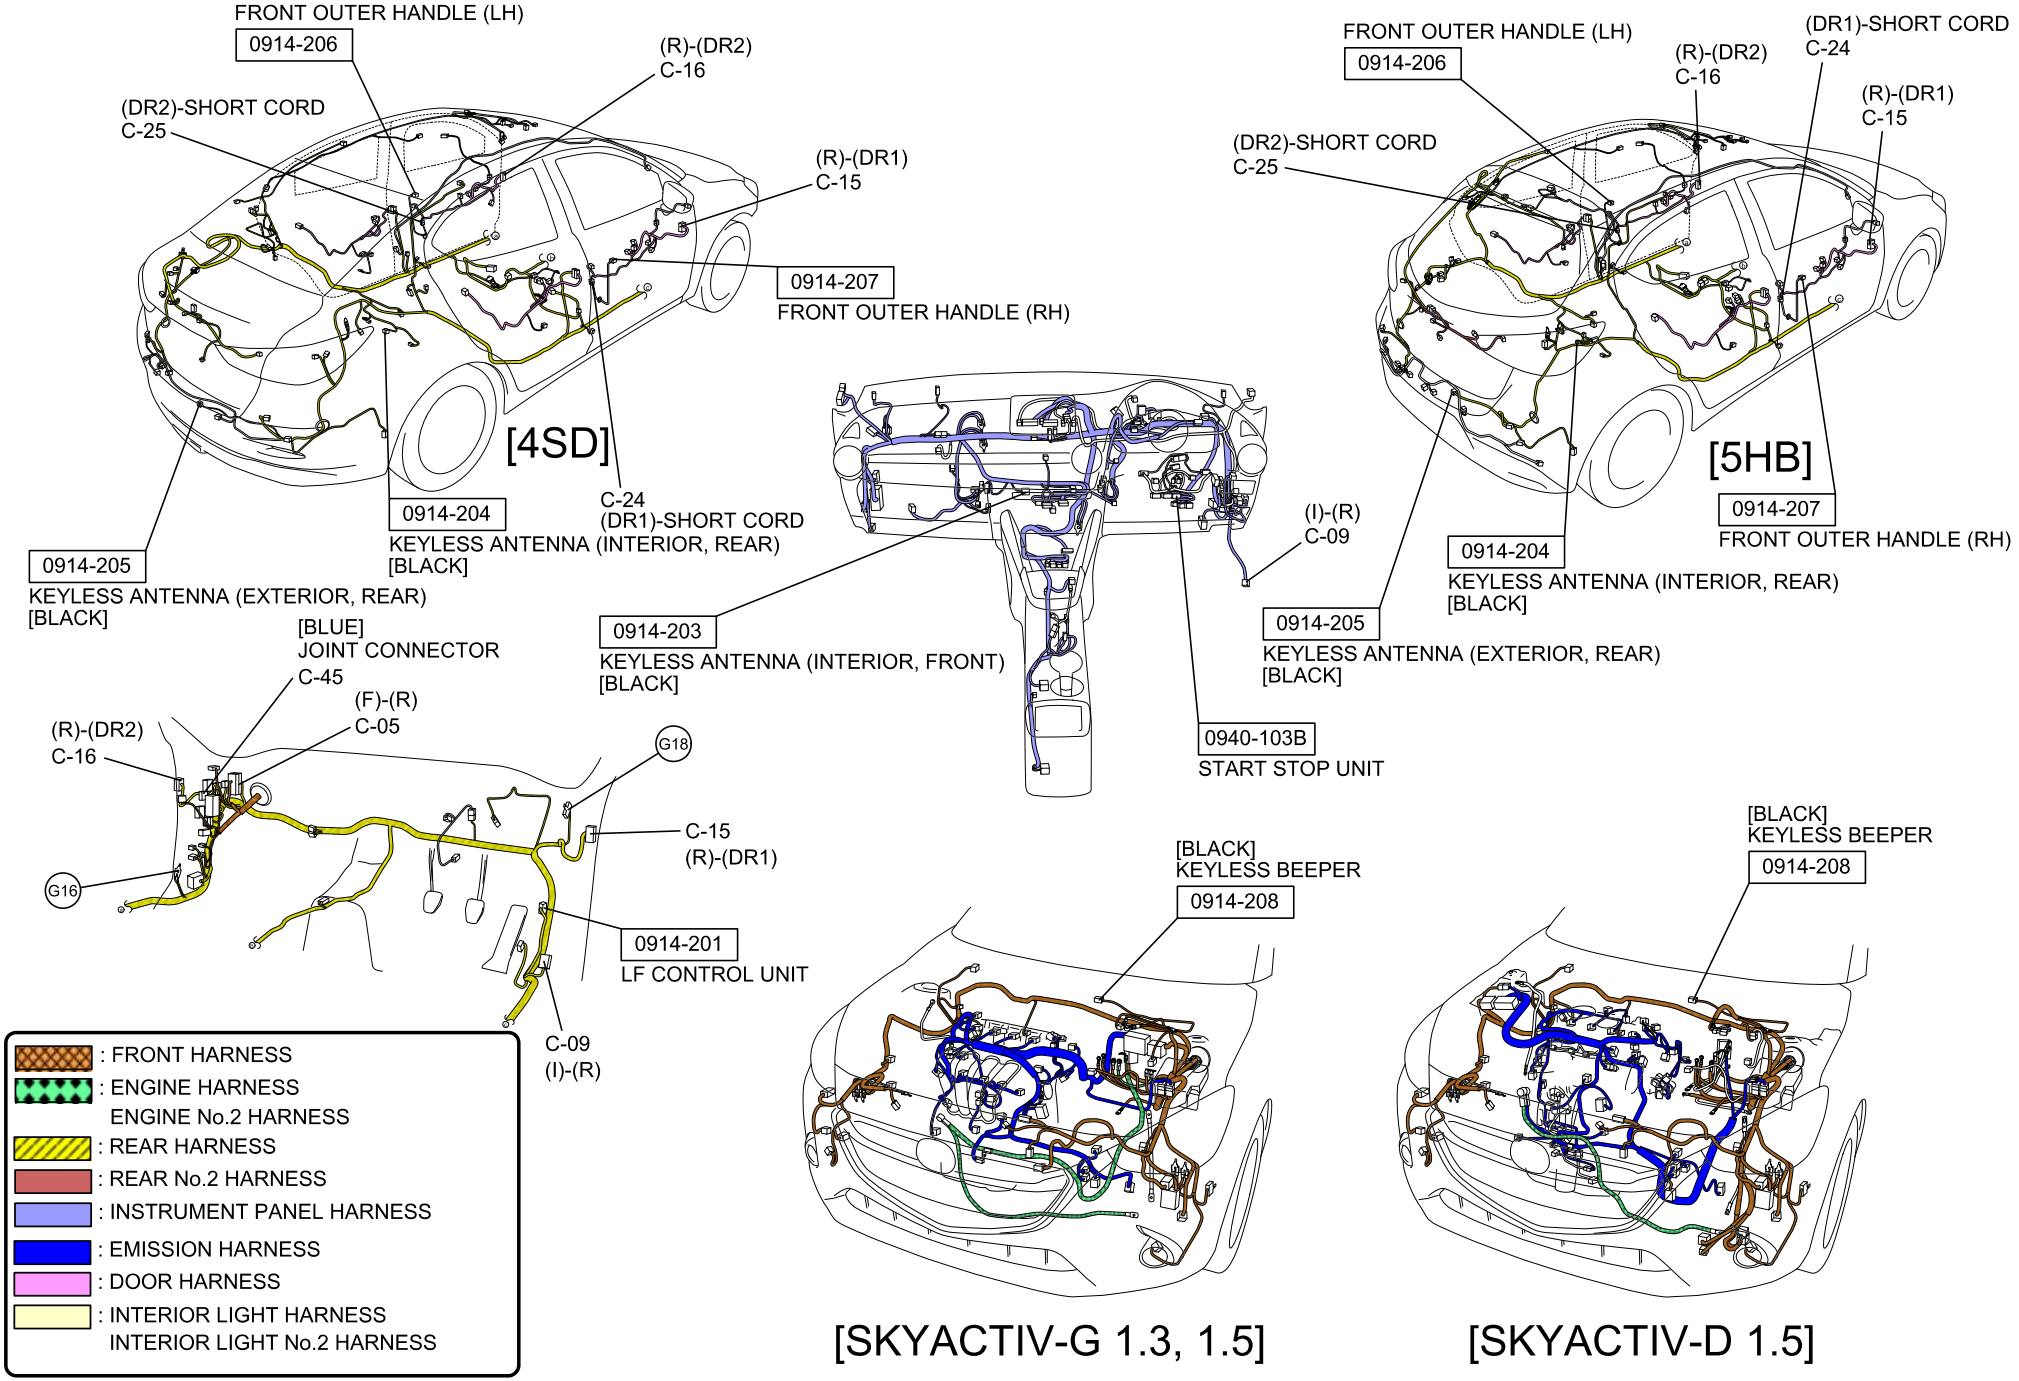

Refer to 00F section for the FUSE BOX, 00C section for the PCM CONNECTOR and COMMON CONNECTOR LIST.


FRONT OUTER HANDLE (LH)
0914-206
(R)-(DR2)
C-16
(DR2)-SHORT CORD
C-25
(R)-(DR1)
C-15
0914-207
FRONT OUTER HANDLE (RH)
[4SD]
0914-204
KEYLESS ANTENNA (INTERIOR, REAR)
[BLACK]
C-24
(DR1)-SHORT CORD
0914-205
KEYLESS ANTENNA (EXTERIOR, REAR)
[BLACK]
(I)-(R)
C-09
0914-203
KEYLESS ANTENNA (INTERIOR, FRONT)
[BLACK]
0940-103B
START STOP UNIT
FRONT OUTER HANDLE (LH)
0914-206
(R)-(DR2)
C-16
(DR1)-SHORT CORD
C-24
(R)-(DR1)
C-15
(DR2)-SHORT CORD
C-25
[5HB]
0914-207
FRONT OUTER HANDLE (RH)
0914-204
KEYLESS ANTENNA (INTERIOR, REAR)
[BLACK]
0914-205
KEYLESS ANTENNA (EXTERIOR, REAR)
[BLACK]
[BLUE]
JOINT CONNECTOR
C-45
(F)-(R)
C-05
(R)-(DR2)
C-16
G18
G16
C-15
(R)-(DR1)
0914-201
LF CONTROL UNIT
C-09
(I)-(R)
: FRONT HARNESS
: ENGINE HARNESS
ENGINE No.2 HARNESS
: REAR HARNESS
: REAR No.2 HARNESS
: INSTRUMENT PANEL HARNESS
: EMISSION HARNESS
: DOOR HARNESS
: INTERIOR LIGHT HARNESS
INTERIOR LIGHT No.2 HARNESS
[BLACK]
KEYLESS BEEPER
0914-208
[SKYACTIV-G 1.3, 1.5]
[BLACK]
KEYLESS BEEPER
0914-208
[SKYACTIV-D 1.5]