

0914-2c


0914-2e

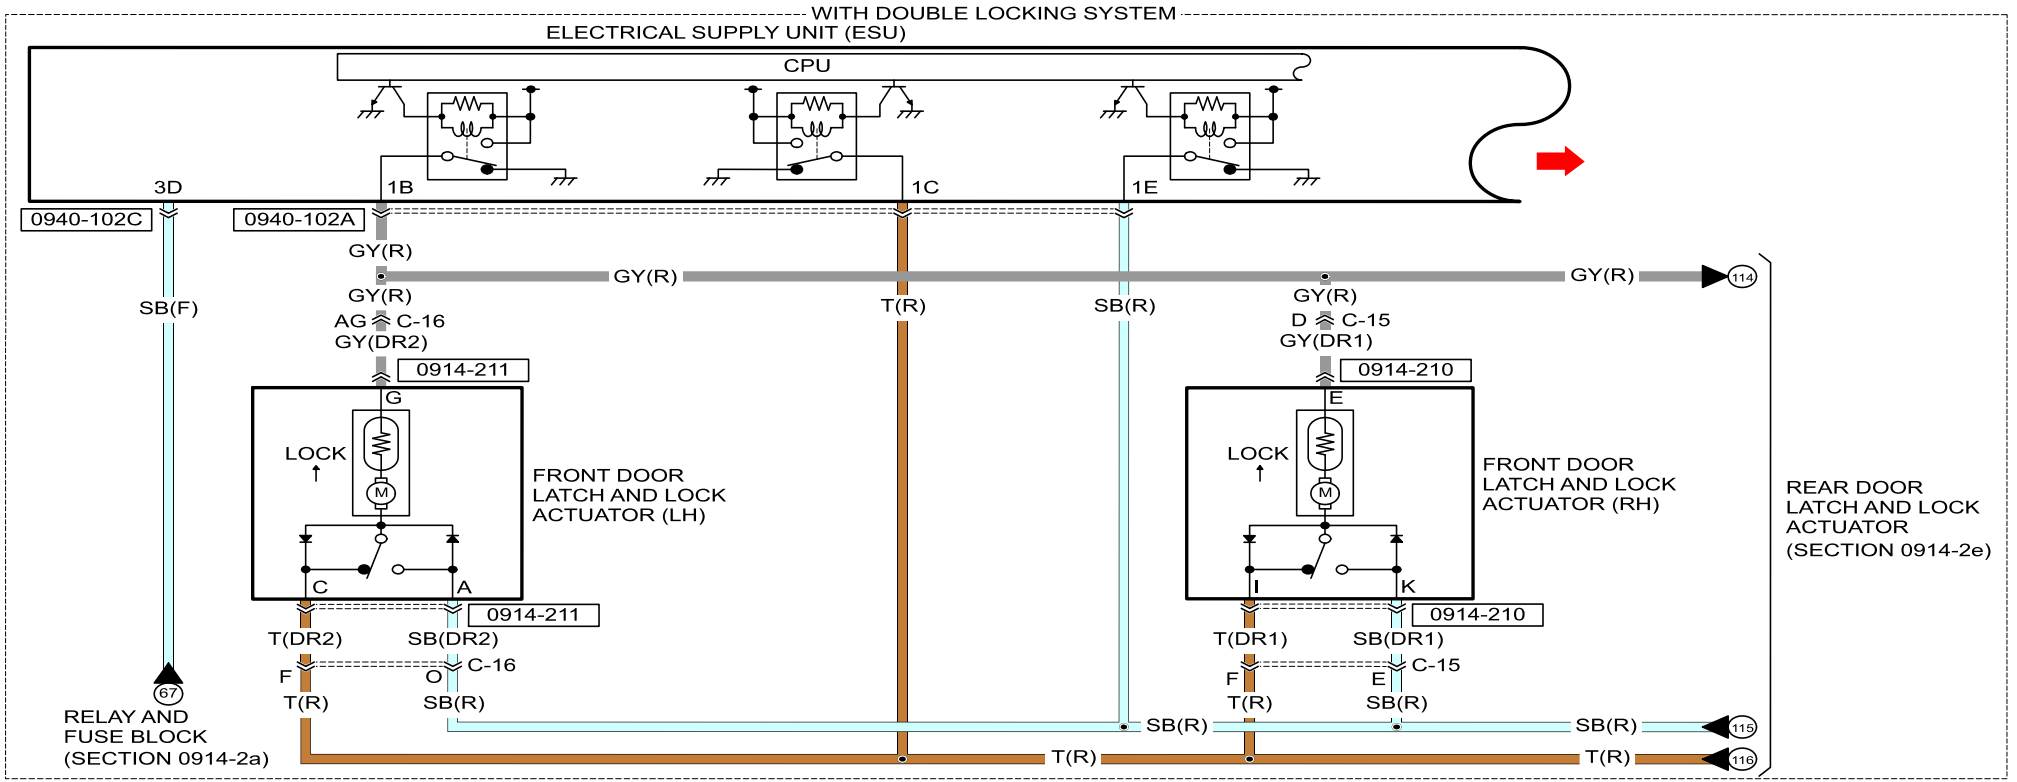


0914-210
FRONT DOOR LATCH AND LOCK ACTUATOR (RH)

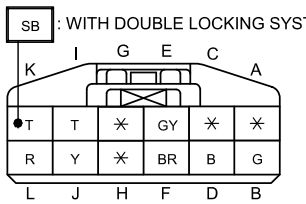


0914-211
FRONT DOOR LATCH AND LOCK ACTUATOR (LH)

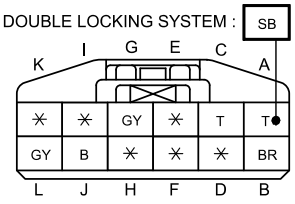


0940-102A
ELECTRICAL SUPPLY UNIT (ESU)

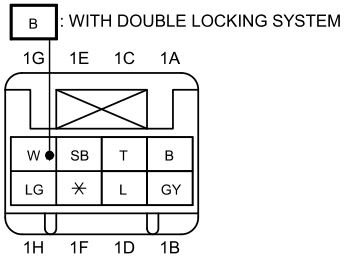

0940-102C
ELECTRICAL SUPPLY UNIT (ESU)

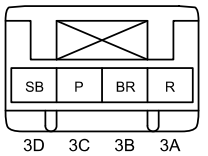

Refer to 00F section for the FUSE BOX, 00C section for the PCM CONNECTOR and COMMON CONNECTOR LIST.

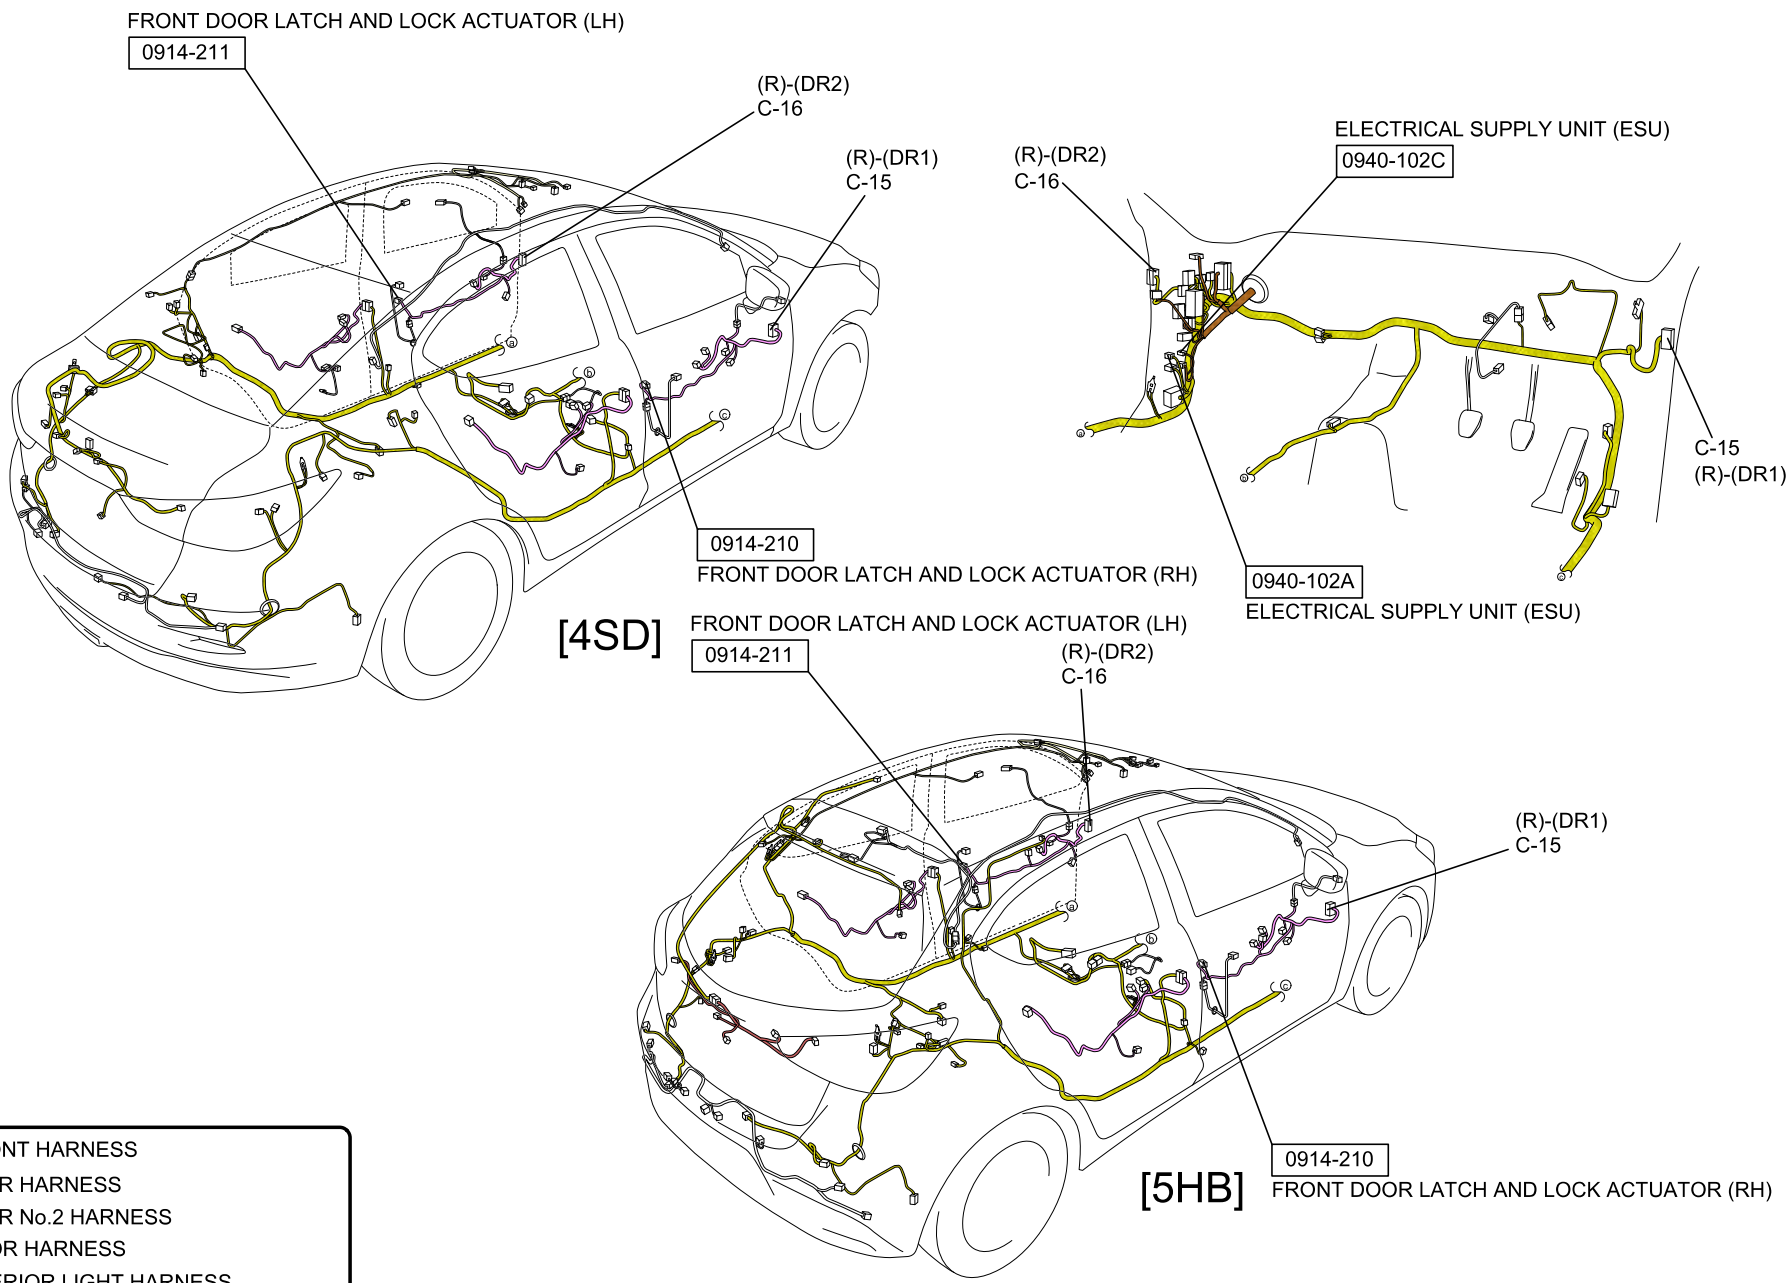
FRONT DOOR LATCH AND LOCK ACTUATOR (LH)
0914-211
(R)-(DR2)
C-16
(R)-(DR1)
C-15
0914-210
FRONT DOOR LATCH AND LOCK ACTUATOR (RH)
[4SD]
ELECTRICAL SUPPLY UNIT (ESU)
0940-102C
(R)-(DR2)
C-16
C-15
(R)-(DR1)
0940-102A
ELECTRICAL SUPPLY UNIT (ESU)
FRONT DOOR LATCH AND LOCK ACTUATOR (LH)
0914-211
(R)-(DR2)
C-16
(R)-(DR1)
C-15
0914-210
FRONT DOOR LATCH AND LOCK ACTUATOR (RH)
[5HB]
: FRONT HARNESS
: REAR HARNESS
: REAR No.2 HARNESS
: DOOR HARNESS
: INTERIOR LIGHT HARNESS
INTERIOR LIGHT No.2 HARNESS