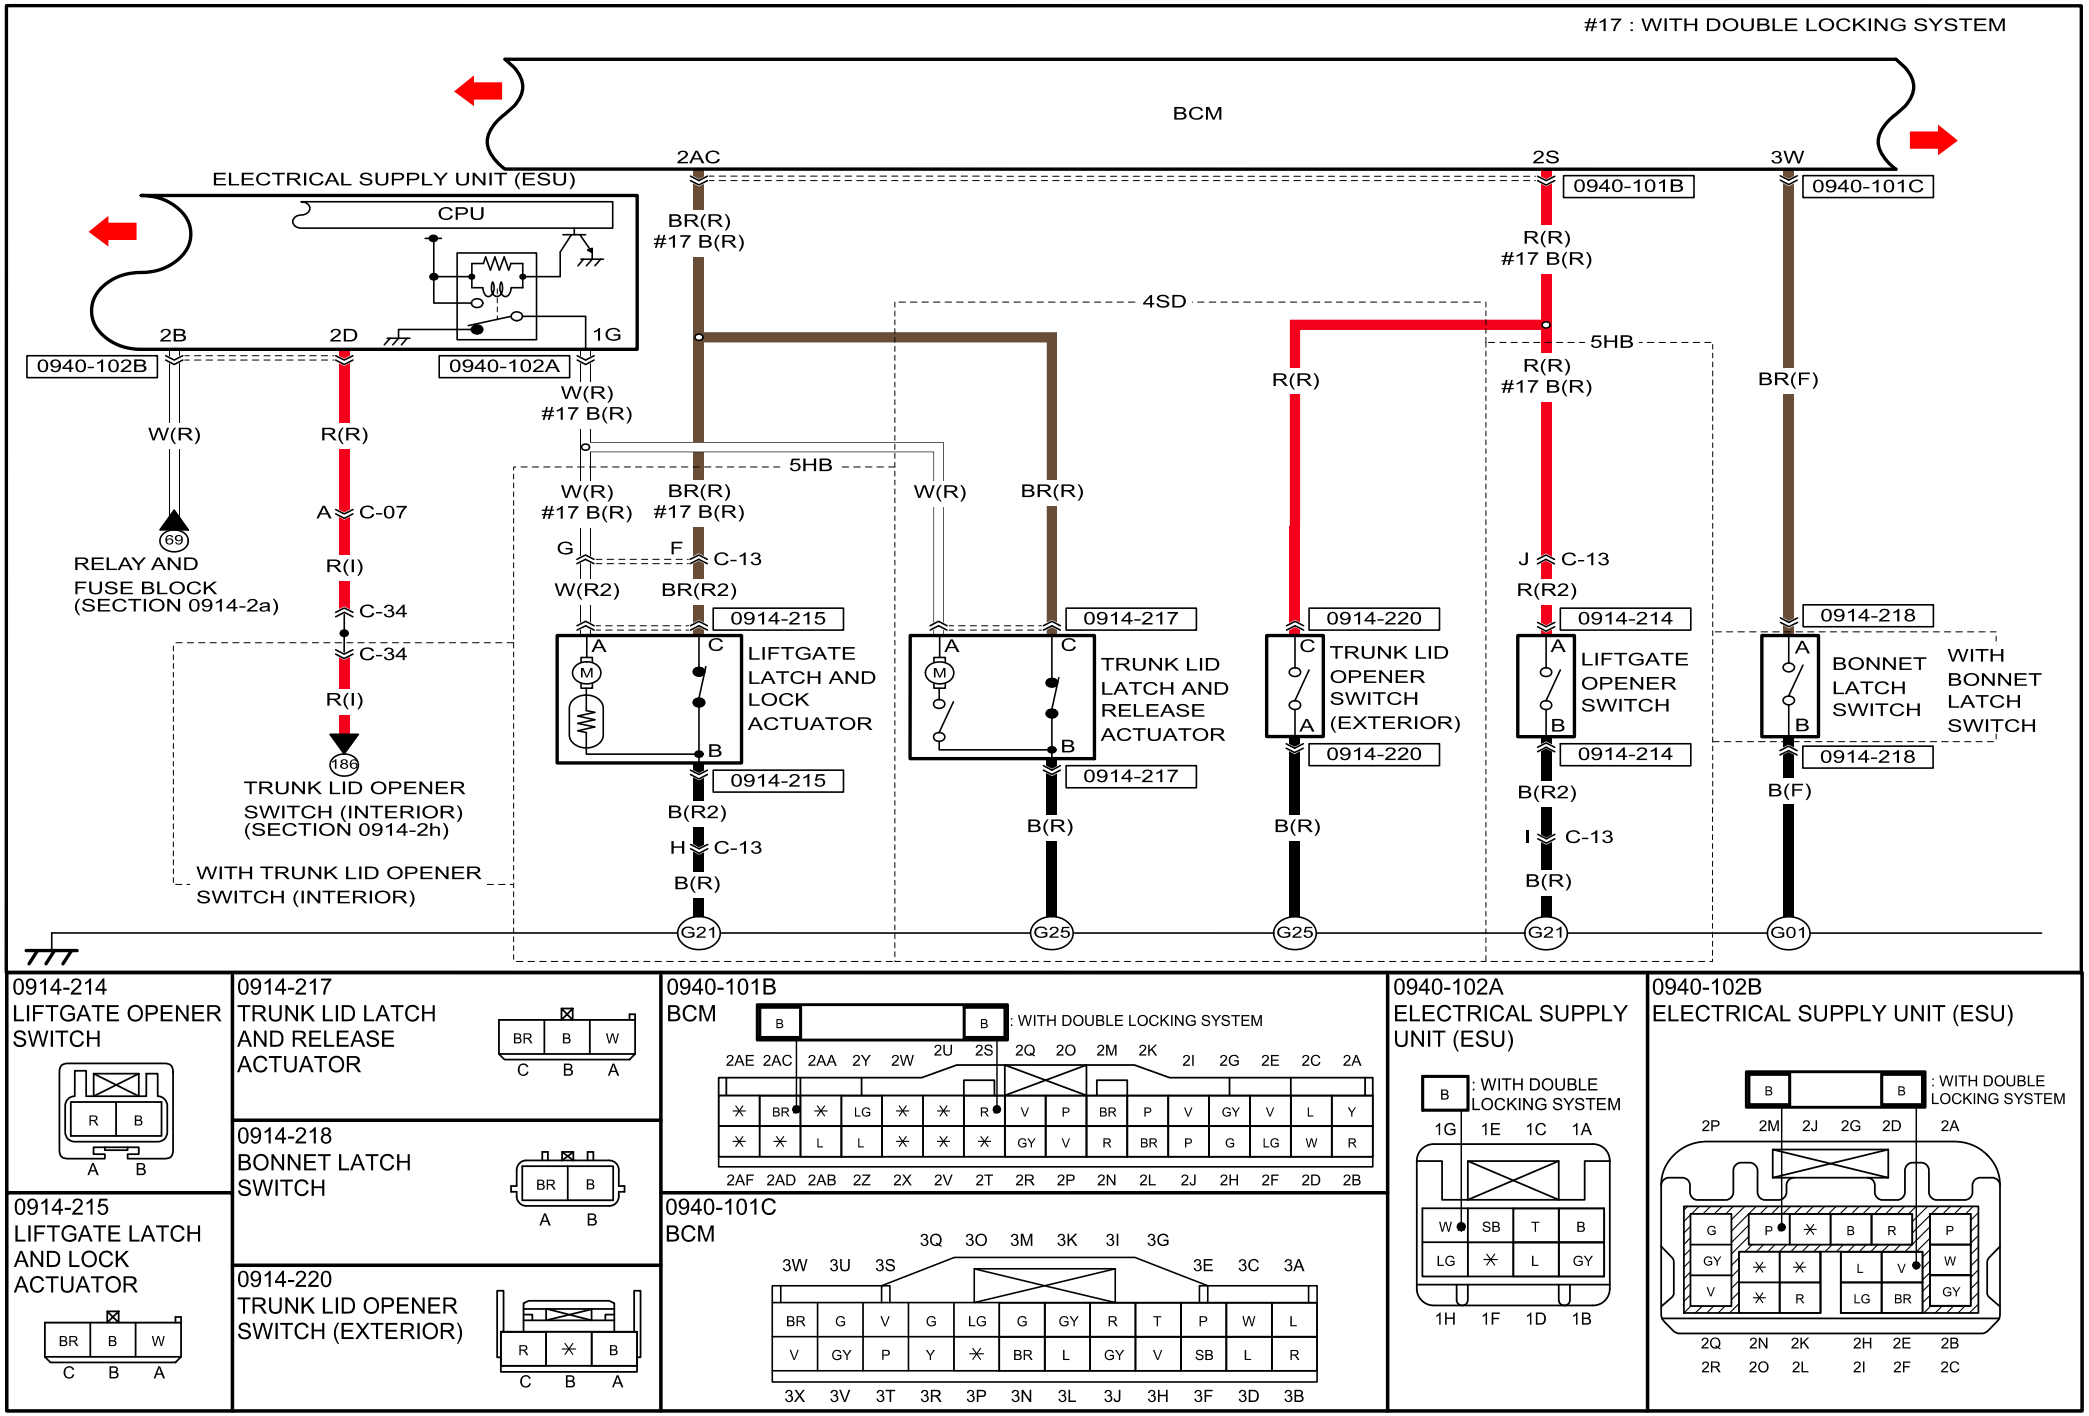


0914-214
LIFTGATE OPENER SWITCH

0914-215
LIFTGATE LATCH AND LOCK ACTUATOR

0914-217
TRUNK LID LATCH AND RELEASE ACTUATOR

0914-218
BONNET LATCH SWITCH

0914-220
TRUNK LID OPENER SWITCH (EXTERIOR)


0940-101B
BCM

0940-101C
BCM

0940-102A
ELECTRICAL SUPPLY UNIT (ESU)

0940-102B
ELECTRICAL SUPPLY UNIT (ESU)

Refer to 00F section for the FUSE BOX, 00C section for the PCM CONNECTOR and COMMON CONNECTOR LIST.

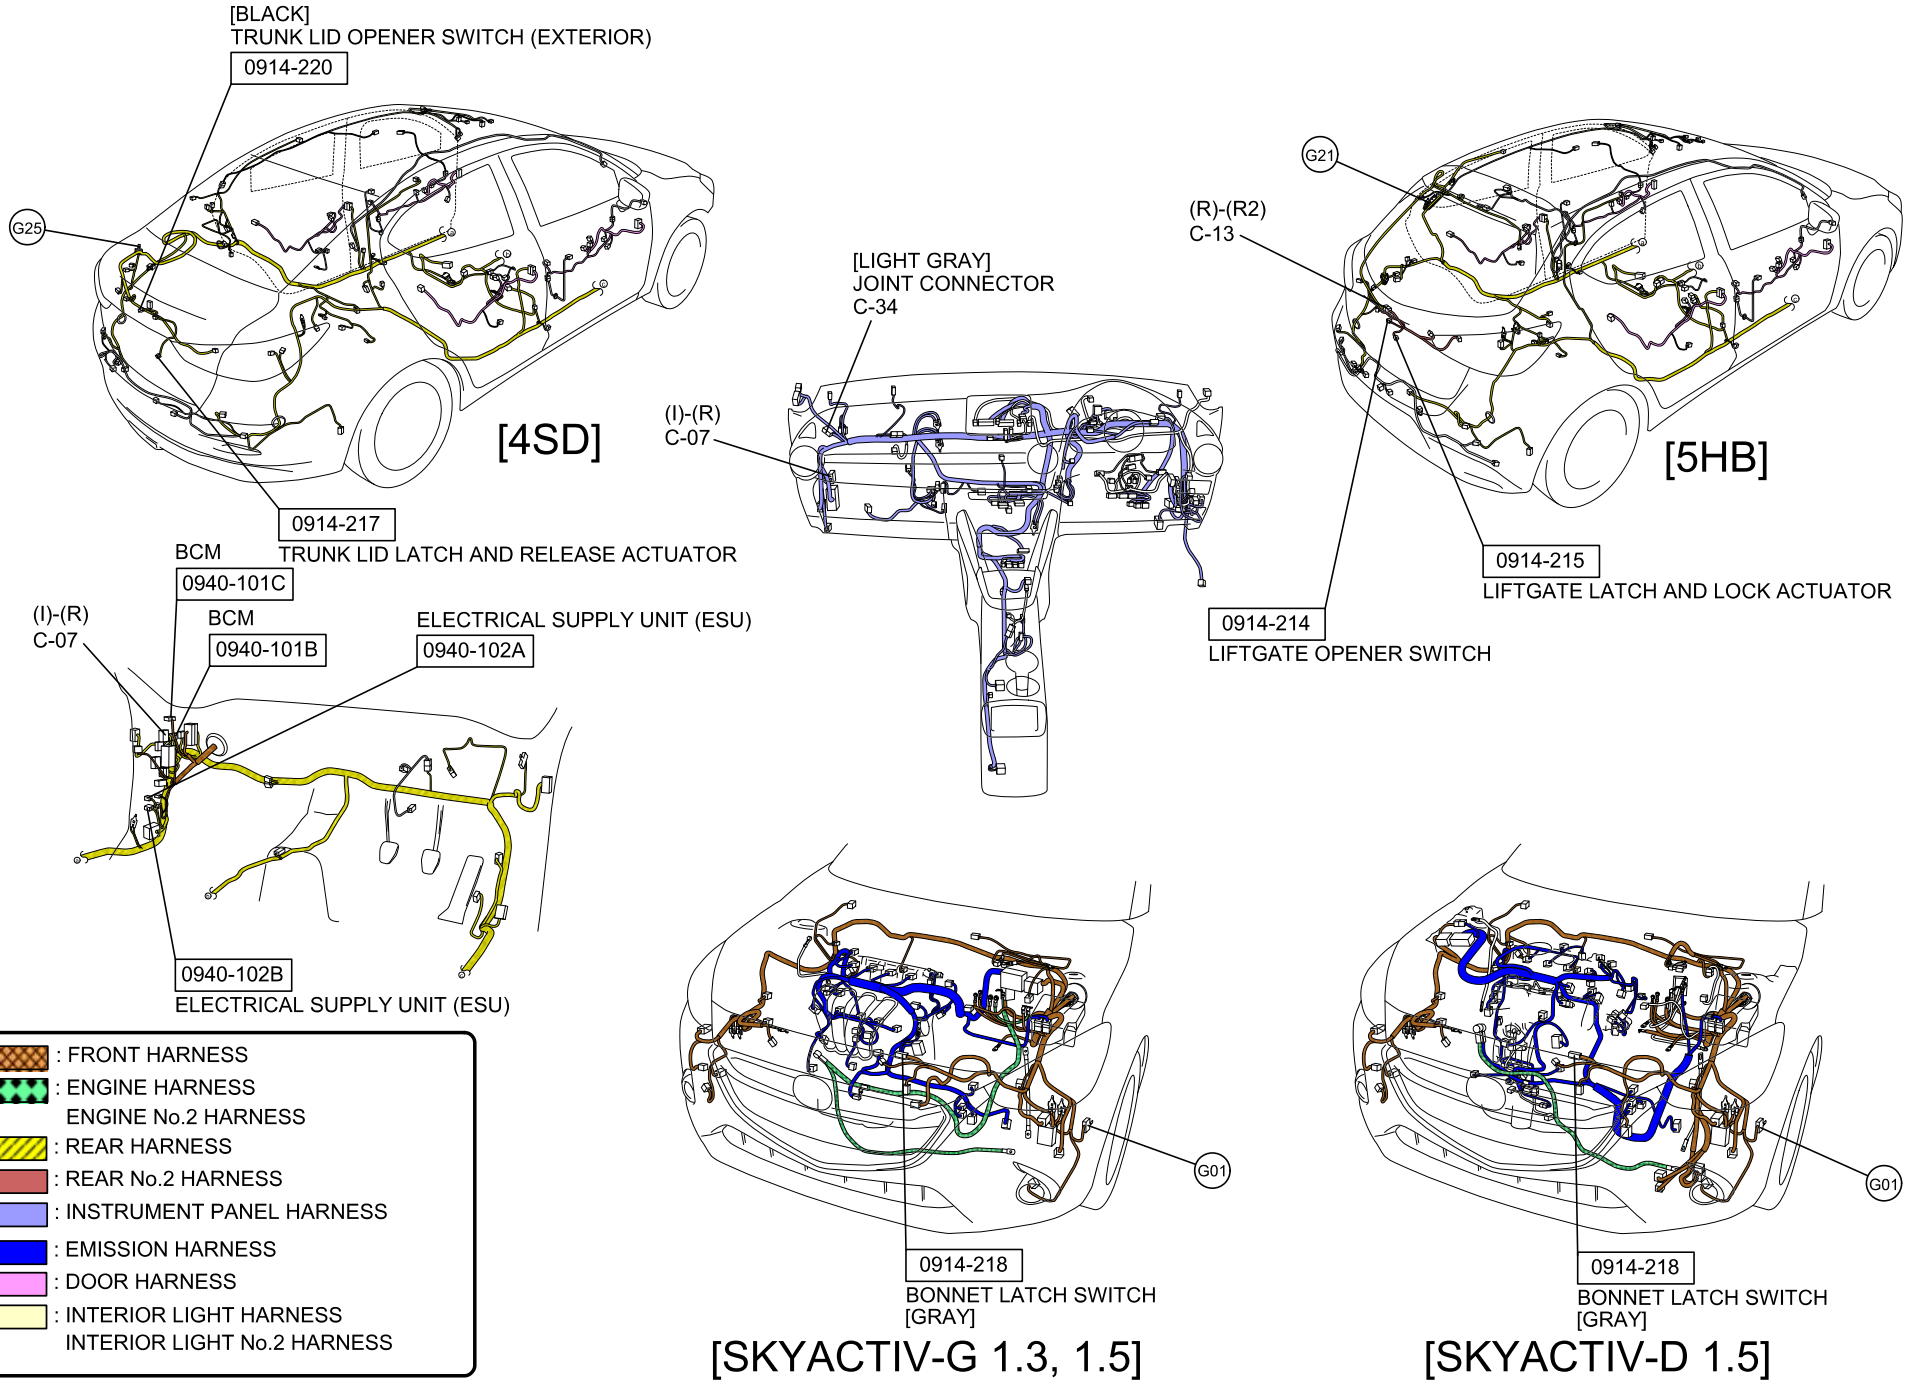
[BLACK]
TRUNK LID OPENER SWITCH (EXTERIOR)
0914-220
G25
[4SD]
0914-217
TRUNK LID LATCH AND RELEASE ACTUATOR
BCM
0940-101C
BCM
0940-101B
ELECTRICAL SUPPLY UNIT (ESU)
0940-102A
(I)-(R)
C-07
0940-102B
ELECTRICAL SUPPLY UNIT (ESU)
[LIGHT GRAY]
JOINT CONNECTOR
C-34
(I)-(R)
C-07
G21
(R)-(R2)
C-13
[5HB]
0914-215
LIFTGATE LATCH AND LOCK ACTUATOR
0914-214
LIFTGATE OPENER SWITCH
: FRONT HARNESS
: ENGINE HARNESS
ENGINE No.2 HARNESS
: REAR HARNESS
: REAR No.2 HARNESS
: INSTRUMENT PANEL HARNESS
: EMISSION HARNESS
: DOOR HARNESS
: INTERIOR LIGHT HARNESS
INTERIOR LIGHT No.2 HARNESS
G01
0914-218
BONNET LATCH SWITCH
[GRAY]
[SKYACTIV-G 1.3, 1.5]
G01
0914-218
BONNET LATCH SWITCH
[GRAY]
[SKYACTIV-D 1.5]