


DOOR LOCK SYSTEM (WITH ADVANCED KEYLESS ENTRY SYSTEM)

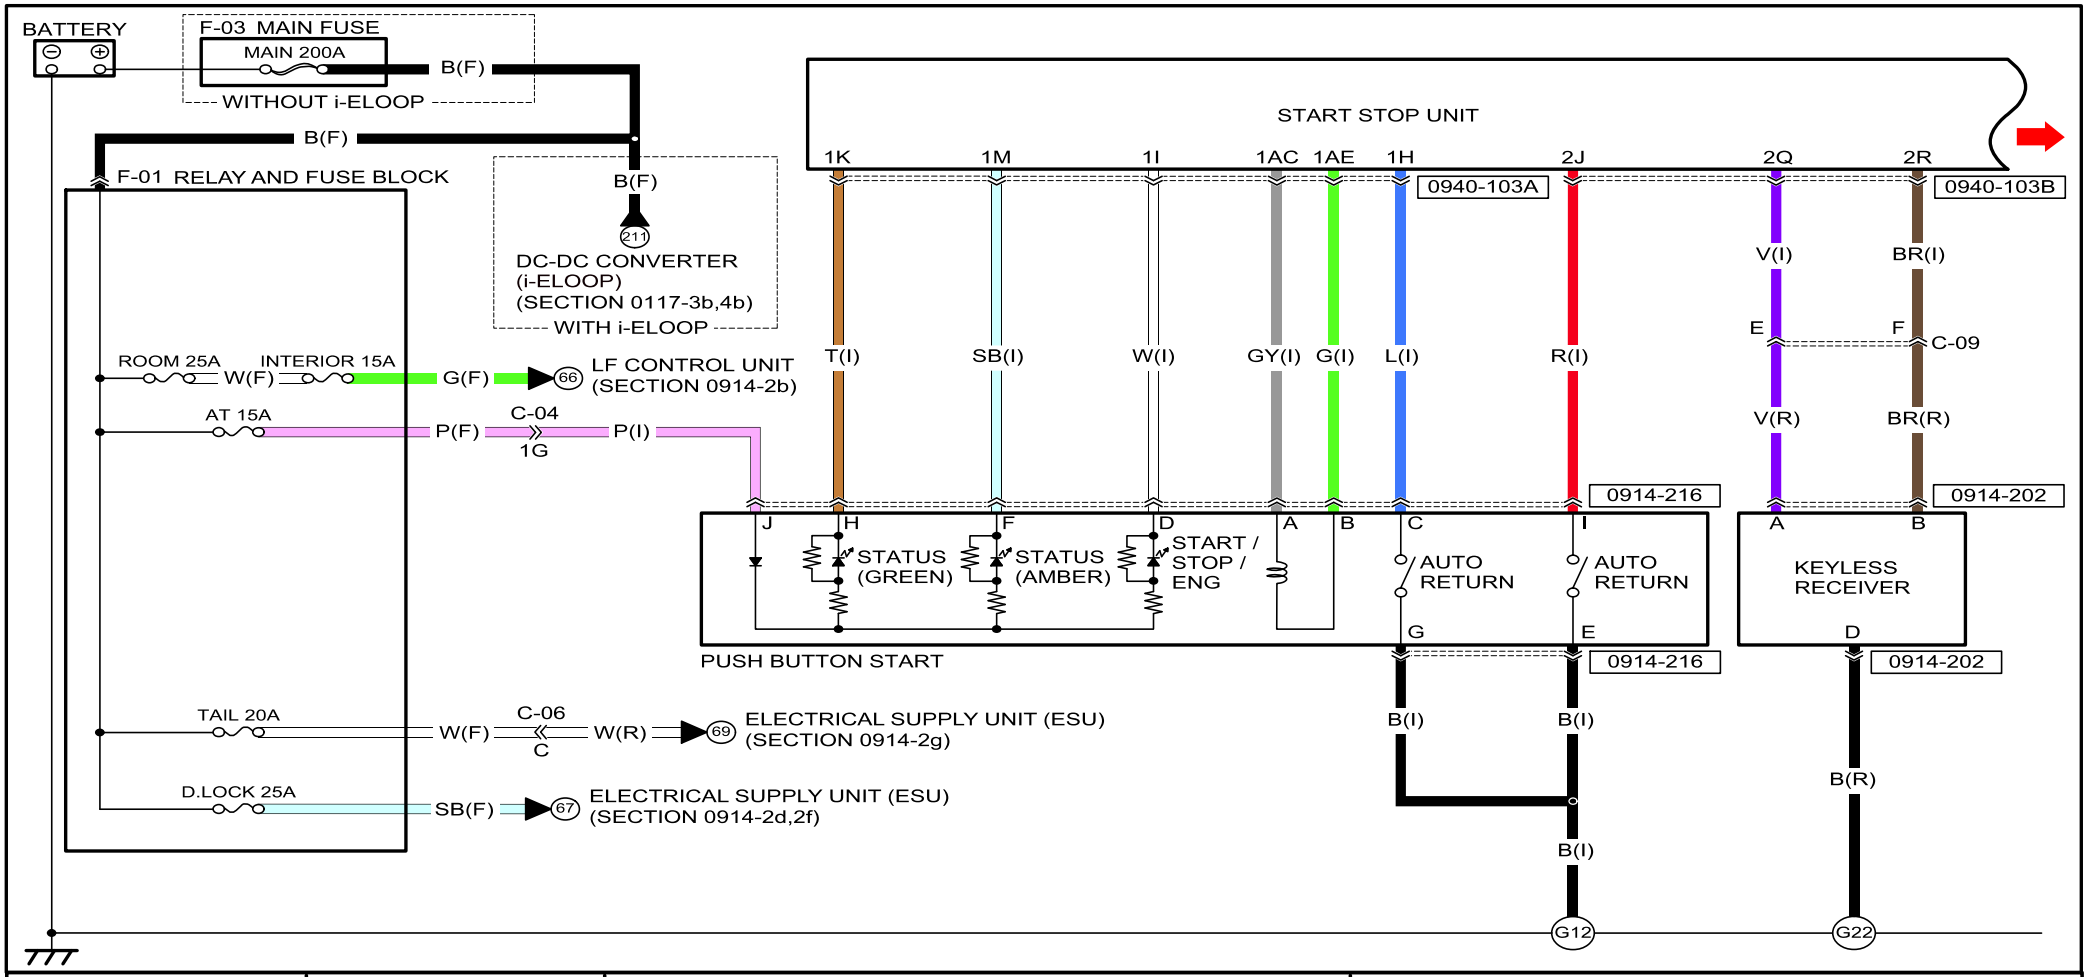


0914-202 KEYLESS RECEIVER




0914-216 PUSH BUTTON START

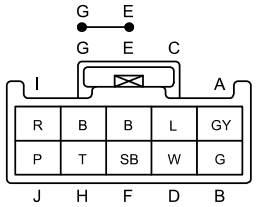


0940-103A START STOP UNIT

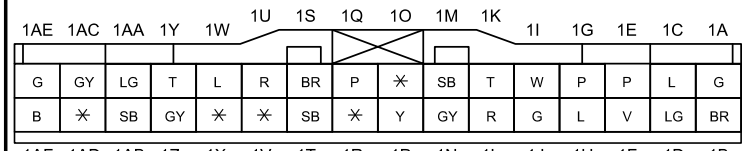



0940-103B START STOP UNIT

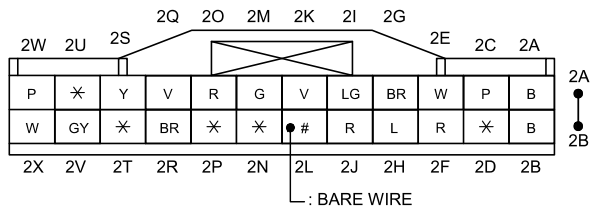


Refer to 00F section for the FUSE BOX, 00C section for the PCM CONNECTOR and COMMON CONNECTOR LIST.

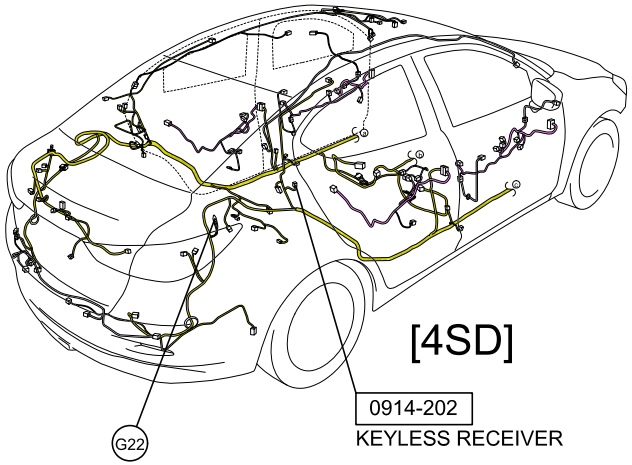


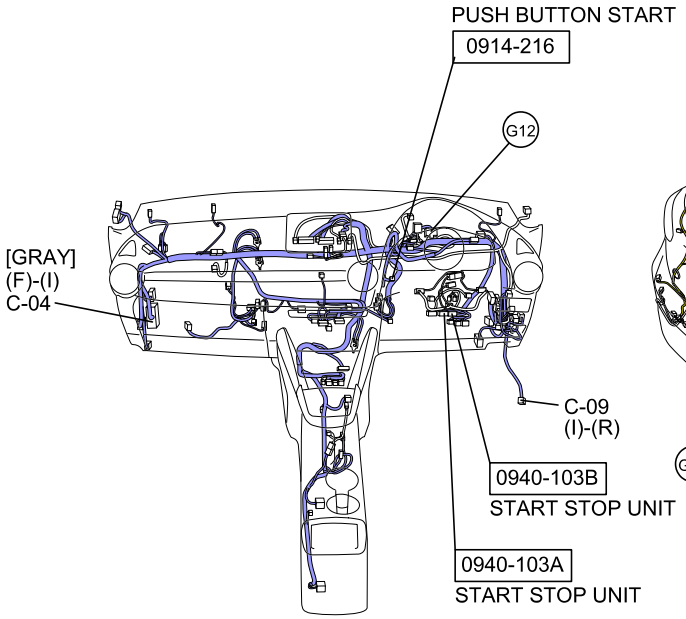

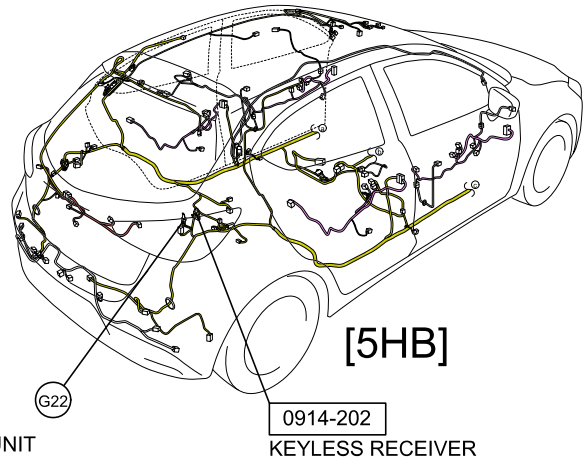


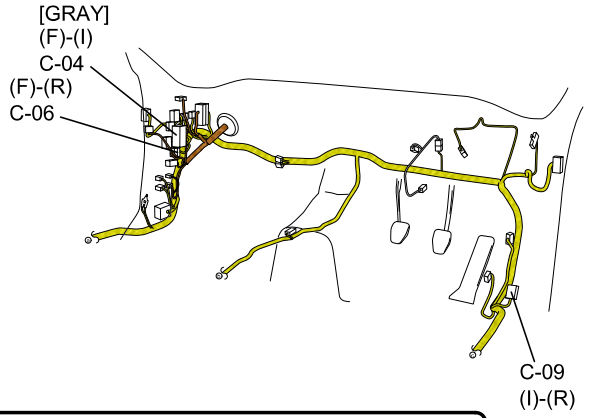

: FRONT HARNESS
: ENGINE HARNESS
ENGINE No.2 HARNESS
: REAR HARNESS
: REAR No.2 HARNESS
: INSTRUMENT PANEL HARNESS
: EMISSION HARNESS
: DOOR HARNESS
: INTERIOR LIGHT HARNESS
INTERIOR LIGHT No.2 HARNESS

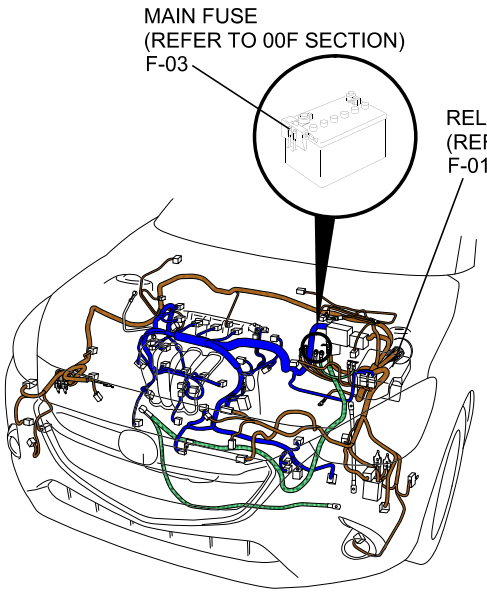

[SKYACTIV-G 1.3, 1.5]

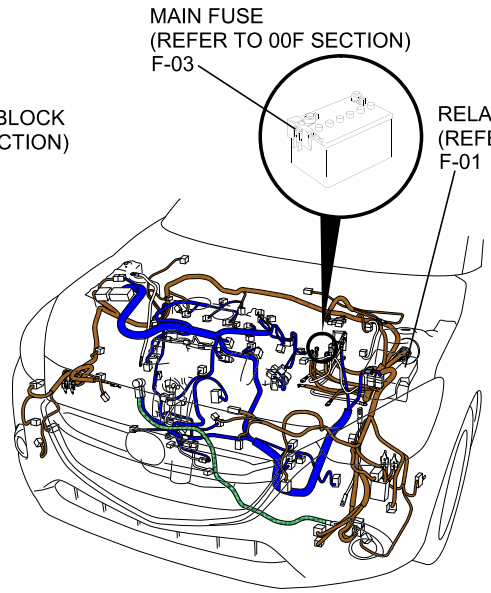

[SKYACTIV-D 1.5]