


0914-2e

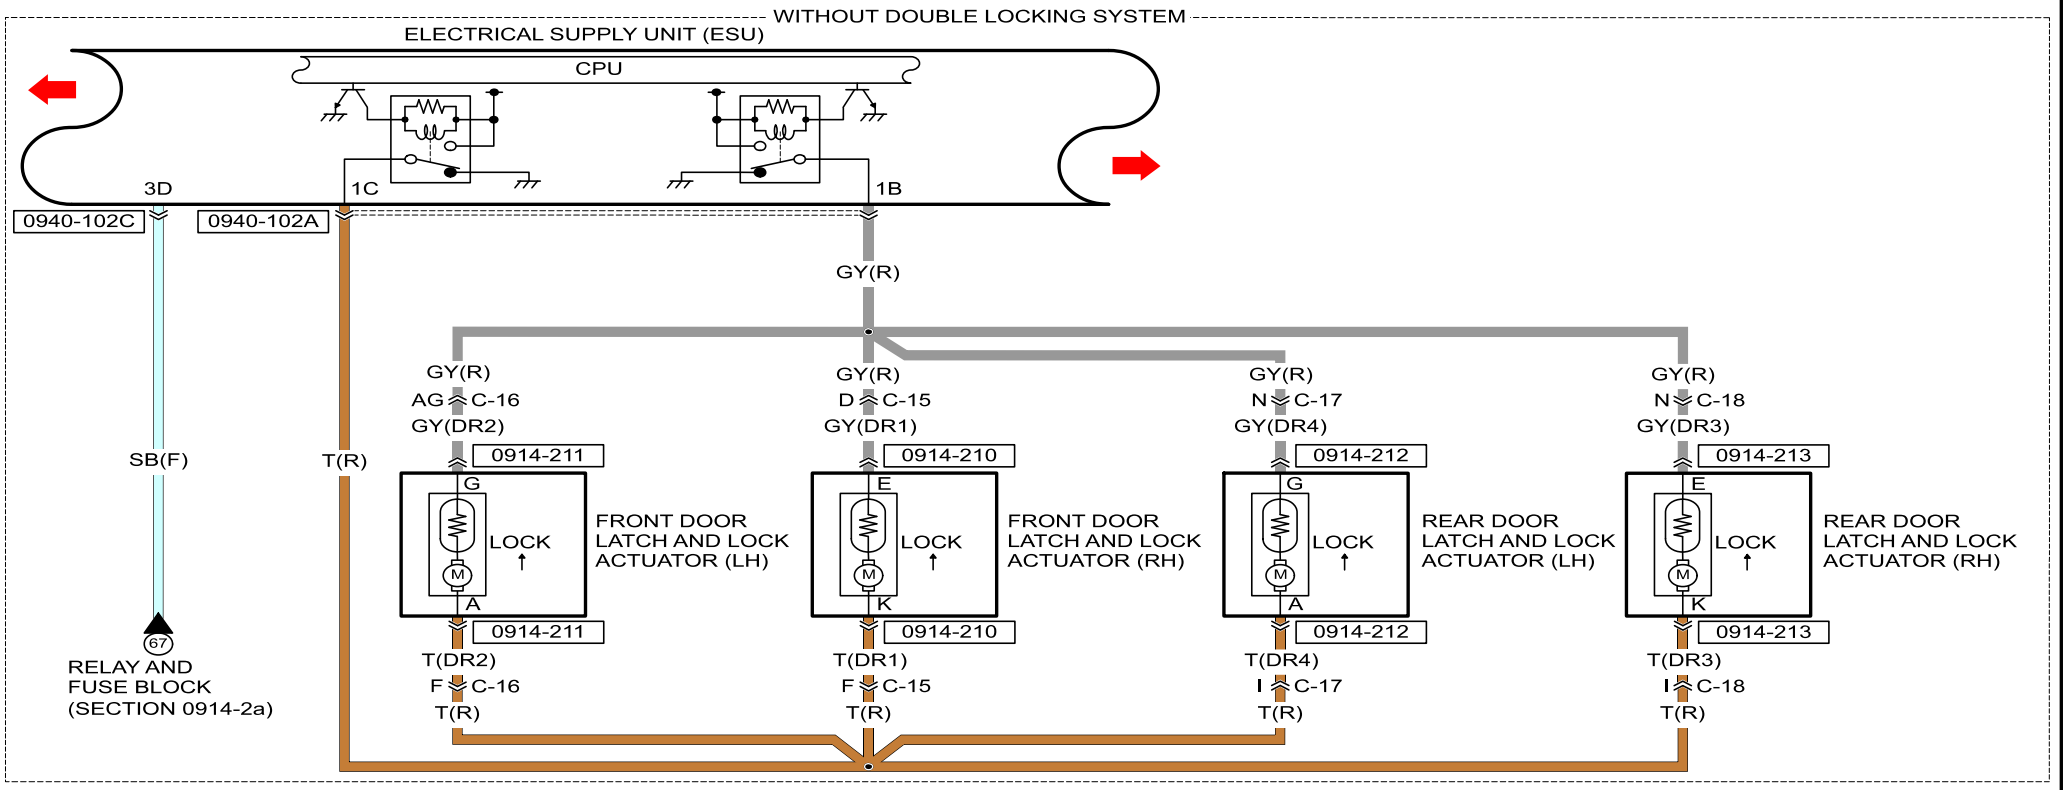


0914-210
FRONT DOOR LATCH AND LOCK ACTUATOR (RH)

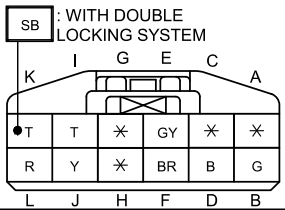


0914-211
FRONT DOOR LATCH AND LOCK ACTUATOR (LH)

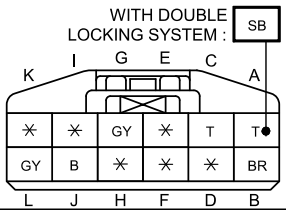


0914-212
REAR DOOR LATCH AND LOCK ACTUATOR (LH)

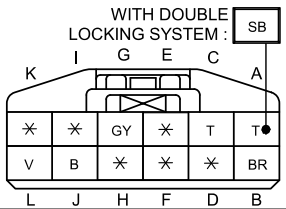


0914-213
REAR DOOR LATCH AND LOCK ACTUATOR (RH)

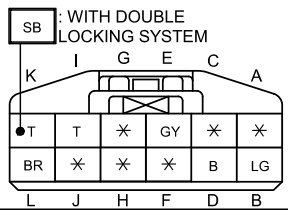


0940-102A
ELECTRICAL SUPPLY UNIT (ESU)

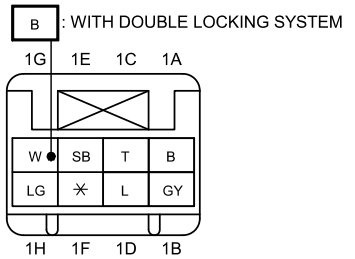

0940-102C
ELECTRICAL SUPPLY UNIT (ESU)

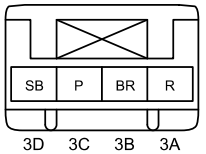

Refer to 00F section for the FUSE BOX, 00C section for the PCM CONNECTOR and COMMON CONNECTOR LIST.

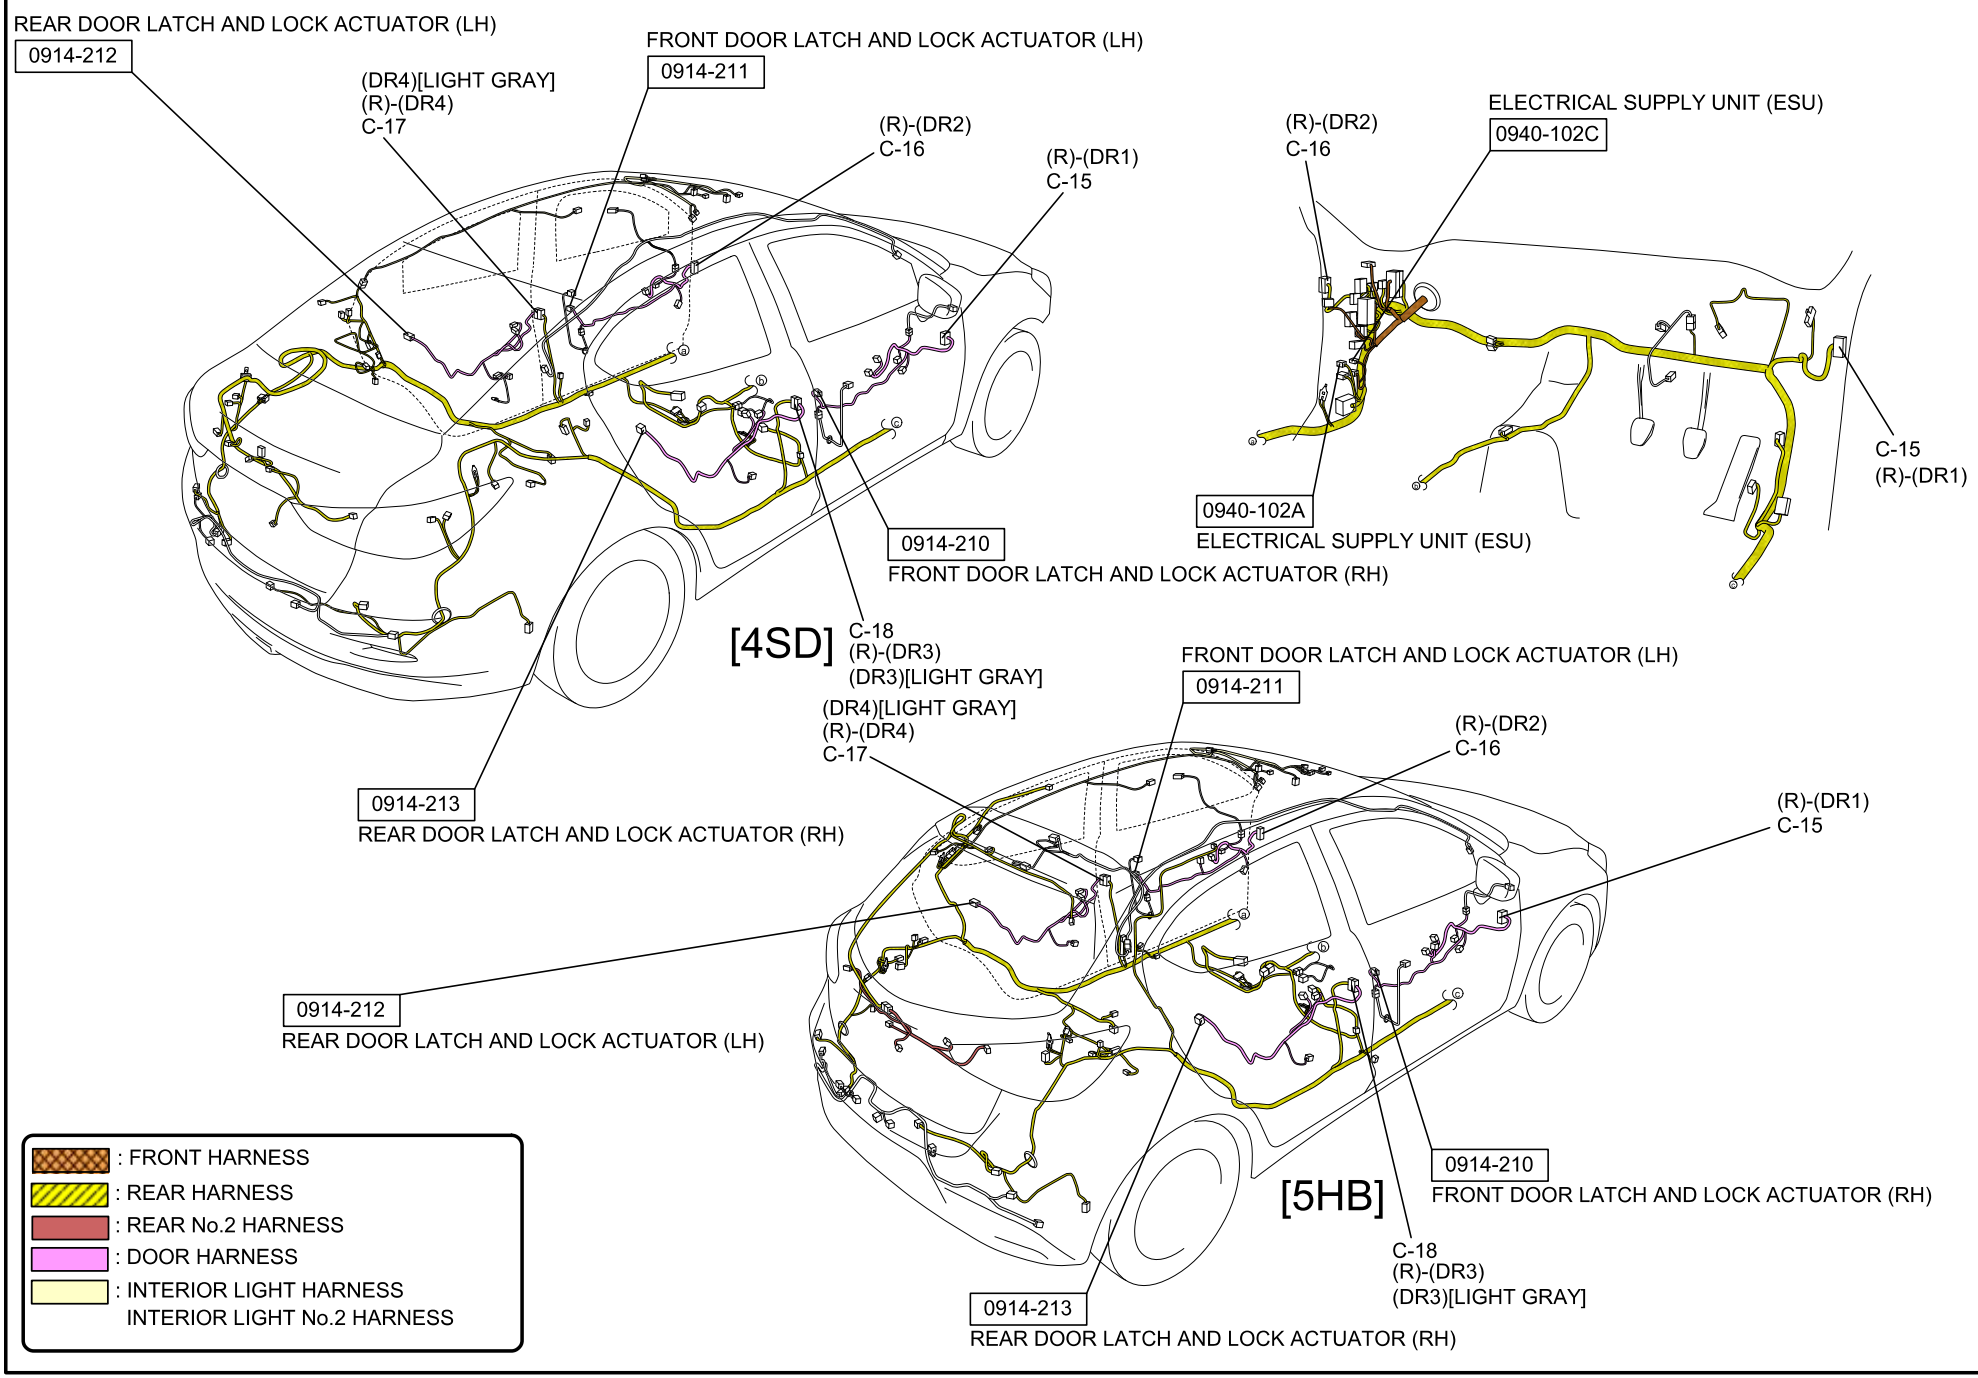
REAR DOOR LATCH AND LOCK ACTUATOR (LH)
0914-212
FRONT DOOR LATCH AND LOCK ACTUATOR (LH)
0914-211
(DR4)[LIGHT GRAY]
(R)-(DR4)
C-17
(R)-(DR2)
C-16
(R)-(DR1)
C-15
ELECTRICAL SUPPLY UNIT (ESU)
0940-102C
(R)-(DR2)
C-16
C-15
(R)-(DR1)
0940-102A
ELECTRICAL SUPPLY UNIT (ESU)
0914-210
FRONT DOOR LATCH AND LOCK ACTUATOR (RH)
[4SD]
C-18
(R)-(DR3)
(DR3)[LIGHT GRAY]
0914-213
REAR DOOR LATCH AND LOCK ACTUATOR (RH)
FRONT DOOR LATCH AND LOCK ACTUATOR (LH)
0914-211
(DR4)[LIGHT GRAY]
(R)-(DR4)
C-17
(R)-(DR2)
C-16
(R)-(DR1)
C-15
0914-212
REAR DOOR LATCH AND LOCK ACTUATOR (LH)
[5HB]
0914-210
FRONT DOOR LATCH AND LOCK ACTUATOR (RH)
C-18
(R)-(DR3)
(DR3)[LIGHT GRAY]
0914-213
REAR DOOR LATCH AND LOCK ACTUATOR (RH)
: FRONT HARNESS
: REAR HARNESS
: REAR No.2 HARNESS
: DOOR HARNESS
: INTERIOR LIGHT HARNESS
INTERIOR LIGHT No.2 HARNESS