




0918-504
LIGHT SWITCH / FOG LIGHT SWITCH / TURN SWITCH

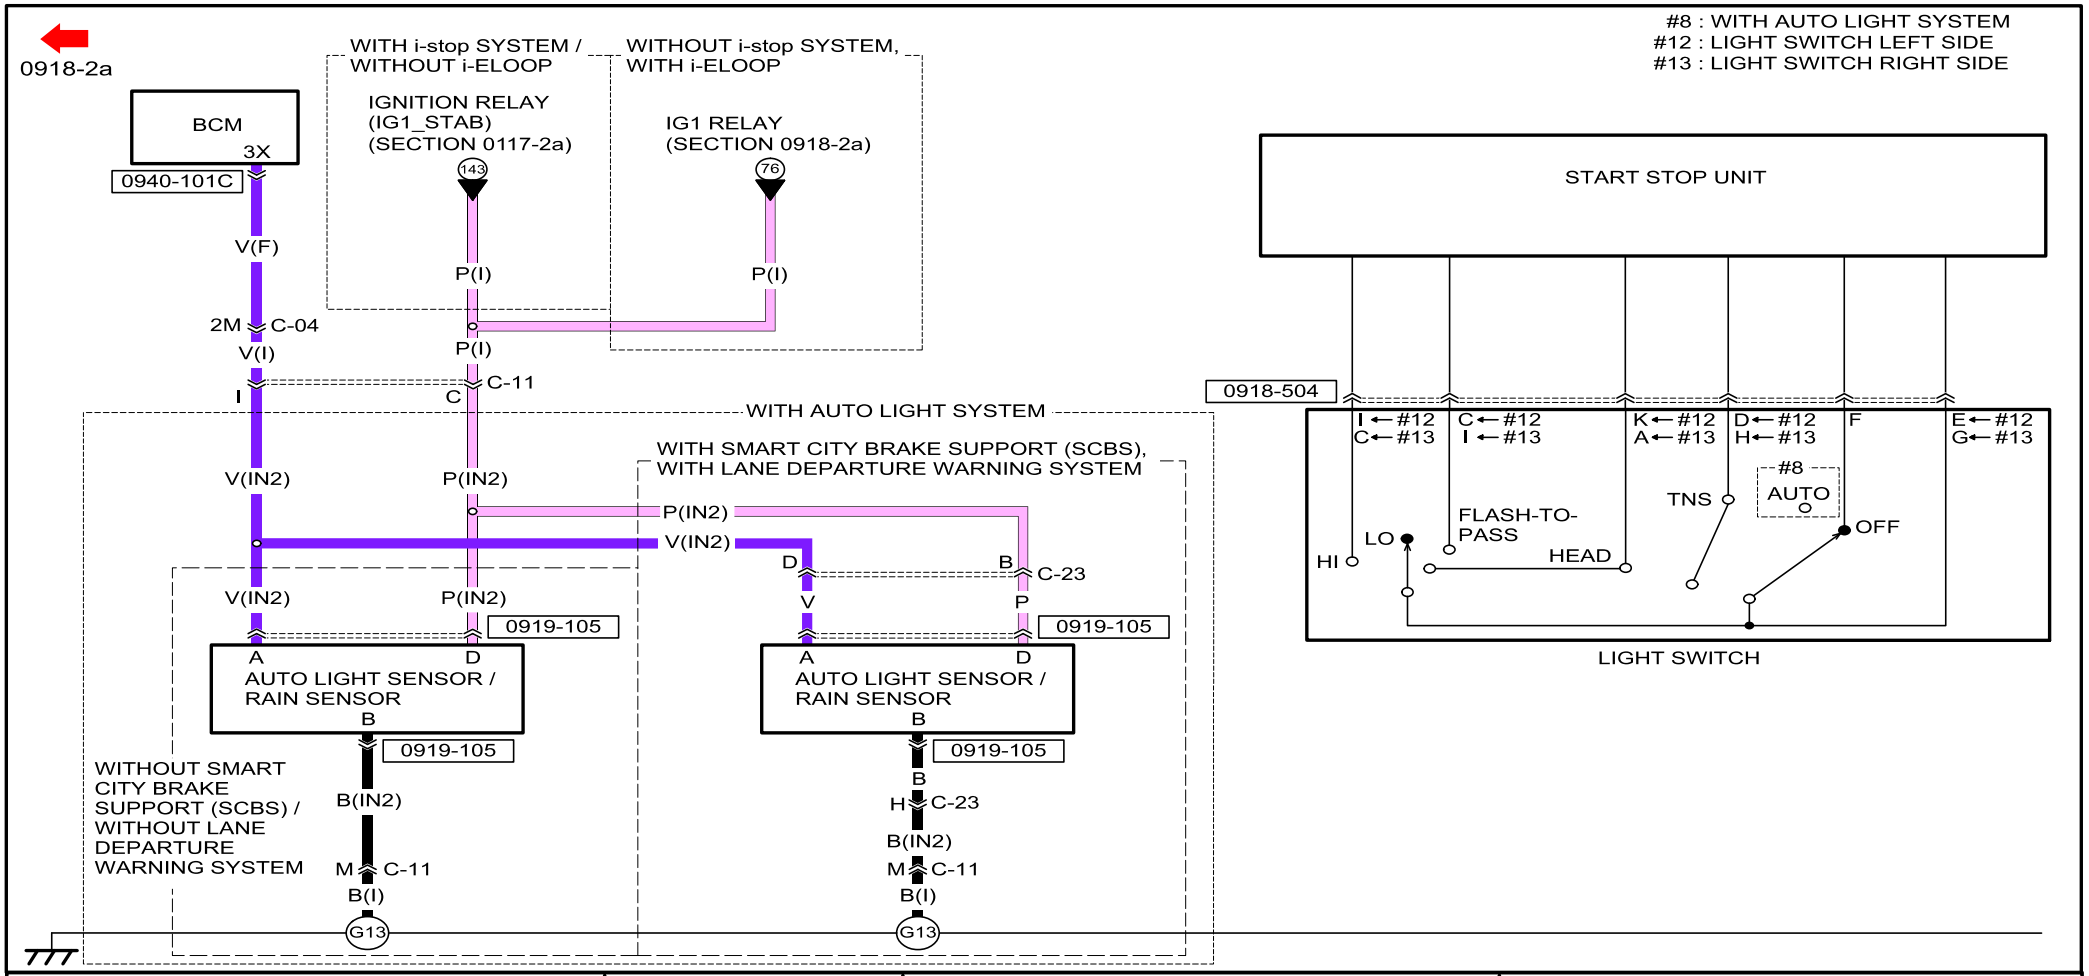


0919-105
AUTO LIGHT SENSOR / RAIN SENSOR





0940-101C
BCM

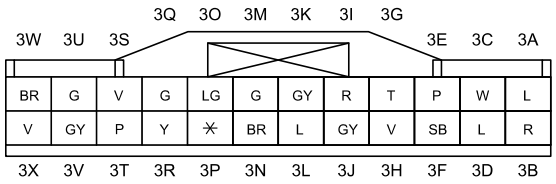


Refer to 00F section for the FUSE BOX, 00C section for the PCM CONNECTOR and COMMON CONNECTOR LIST.

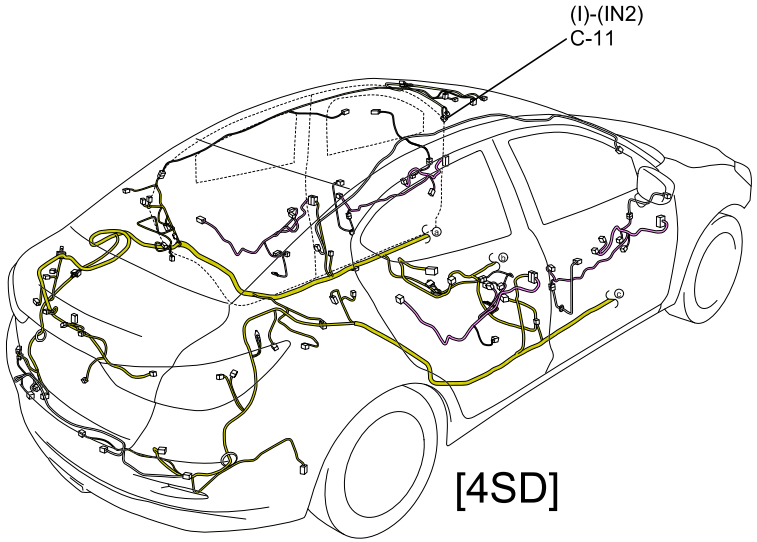

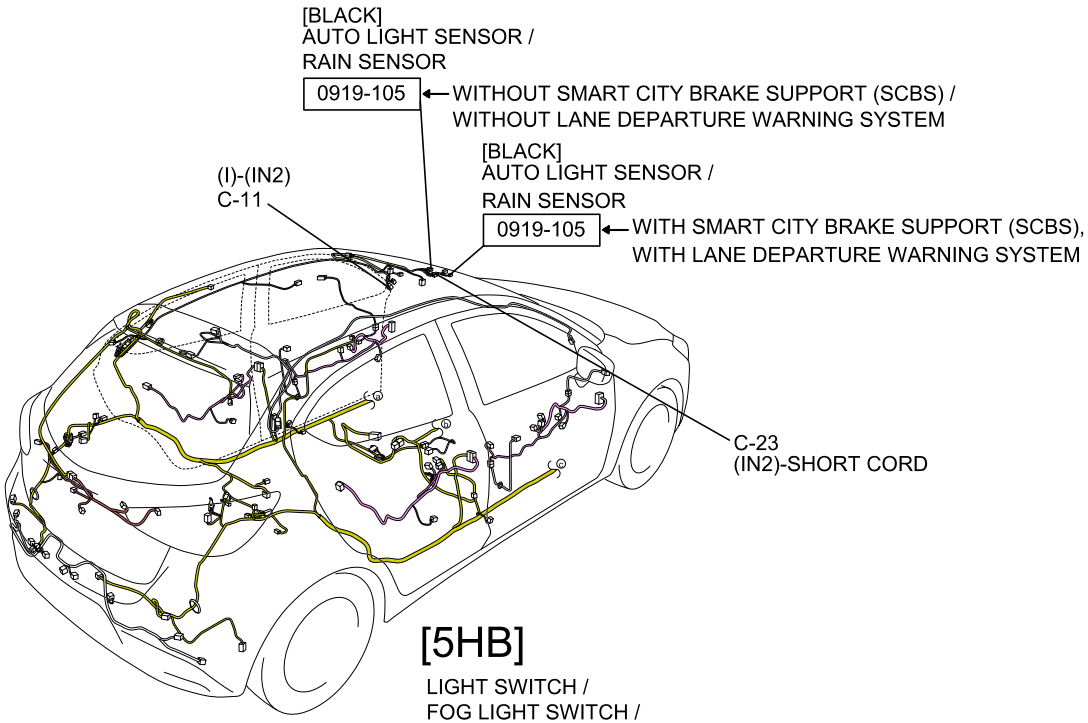

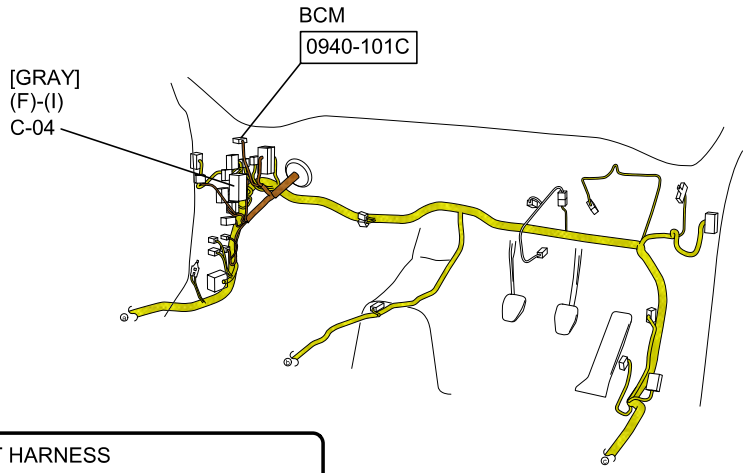

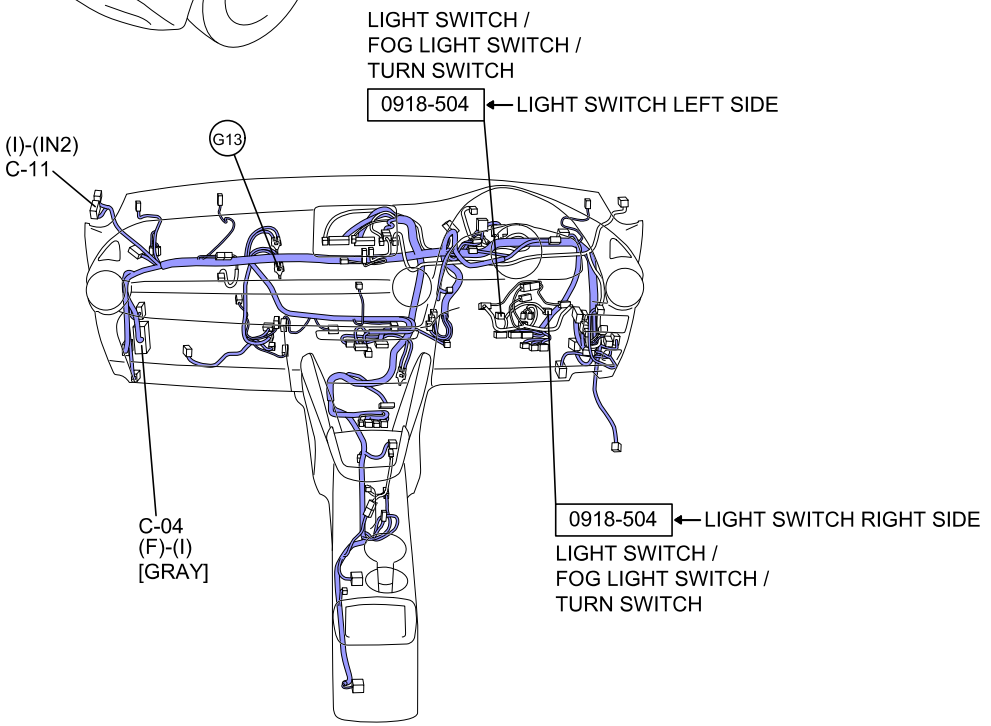

: FRONT HARNESS
: REAR HARNESS
: REAR No.2 HARNESS
: INSTRUMENT PANEL HARNESS
: DOOR HARNESS
: INTERIOR LIGHT HARNESS
INTERIOR LIGHT No.2 HARNESS