

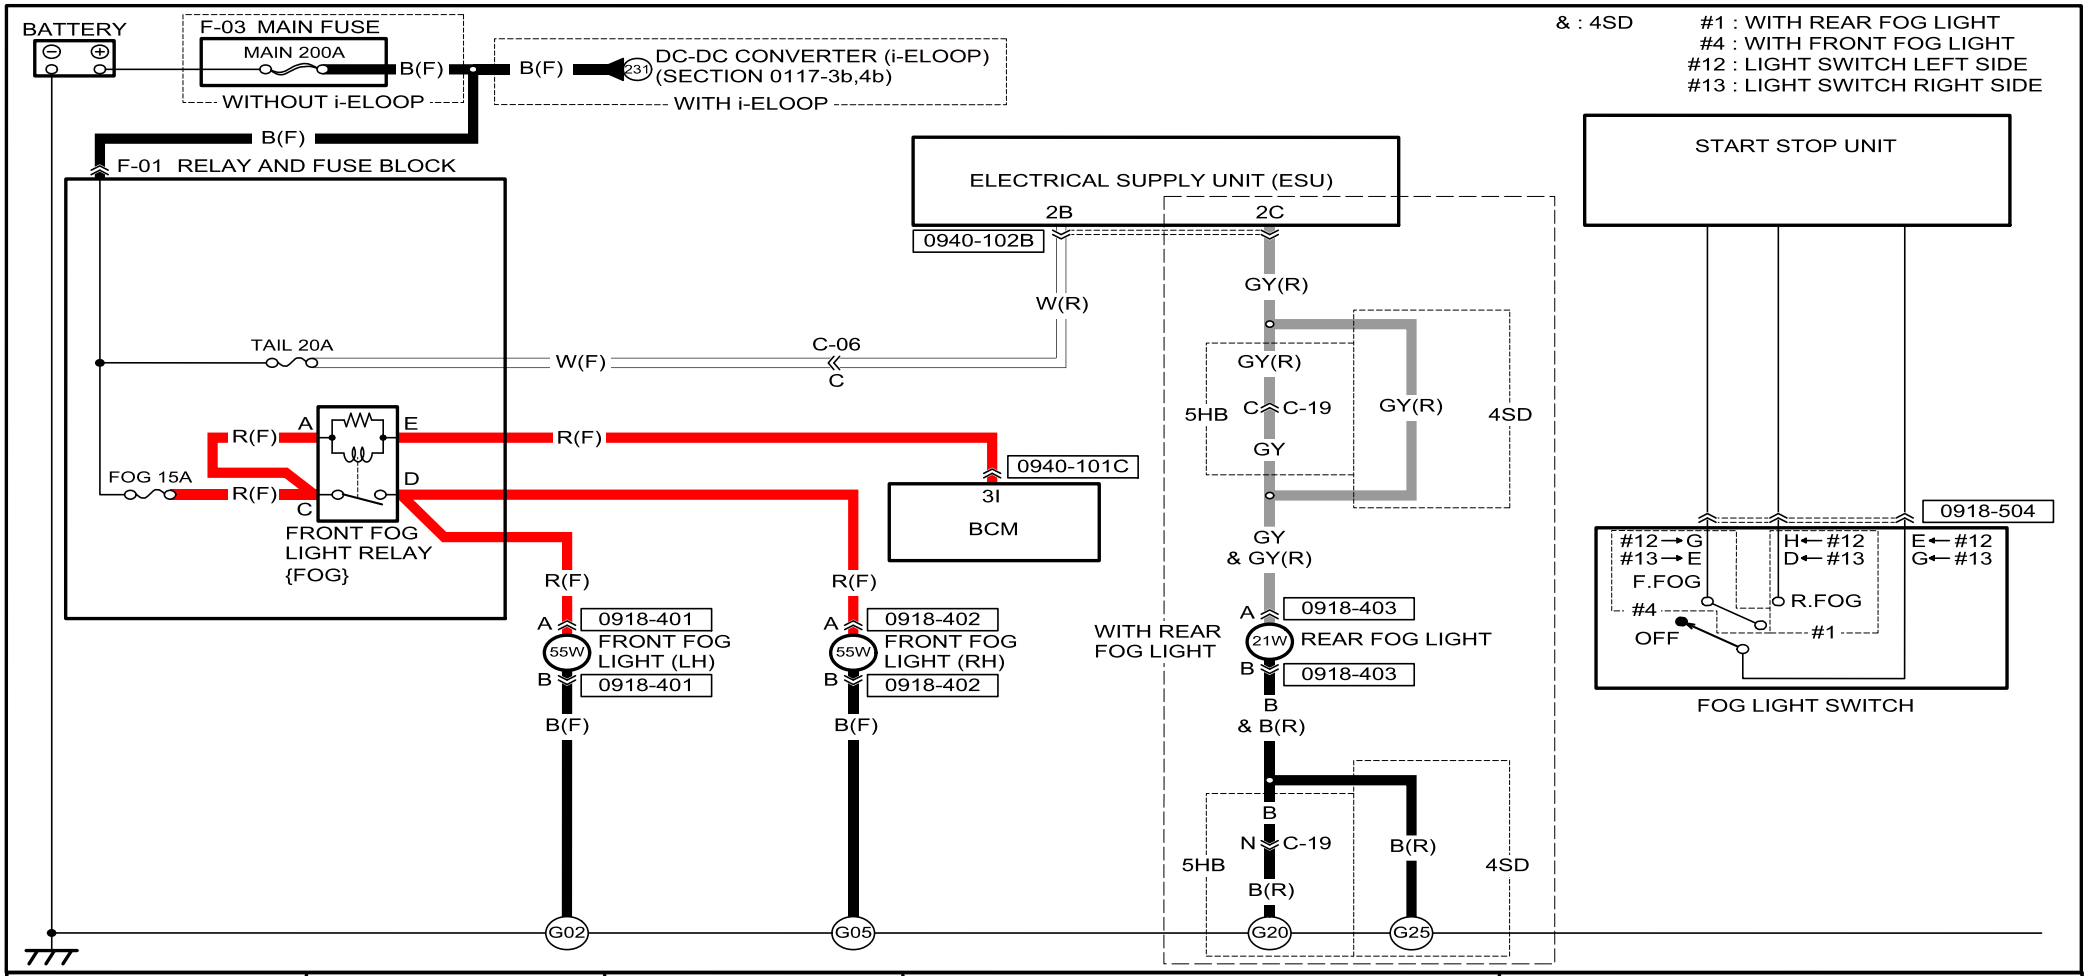



0918-401
FRONT FOG LIGHT (LH)



0918-402
FRONT FOG LIGHT (RH)



0918-403
REAR FOG LIGHT




0918-504
LIGHT SWITCH /
FOG LIGHT SWITCH /
TURN SWITCH

K	J	I	H	G	F	E	D	C	B	A


0940-101C
BCM

	3Q	3O	3M	3K	3I	3G						
3W	3U	3S								3E	3C	3A
BR	G	V	G	LG	G	GY	R	T	P	W	L	
V	GY	P	Y		BR	L	GY	V	SB	L	R	
3X	3V	3T	3R	3P	3N	3L	3J	3H	3F	3D	3B	

0940-102B
ELECTRICAL SUPPLY UNIT (ESU)

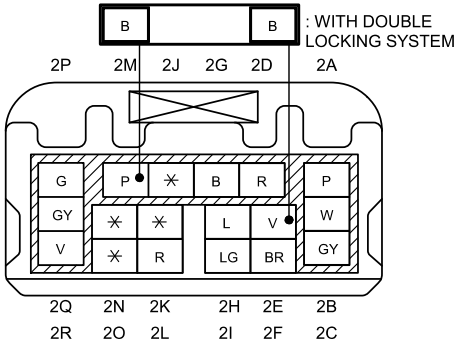


Refer to 00F section for the FUSE BOX, 00C section for the PCM CONNECTOR and COMMON CONNECTOR LIST.

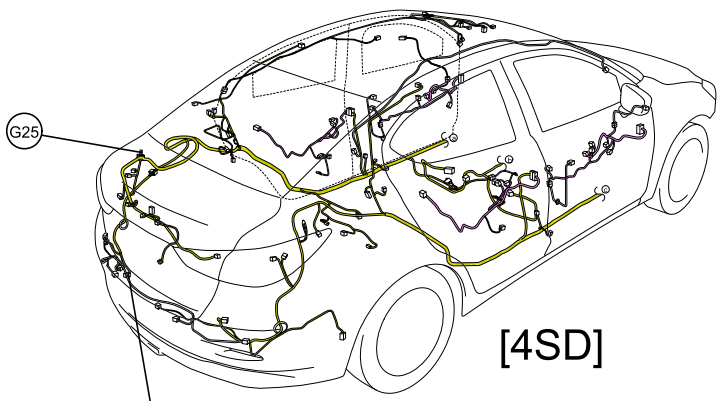


0918-403
REAR FOG LIGHT
[BLACK]

LIGHT SWITCH /
FOG LIGHT SWITCH /
TURN SWITCH

0918-504 ← LIGHT SWITCH LEFT SIDE

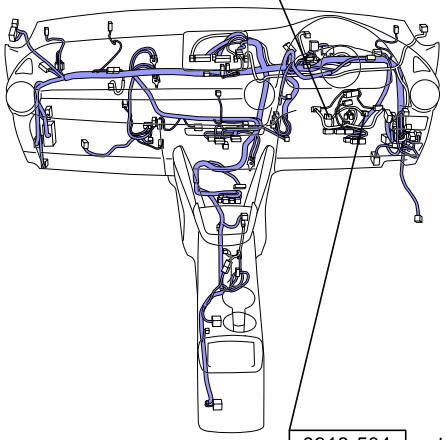

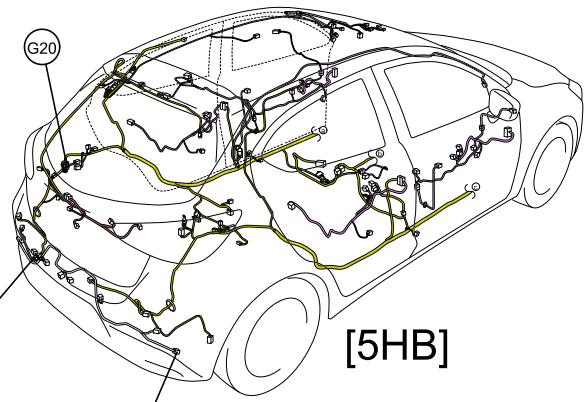

C-19
(R)-SHORT CORD
[LIGHT GRAY]


0918-403
REAR FOG LIGHT
[BLACK]

0918-504 ← LIGHT SWITCH RIGHT SIDE

LIGHT SWITCH /
FOG LIGHT SWITCH /
TURN SWITCH

BCM
0940-101C


(F)-(R)
C-06

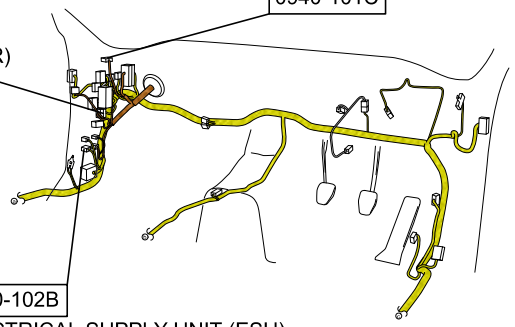

0940-102B
ELECTRICAL SUPPLY UNIT (ESU)

MAIN FUSE
(REFER TO 00F SECTION)
F-03

RELAY AND FUSE BLOCK
(REFER TO 00F SECTION)
F-01

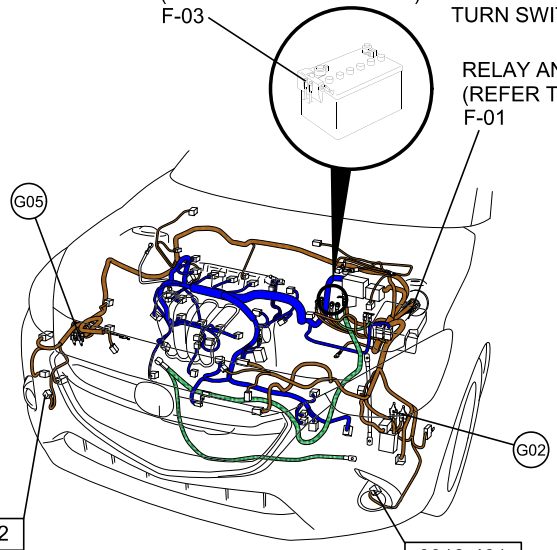


0918-402
FRONT FOG LIGHT (RH)

0918-401
FRONT FOG LIGHT (LH)

[SKYACTIV-G 1.3, 1.5]

MAIN FUSE
(REFER TO 00F SECTION)
F-03

RELAY AND FUSE BLOCK
(REFER TO 00F SECTION)
F-01

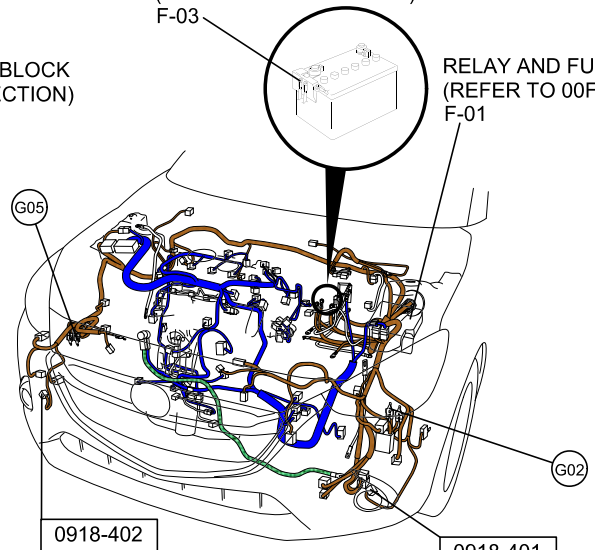

0918-402
FRONT FOG LIGHT (RH)

0918-401
FRONT FOG LIGHT (LH)

[SKYACTIV-D 1.5]

: FRONT HARNESS
: ENGINE HARNESS
ENGINE No.2 HARNESS
: REAR HARNESS
: REAR No.2 HARNESS
: INSTRUMENT PANEL HARNESS
: EMISSION HARNESS
: DOOR HARNESS
: INTERIOR LIGHT HARNESS
INTERIOR LIGHT No.2 HARNESS