


& : 4SD

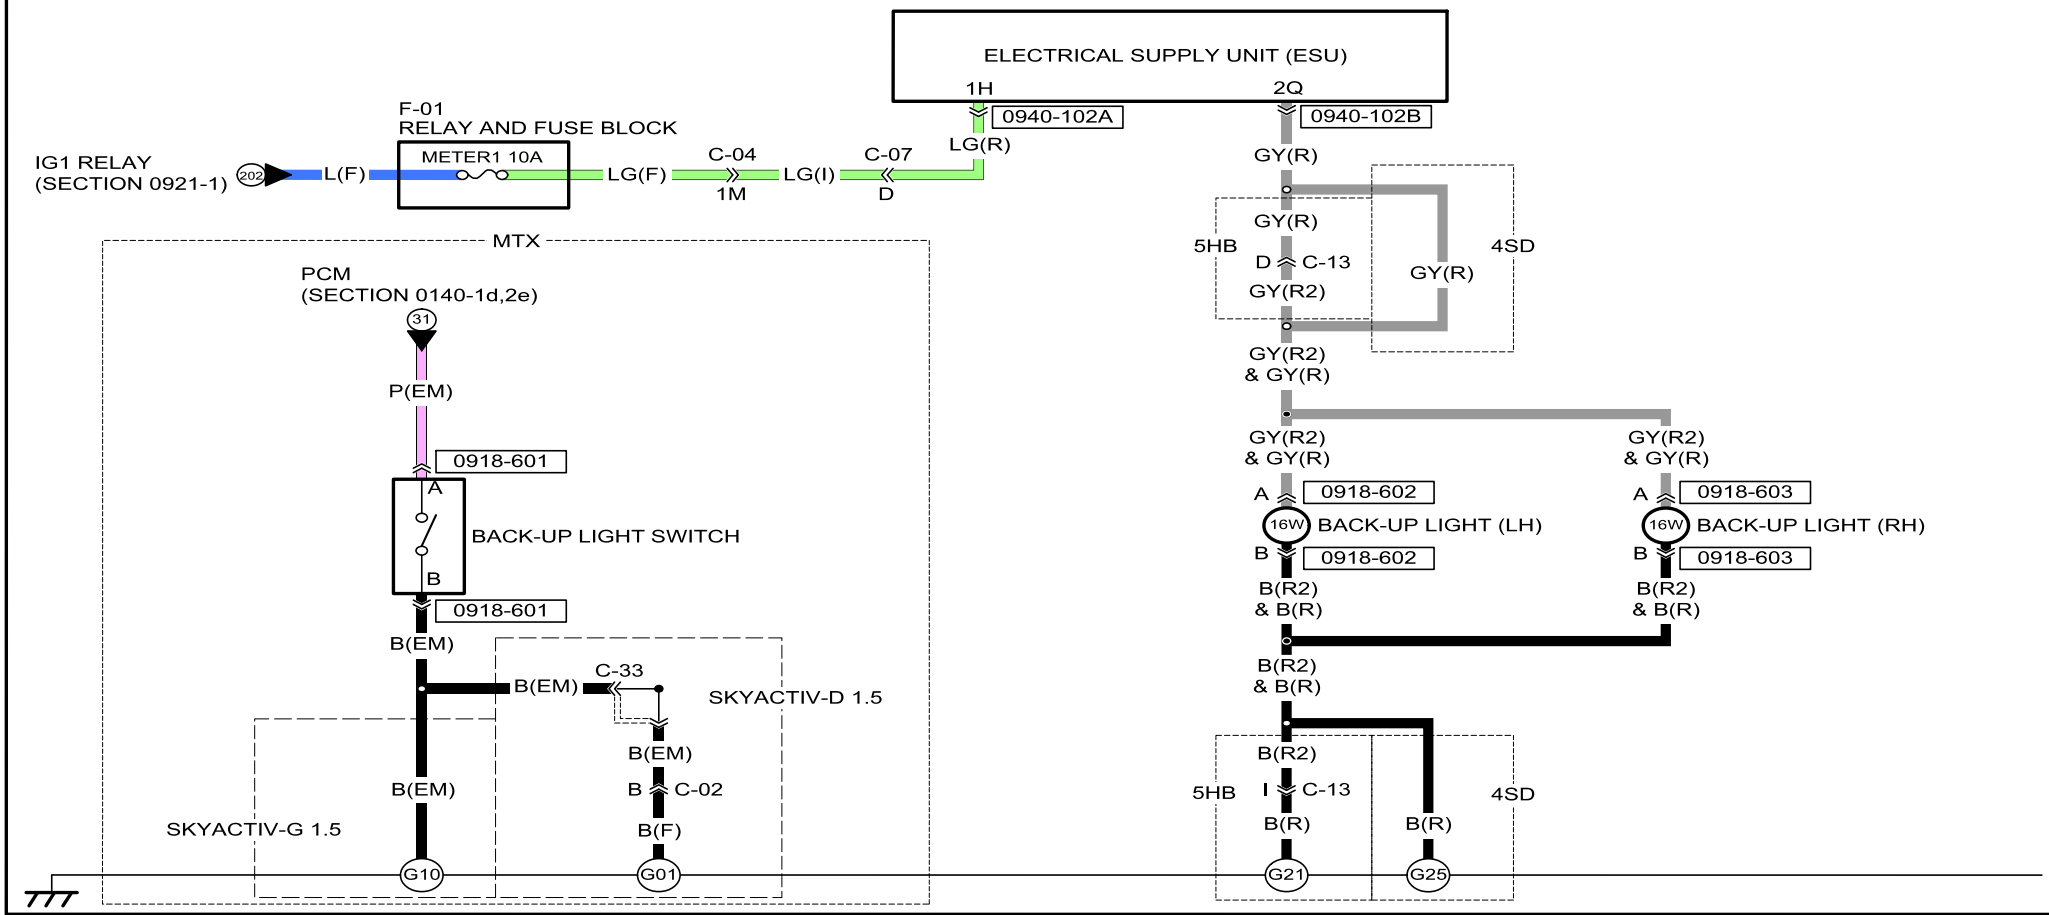


0918-601
BACK-UP LIGHT SWITCH




0918-602
BACK-UP LIGHT (LH)




0918-603
BACK-UP LIGHT (RH)




0940-102A
ELECTRICAL SUPPLY UNIT (ESU)

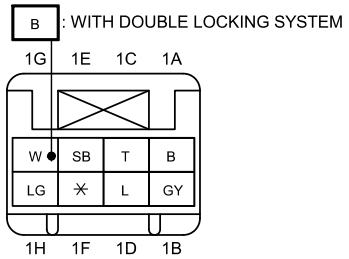

0940-102B
ELECTRICAL SUPPLY UNIT (ESU)

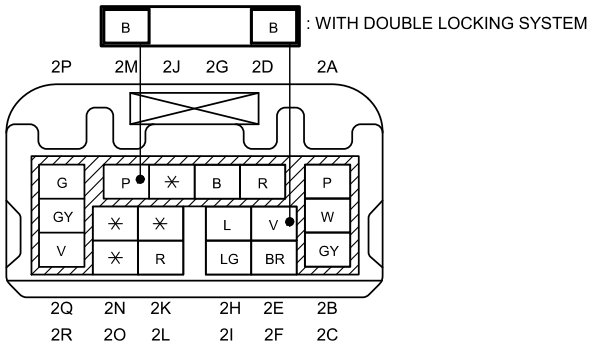

Refer to 00F section for the FUSE BOX, 00C section for the PCM CONNECTOR and COMMON CONNECTOR LIST.

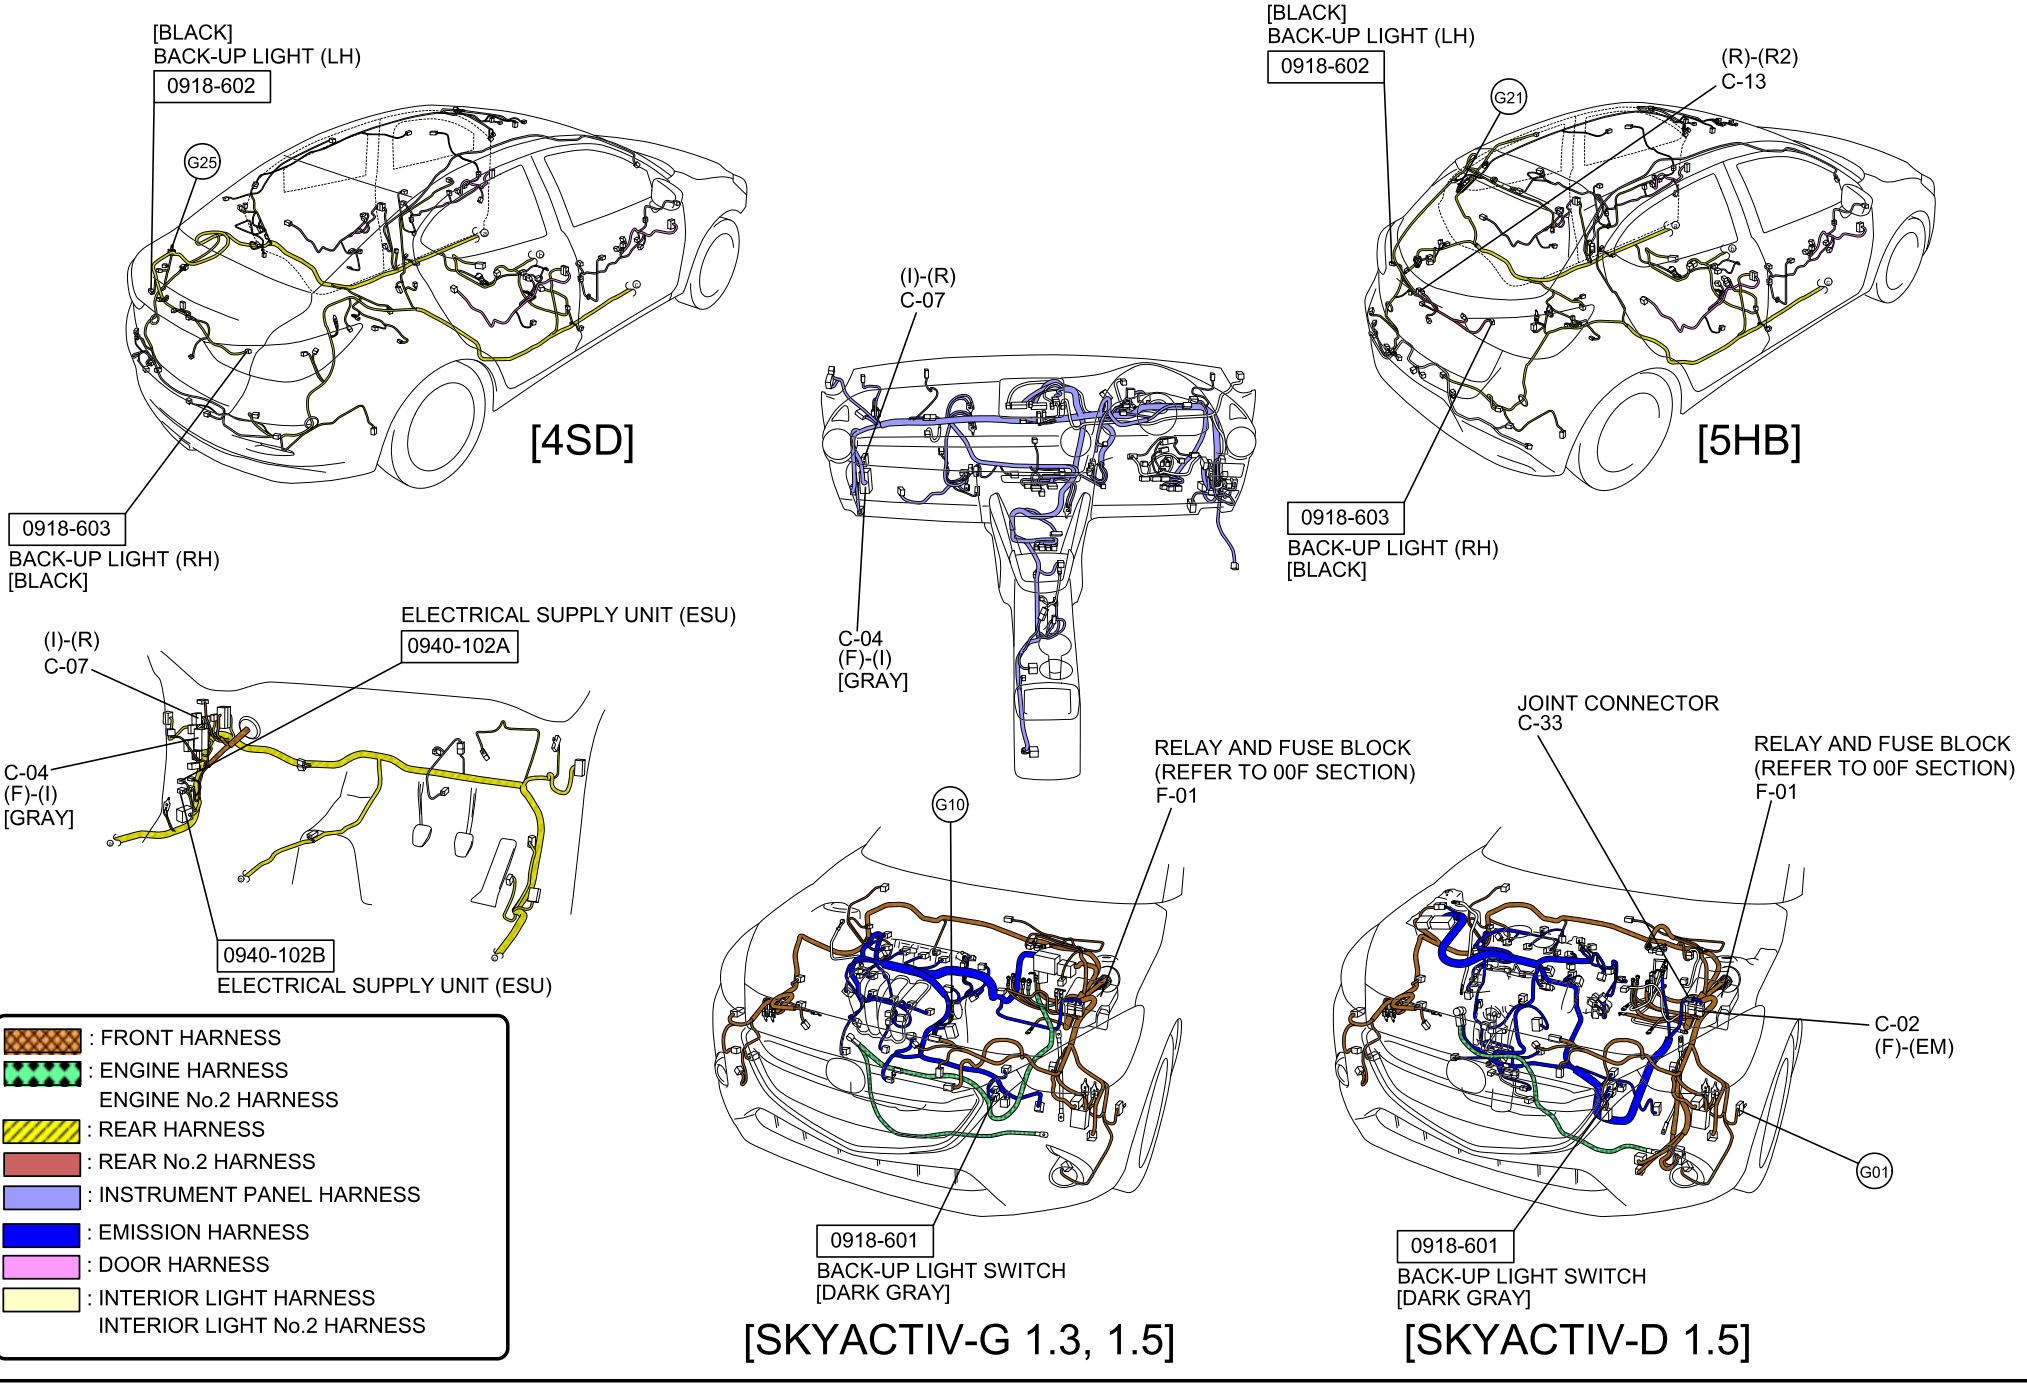
[BLACK]
BACK-UP LIGHT (LH)
0918-602
G25
[4SD]
0918-603
BACK-UP LIGHT (RH)
[BLACK]
(I)-(R)
C-07
C-04
(F)-(I)
[GRAY]
[BLACK]
BACK-UP LIGHT (LH)
0918-602
(R)-(R2)
C-13
G21
[5HB]
0918-603
BACK-UP LIGHT (RH)
[BLACK]
ELECTRICAL SUPPLY UNIT (ESU)
0940-102A
(I)-(R)
C-07
C-04
(F)-(I)
[GRAY]
0940-102B
ELECTRICAL SUPPLY UNIT (ESU)
RELAY AND FUSE BLOCK
(REFER TO 00F SECTION)
F-01
G10
0918-601
BACK-UP LIGHT SWITCH
[DARK GRAY]
[SKYACTIV-G 1.3, 1.5]
JOINT CONNECTOR
C-33
RELAY AND FUSE BLOCK
(REFER TO 00F SECTION)
F-01
C-02
(F)-(EM)
G01
0918-601
BACK-UP LIGHT SWITCH
[DARK GRAY]
[SKYACTIV-D 1.5]
: FRONT HARNESS
: ENGINE HARNESS
ENGINE No.2 HARNESS
: REAR HARNESS
: REAR No.2 HARNESS
: INSTRUMENT PANEL HARNESS
: EMISSION HARNESS
: DOOR HARNESS
: INTERIOR LIGHT HARNESS
INTERIOR LIGHT No.2 HARNESS