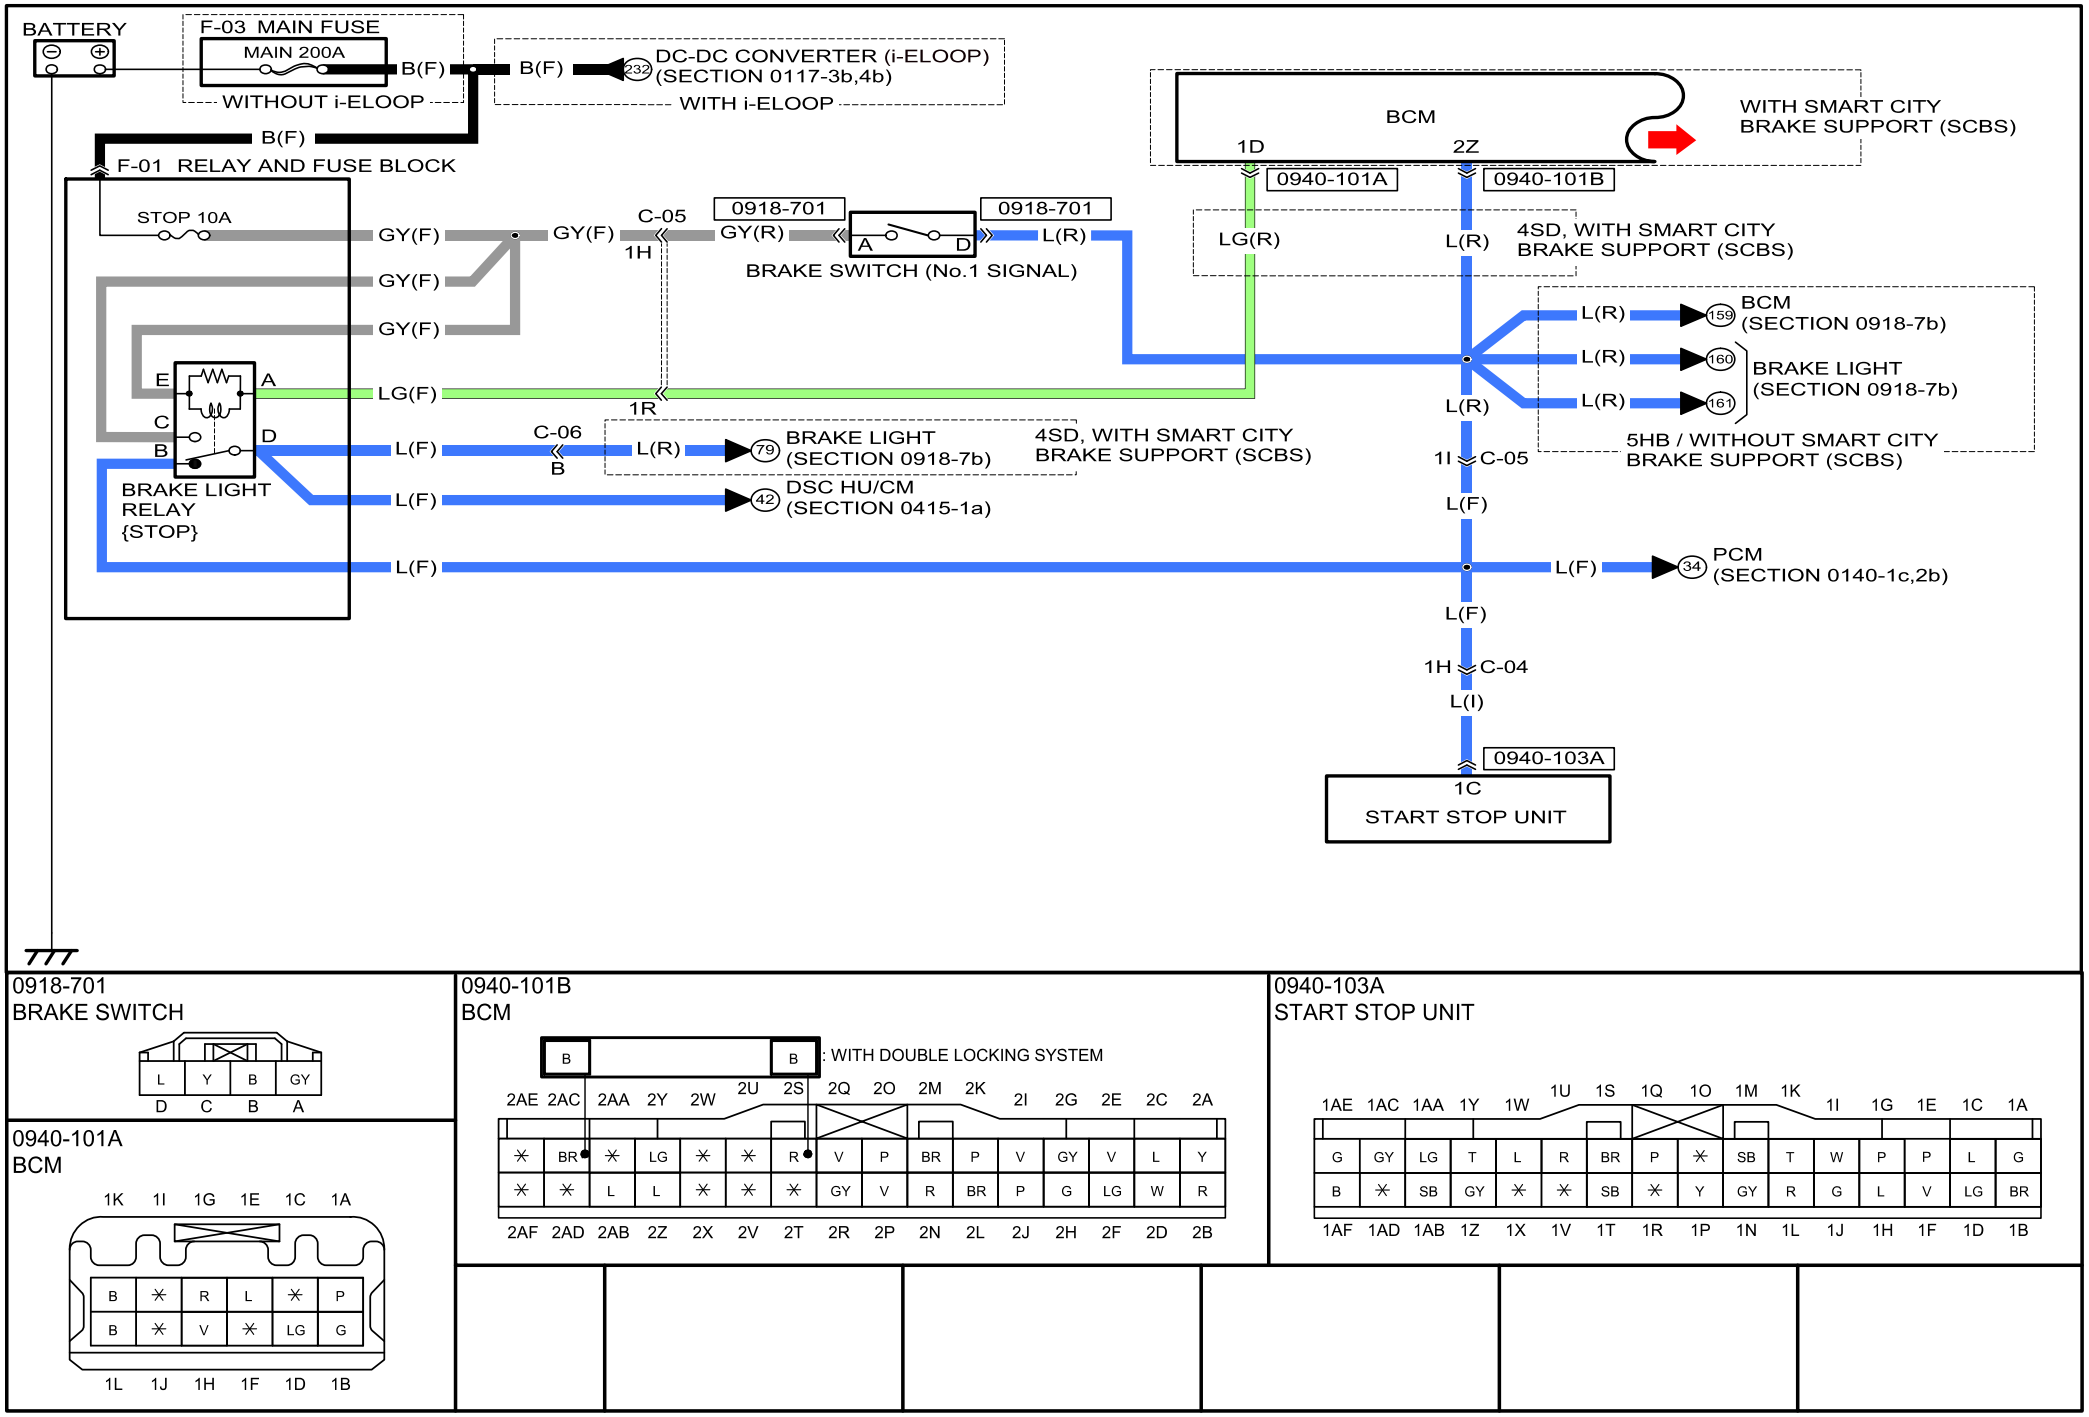



0918-701
BRAKE SWITCH

0940-101A
BCM


0940-101B
BCM

0940-103A
START STOP UNIT


Refer to 00F section for the FUSE BOX, 00C section for the PCM CONNECTOR and COMMON CONNECTOR LIST.

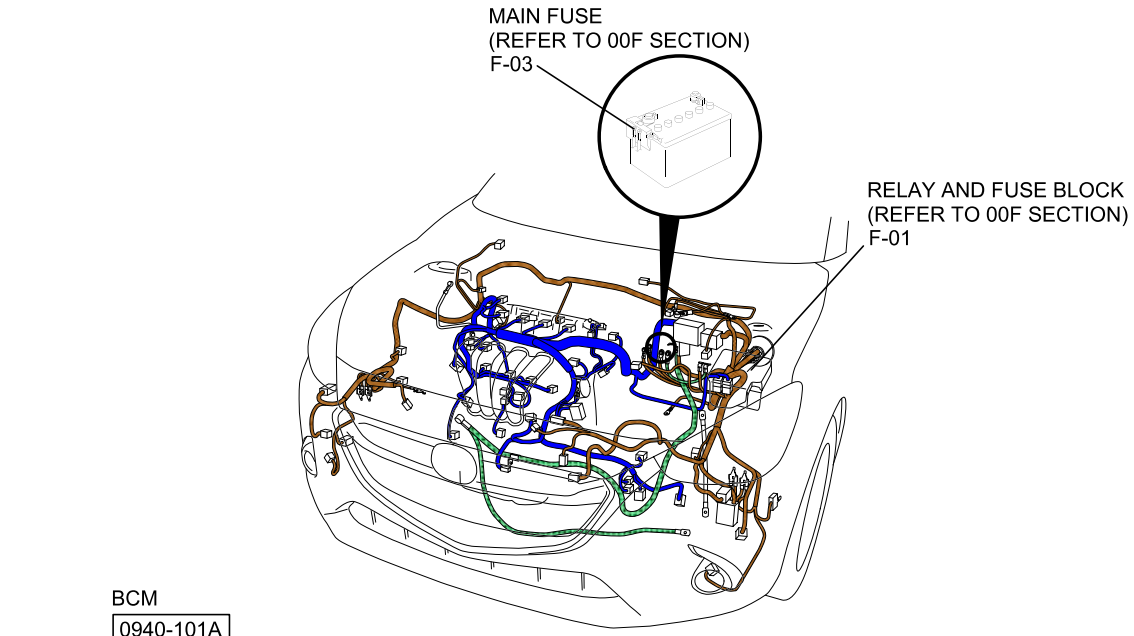


[SKYACTIV-G 1.3, 1.5]

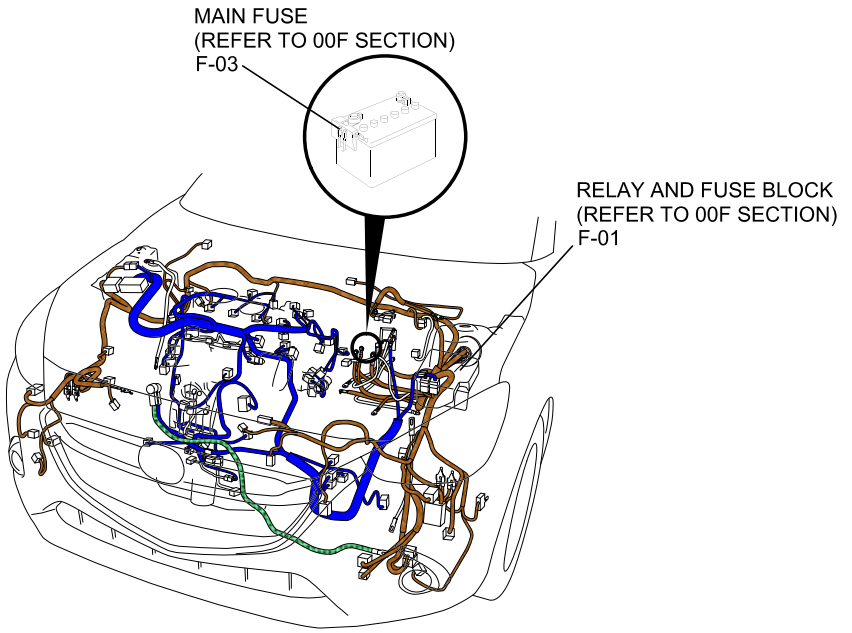

[SKYACTIV-D 1.5]

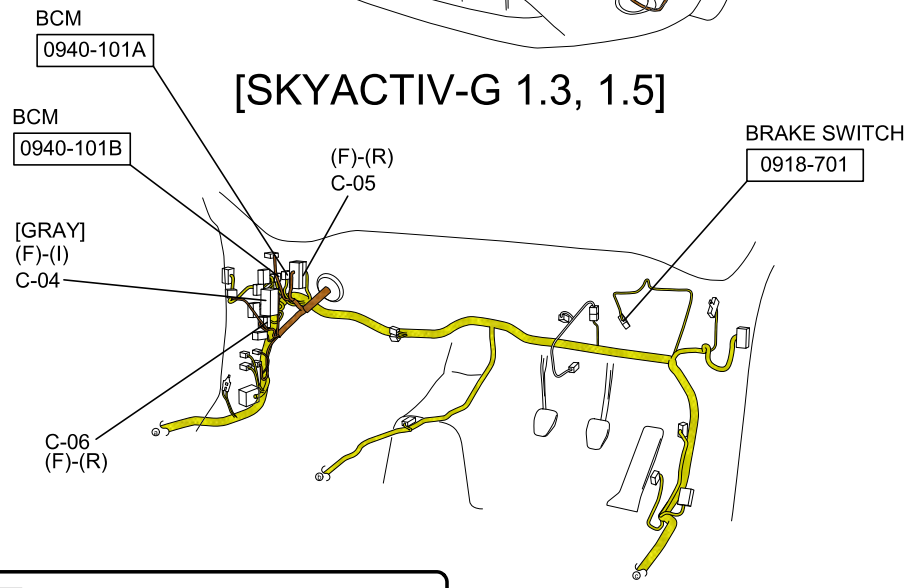

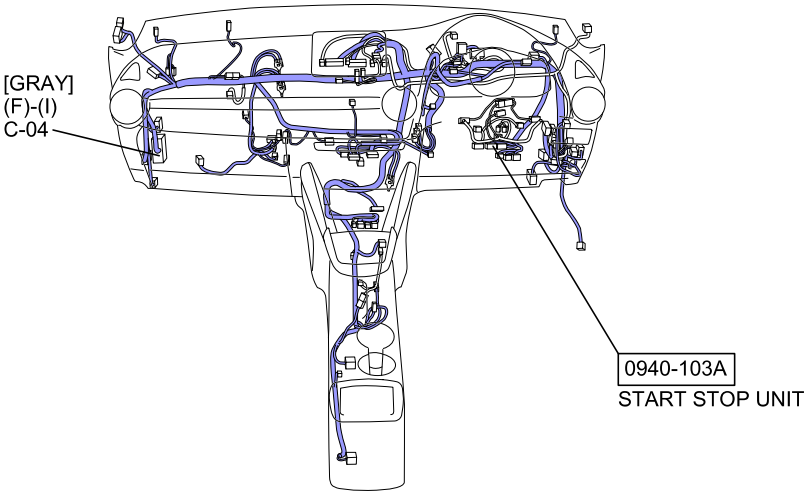

: FRONT HARNESS
: ENGINE HARNESS
ENGINE No.2 HARNESS
: REAR HARNESS
: INSTRUMENT PANEL HARNESS
: EMISSION HARNESS