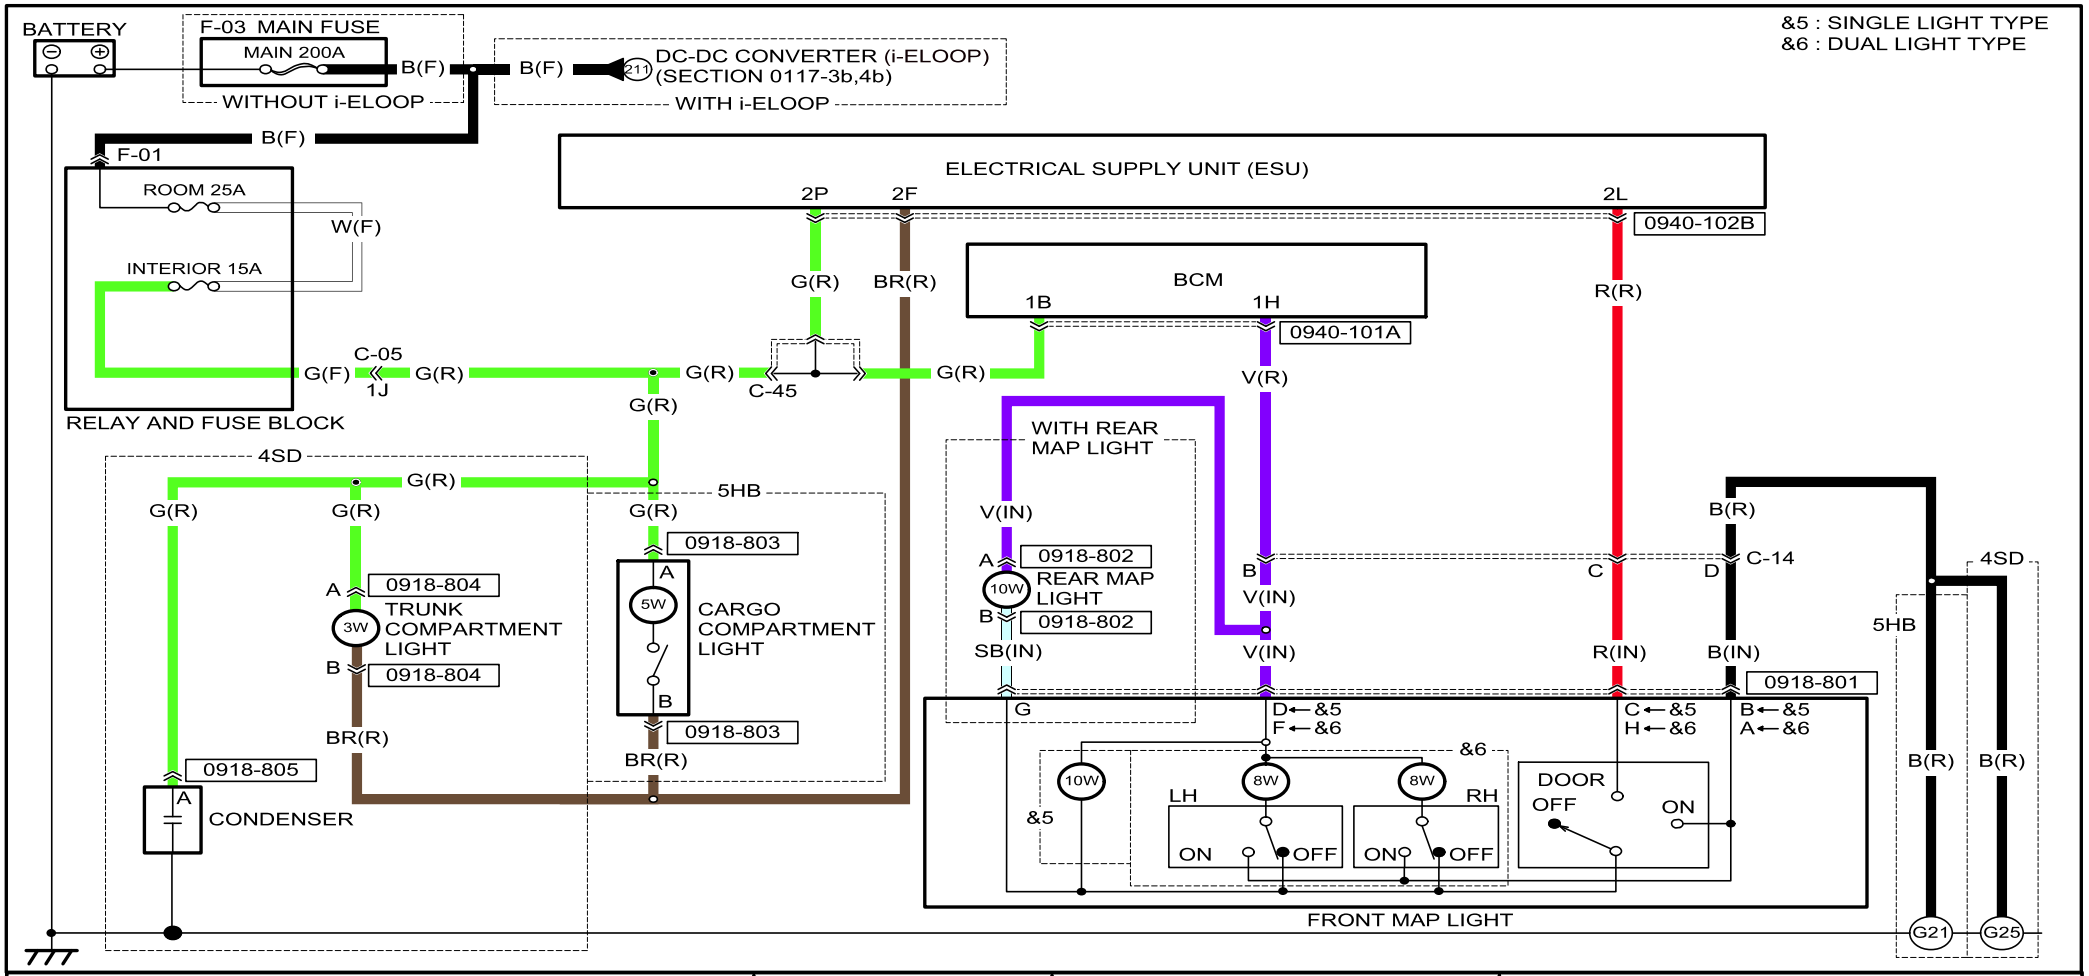
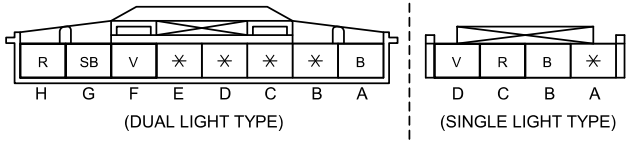


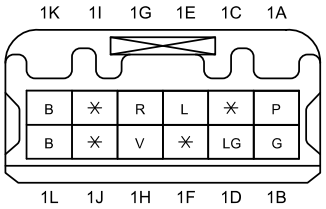

0918-801
FRONT MAP LIGHT



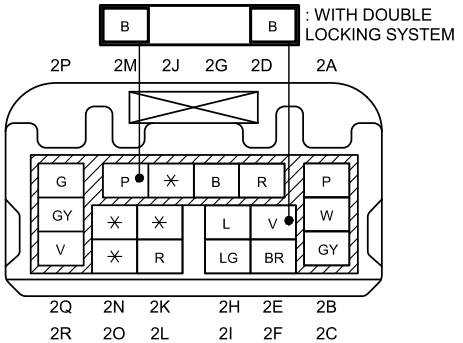

0918-804
TRUNK COMPARTMENT LIGHT



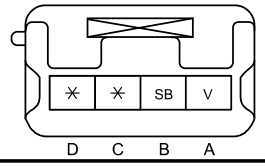

0940-101A
BCM





0940-102B
ELECTRICAL SUPPLY UNIT (ESU)




0918-802
REAR MAP LIGHT



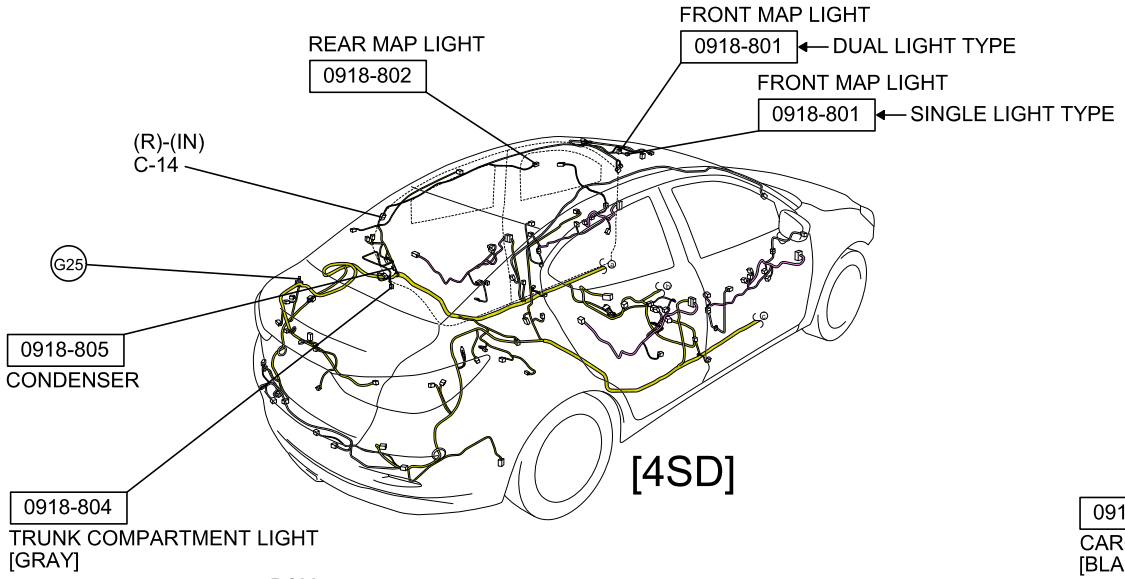

0918-803
CARGO COMPARTMENT LIGHT

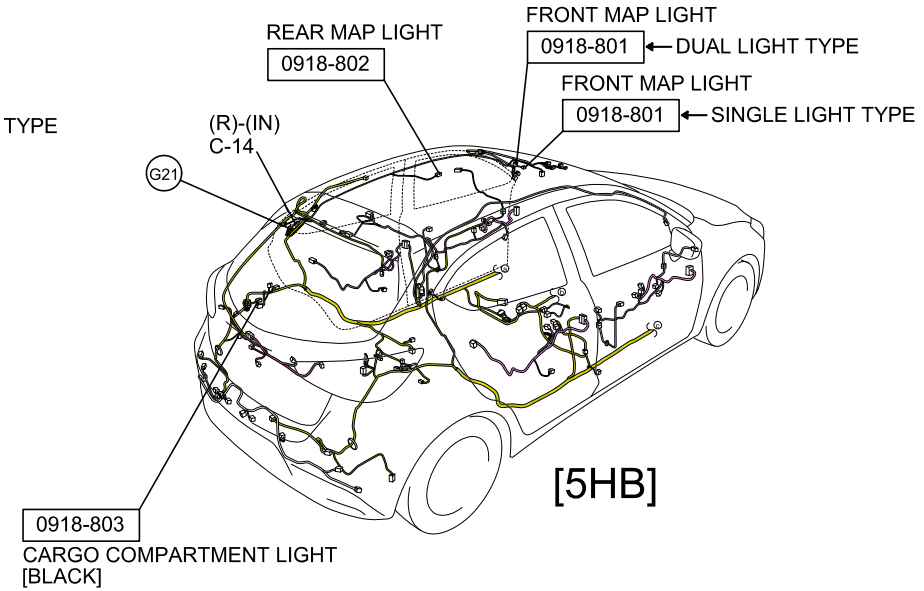


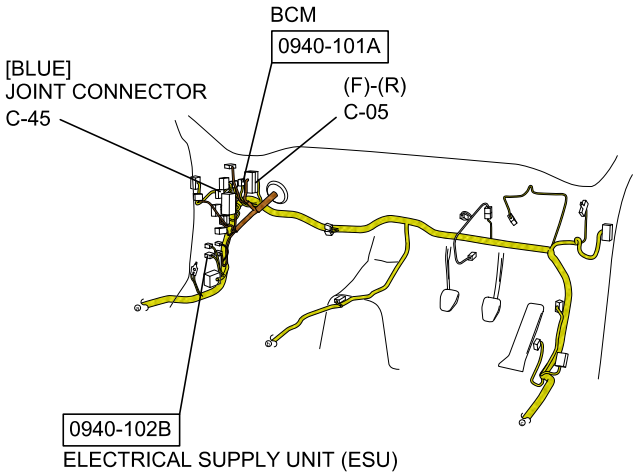

0918-805
CONDENSER



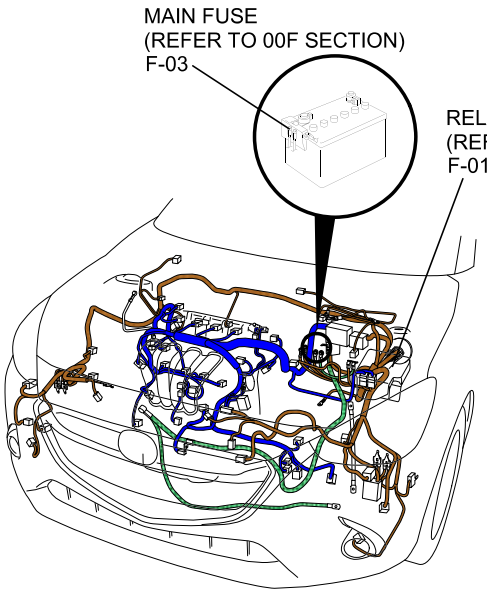

Refer to 00F section for the FUSE BOX, 00C section for the PCM CONNECTOR and COMMON CONNECTOR LIST.



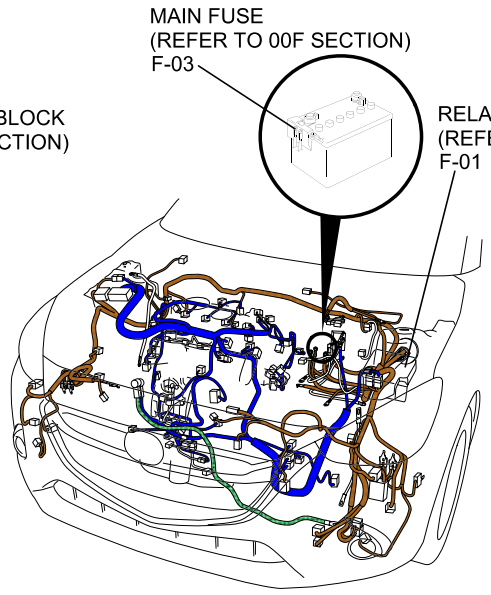




: FRONT HARNESS
: ENGINE HARNESS
ENGINE No.2 HARNESS
: REAR HARNESS
: REAR No.2 HARNESS
: EMISSION HARNESS
: DOOR HARNESS
: INTERIOR LIGHT HARNESS
INTERIOR LIGHT No.2 HARNESS




[SKYACTIV-G 1.3, 1.5]




[SKYACTIV-D 1.5]