

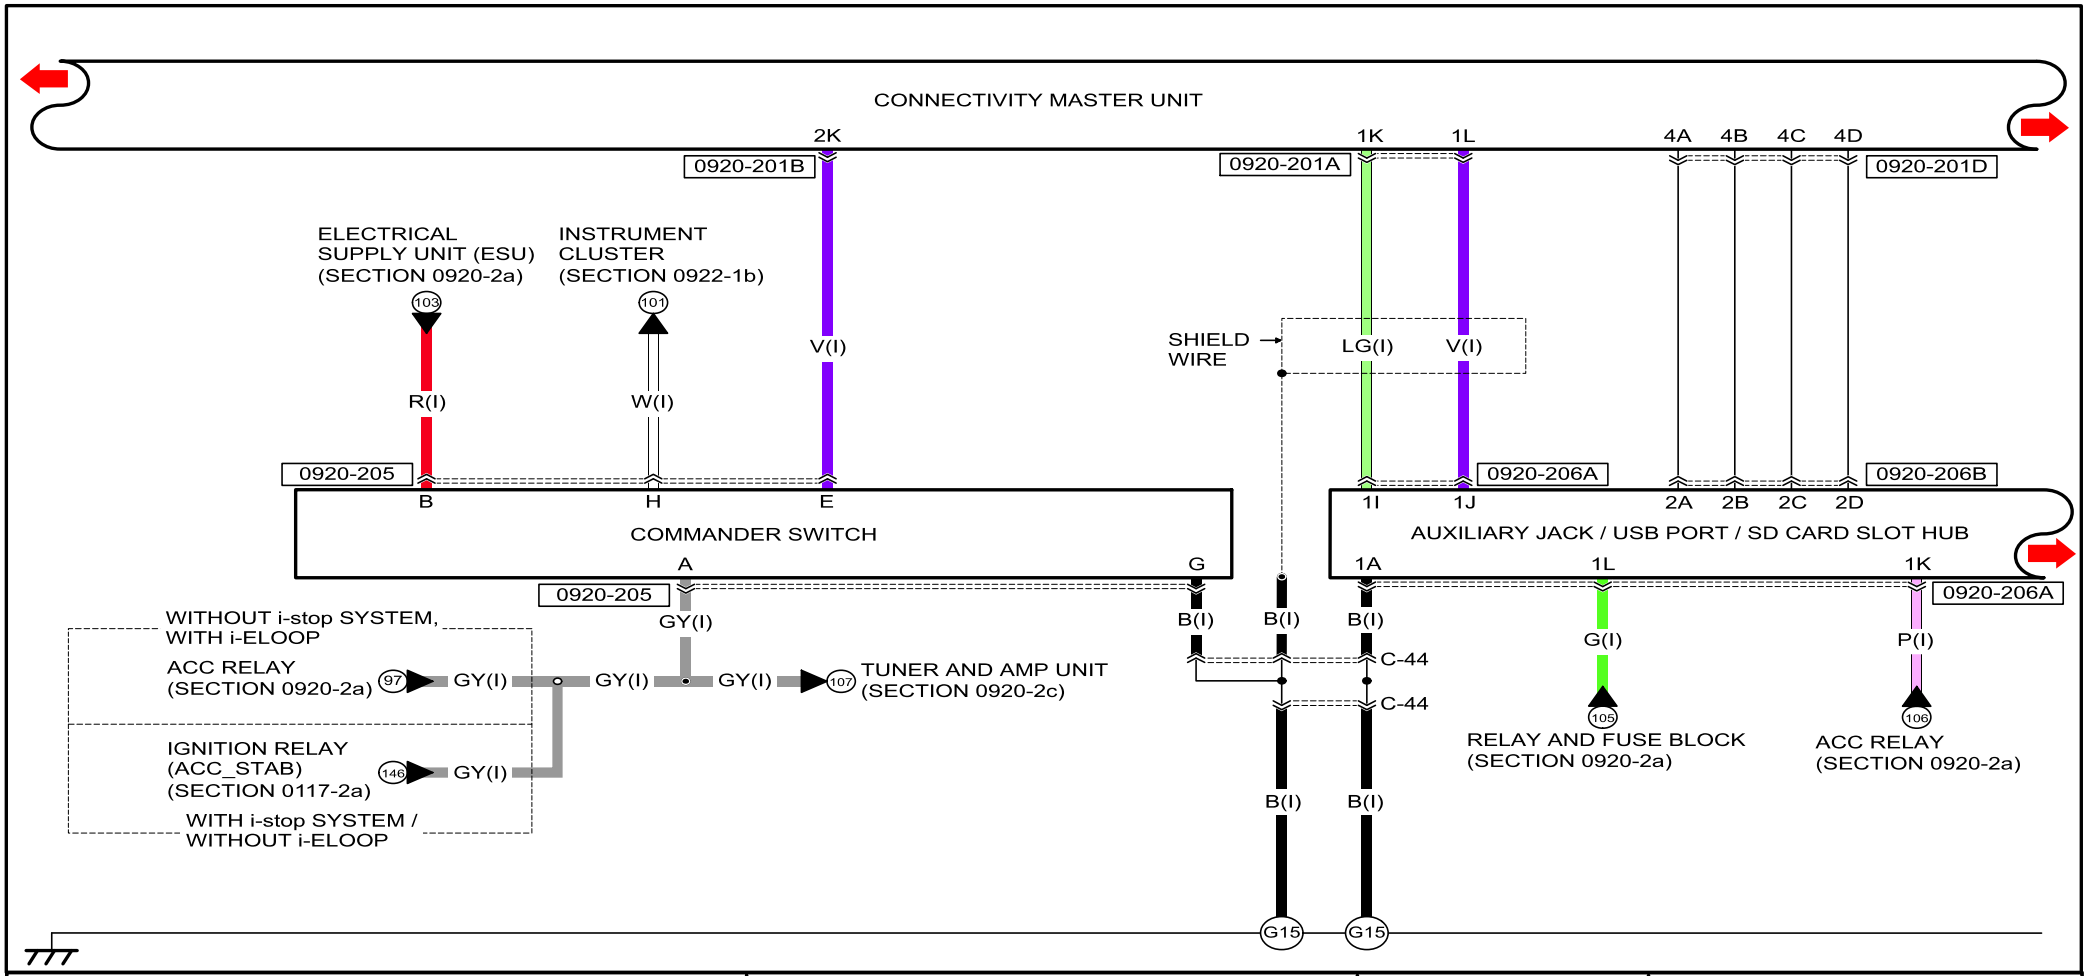



0920-201A
CONNECTIVITY MASTER UNIT

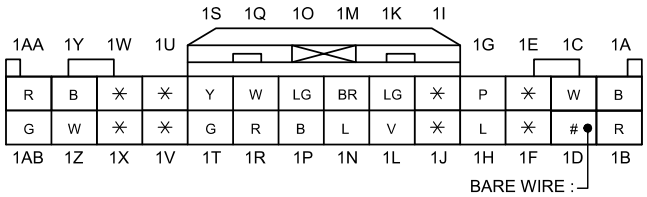


0920-201B
CONNECTIVITY MASTER UNIT

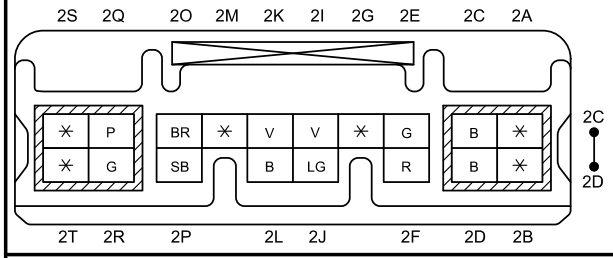


0920-201D
CONNECTIVITY MASTER UNIT




0920-205
COMMANDER SWITCH

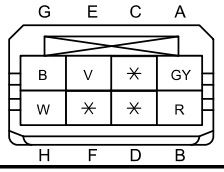


0920-206B
AUXILIARY JACK / USB PORT / SD CARD SLOT HUB



0920-206A
AUXILIARY JACK / USB PORT / SD CARD SLOT HUB

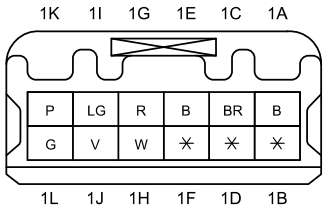

Refer to 00F section for the FUSE BOX, 00C section for the PCM CONNECTOR and COMMON CONNECTOR LIST.

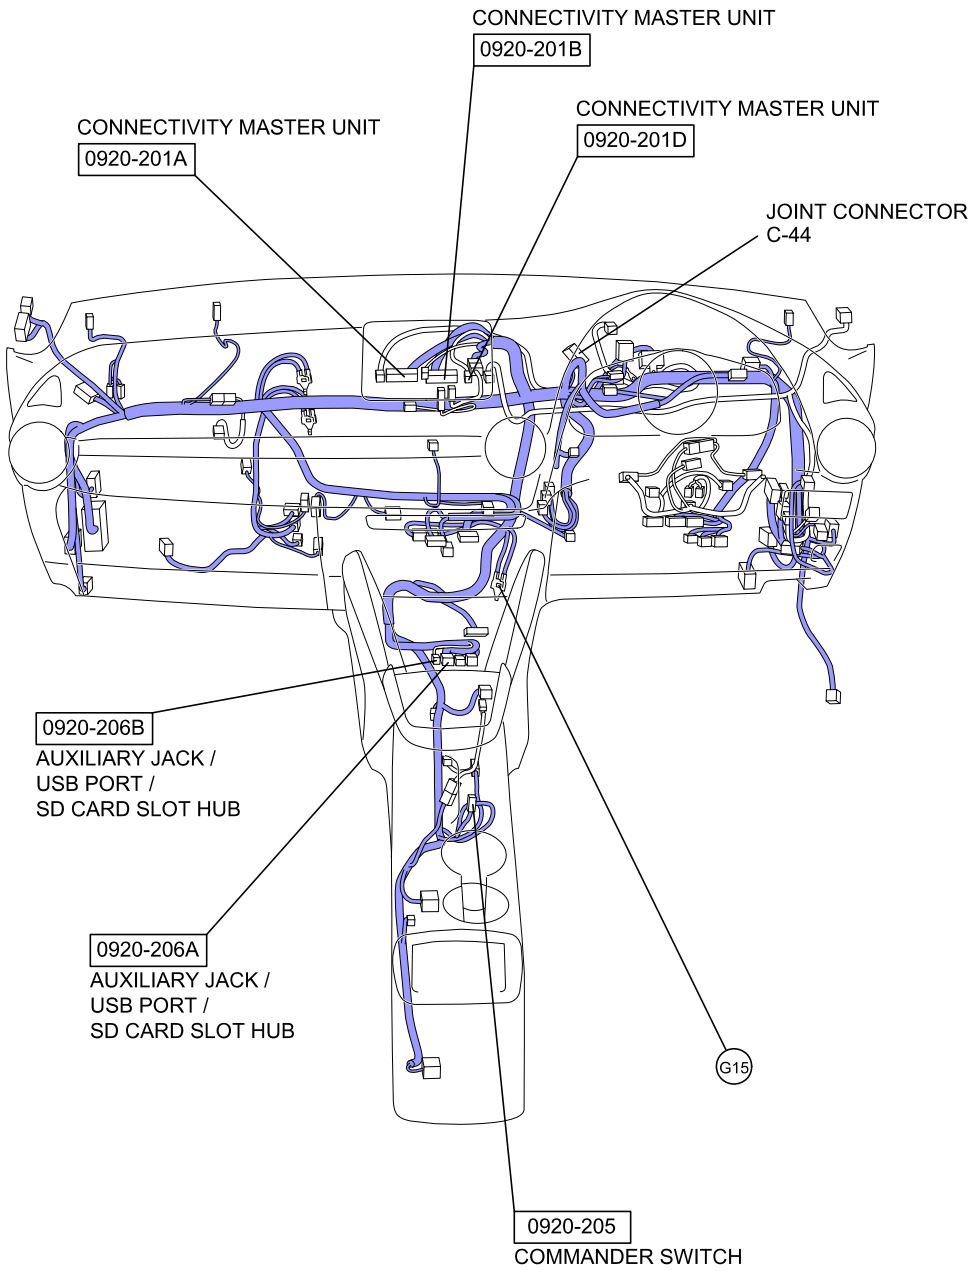
CONNECTIVITY MASTER UNIT
0920-201B
CONNECTIVITY MASTER UNIT
0920-201A
CONNECTIVITY MASTER UNIT
0920-201D
JOINT CONNECTOR
C-44
0920-206B
AUXILIARY JACK /
USB PORT /
SD CARD SLOT HUB
0920-206A
AUXILIARY JACK /
USB PORT /
SD CARD SLOT HUB
G15
0920-205
COMMANDER SWITCH
: INSTRUMENT PANEL HARNESS